

# Cortex™-M3

Revision r2p0

## Technical Reference Manual

**ARM®**

# Cortex-M3

## Technical Reference Manual

Copyright © 2005-2008, 2010 ARM Limited. All rights reserved.

### Release Information

The following changes have been made to this book.

| <b>Change History</b> |              |                        |  |
|-----------------------|--------------|------------------------|--|
| <b>Date</b>           | <b>Issue</b> | <b>Confidentiality</b> | <b>Change</b>                          |
| 15 December 2005      | A            | Confidential           | First Release                          |
| 13 January 2006       | B            | Non-Confidential       | Confidentiality status amended         |
| 10 May 2006           | C            | Non-Confidential       | First Release for r1p0                 |
| 27 September 2006     | D            | Non-Confidential       | First Release for r1p1                 |
| 13 June 2007          | E            | Non-Confidential       | Minor update with no technical changes |
| 11 April 2008         | F            | Confidential           | Limited release for SC300 r0p0         |
| 26 June 2008          | G            | Non-Confidential       | First Release for r2p0                 |
| 26 February 2010      | H            | Non-Confidential       | Second Release for r2p0                |

### Proprietary Notice

Words and logos marked with ® or ™ are registered trademarks or trademarks of ARM Limited in the EU and other countries, except as otherwise stated in this proprietary notice. Other brands and names mentioned herein may be the trademarks of their respective owners.

Neither the whole nor any part of the information contained in, or the product described in, this document may be adapted or reproduced in any material form except with the prior written permission of the copyright holder.

The product described in this document is subject to continuous developments and improvements. All particulars of the product and its use contained in this document are given by ARM Limited in good faith. However, all warranties implied or expressed, including but not limited to implied warranties of merchantability, or fitness for purpose, are excluded.

This document is intended only to assist the reader in the use of the product. ARM Limited shall not be liable for any loss or damage arising from the use of any information in this document, or any error or omission in such information, or any incorrect use of the product.

Where the term ARM is used it means “ARM or any of its subsidiaries as appropriate”.

### Confidentiality Status

This document is Non-Confidential. The right to use, copy and disclose this document may be subject to license restrictions in accordance with the terms of the agreement entered into by ARM and the party that ARM delivered this document to.

Unrestricted Access is an ARM internal classification.

### Product Status

The information in this document is Final (information on a developed product).

### Web Address

<http://www.arm.com>

# Contents

## Cortex-M3 Technical Reference Manual

|                  |  |      |
|------------------|--|------|
|                  | <b>Preface</b>                             |      |
|                  | About this book .....                      | x    |
|                  | Feedback .....                             | xiii |
| <b>Chapter 1</b> | <b>Introduction</b>                        |      |
|                  | 1.1 About the processor .....              | 1-2  |
|                  | 1.2 Features .....                         | 1-3  |
|                  | 1.3 Interfaces .....                       | 1-4  |
|                  | 1.4 Configurable options .....             | 1-5  |
|                  | 1.5 Product documentation .....            | 1-6  |
|                  | 1.6 Product revisions .....                | 1-9  |
| <b>Chapter 2</b> | <b>Functional Description</b>              |      |
|                  | 2.1 About the functions .....              | 2-2  |
|                  | 2.2 Interfaces .....                       | 2-4  |
| <b>Chapter 3</b> | <b>Programmers Model</b>                   |      |
|                  | 3.1 About the programmers model .....      | 3-2  |
|                  | 3.2 Modes of operation and execution ..... | 3-3  |
|                  | 3.3 Instruction set summary .....          | 3-4  |
|                  | 3.4 System address map .....               | 3-11 |
|                  | 3.5 Write buffer .....                     | 3-14 |
|                  | 3.6 Exclusive monitor .....                | 3-15 |
|                  | 3.7 Bit-banding .....                      | 3-16 |
|                  | 3.8 Processor core register summary .....  | 3-18 |
|                  | 3.9 Exceptions .....                       | 3-20 |

|                   |   |      |
|-------------------|---|------|
| <b>Chapter 4</b>  | <b>System Control</b>                                     |      |
|                   | 4.1 About system control .....                            | 4-2  |
|                   | 4.2 Register summary .....                                | 4-3  |
|                   | 4.3 Register descriptions .....                           | 4-5  |
| <b>Chapter 5</b>  | <b>Memory Protection Unit</b>                             |      |
|                   | 5.1 About the MPU .....                                   | 5-2  |
|                   | 5.2 MPU functional description .....                      | 5-3  |
|                   | 5.3 MPU programmers model .....                           | 5-4  |
| <b>Chapter 6</b>  | <b>Nested Vectored Interrupt Controller</b>               |      |
|                   | 6.1 About the NVIC .....                                  | 6-2  |
|                   | 6.2 NVIC functional description .....                     | 6-3  |
|                   | 6.3 NVIC programmers model .....                          | 6-4  |
| <b>Chapter 7</b>  | <b>Debug</b>  |      |
|                   | 7.1 About debug .....                                     | 7-2  |
|                   | 7.2 About the AHB-AP .....                                | 7-6  |
|                   | 7.3 About the Flash Patch and Breakpoint Unit (FPB) ..... | 7-9  |
| <b>Chapter 8</b>  | <b>Data Watchpoint and Trace Unit</b>                     |      |
|                   | 8.1 About the DWT .....                                   | 8-2  |
|                   | 8.2 DWT functional description .....                      | 8-3  |
|                   | 8.3 DWT Programmers Model .....                           | 8-4  |
| <b>Chapter 9</b>  | <b>Instrumentation Trace Macrocell Unit</b>               |      |
|                   | 9.1 About the ITM .....                                   | 9-2  |
|                   | 9.2 ITM functional description .....                      | 9-3  |
|                   | 9.3 ITM programmers model .....                           | 9-4  |
| <b>Chapter 10</b> | <b>Embedded Trace Macrocell</b>                           |      |
|                   | 10.1 About the ETM .....                                  | 10-2 |
|                   | 10.2 ETM functional description .....                     | 10-3 |
|                   | 10.3 ETM Programmers model .....                          | 10-9 |
| <b>Chapter 11</b> | <b>Trace Port Interface Unit</b>                          |      |
|                   | 11.1 About the Cortex-M3 TPIU .....                       | 11-2 |
|                   | 11.2 TPIU functional description .....                    | 11-3 |
|                   | 11.3 TPIU programmers model .....                         | 11-5 |
| <b>Appendix A</b> | <b>Revisions</b>  |      |
|                   | <b>Glossary</b>   |      |

# List of Tables

## Cortex-M3 Technical Reference Manual

|             |   |       |
|-------------|---|-------|
|             | Change History .....                            | ii    |
| Table 3-1   | Cortex-M3 instruction set summary .....         | 3-4   |
| Table 3-2   | Memory regions .....                            | 3-11  |
| Table 4-1   | System control registers .....                  | 4-3   |
| Table 4-2   | ACTLR bit assignments .....                     | 4-5   |
| Table 4-3   | CPUID bit assignments .....                     | 4-6   |
| Table 4-4   | AFSR bit assignments .....                      | 4-6   |
| Table 5-1   | MPU registers .....                             | 5-4   |
| Table 6-1   | NVIC registers .....                            | 6-4   |
| Table 6-2   | ICTR bit assignments .....                      | 6-5   |
| Table 7-1   | Cortex-M3 ROM table identification values ..... | 7-3   |
| Table 7-2   | Cortex-M3 ROM table components .....            | 7-3   |
| Table 7-3   | SCS identification values .....                 | 7-4   |
| Table 7-4   | Debug registers .....                           | 7-5   |
| Table 7-5   | AHB-AP register summary .....                   | 7-6   |
| Table 7-6   | CSW bit assignments .....                       | 7-7   |
| Table 7-7   | FPB register summary .....                      | 7-10  |
| Table 8-1   | DWT register summary .....                      | 8-4   |
| Table 9-1   | ITM register summary .....                      | 9-4   |
| Table 9-2   | ITM_TPR bit assignments .....                   | 9-5   |
| Table 10-1  | Cortex-M3 resources .....                       | 10-4  |
| Table 10-2  | Boolean function encoding for events .....      | 10-5  |
| Table 10-3  | Resource identification encoding .....          | 10-5  |
| Table 10-4  | Input connections .....                         | 10-7  |
| Table 10-5  | Trigger output connections .....                | 10-7  |
| Table 10-6  | ETM registers .....                             | 10-9  |
| Table 10-7  | ETMCR bit assignments .....                     | 10-11 |
| Table 10-8  | ETMCCR bit assignments .....                    | 10-13 |
| Table 10-9  | ETMSCR bit assignments .....                    | 10-14 |
| Table 10-10 | ETMTECR1 bit assignments .....                  | 10-15 |

|             |   |       |
|-------------|---|-------|
| Table 10-11 | ETMIDR bit assignments .....                  | 10-16 |
| Table 10-12 | ETMCCER bit assignments .....                 | 10-17 |
| Table 10-13 | ETMTESSEICR bit assignments .....             | 10-18 |
| Table 10-14 | ETMPDSR bit assignments .....                 | 10-19 |
| Table 10-15 | ITMISCIN bit assignments .....                | 10-19 |
| Table 10-16 | ITTRIGOUT bit assignments .....               | 10-20 |
| Table 10-17 | ETM_ITATBCTR2 bit assignments .....           | 10-21 |
| Table 10-18 | ETM_ITATBCTR0 bit assignments .....           | 10-21 |
| Table 11-1  | TPIU registers .....                          | 11-5  |
| Table 11-2  | TPIU_ACPR bit assignments .....               | 11-6  |
| Table 11-3  | TPIU_FFSR bit assignments .....               | 11-7  |
| Table 11-4  | TPIU_FFCR bit assignments .....               | 11-7  |
| Table 11-5  | TRIGGER bit assignments .....                 | 11-8  |
| Table 11-6  | Integration FIFO 0 bit assignments .....      | 11-9  |
| Table 11-7  | ITATBCTR2 bit assignments .....               | 11-10 |
| Table 11-8  | Integration FIFO 1 Data bit assignments ..... | 11-10 |
| Table 11-9  | ITATBCTR0 bit assignments .....               | 11-11 |
| Table 11-10 | TPIU_ITCTRL bit assignments .....             | 11-12 |
| Table 11-11 | TPIU_DEVID bit assignments .....              | 11-12 |
| Table A-1   | Differences between issue E and issue F ..... | A-1   |
| Table A-2   | Differences between issue F and issue G ..... | A-4   |
| Table A-3   | Differences between issue G and issue H ..... | A-5   |

# List of Figures

## Cortex-M3 Technical Reference Manual

|              |   |       |
|--------------|---|-------|
| Figure 2-1   | Cortex-M3 block diagram .....                 | 2-2   |
| Figure 3-1   | System address map .....                      | 3-11  |
| Figure 3-2   | Bit-band mapping .....                        | 3-17  |
| Figure 3-3   | Processor register set .....                  | 3-18  |
| Figure 4-1   | ACTLR bit assignments .....                   | 4-5   |
| Figure 4-2   | CPUID bit assignments .....                   | 4-6   |
| Figure 4-3   | AFSR bit assignments .....                    | 4-6   |
| Figure 6-1   | ICTR bit assignments .....                    | 6-4   |
| Figure 7-1   | CoreSight discovery .....                     | 7-2   |
| Figure 7-2   | CSW bit assignments .....                     | 7-7   |
| Figure 9-1   | ITM_TPR bit assignments .....                 | 9-5   |
| Figure 10-1  | ETM block diagram .....                       | 10-3  |
| Figure 10-2  | ETMCR bit assignments .....                   | 10-11 |
| Figure 10-3  | ETMCCR bit assignments .....                  | 10-13 |
| Figure 10-4  | ETMSCR bit assignments .....                  | 10-14 |
| Figure 10-5  | ETMTECR1 bit assignments .....                | 10-15 |
| Figure 10-6  | ETMIDR bit assignments .....                  | 10-16 |
| Figure 10-7  | ETMCCER bit assignments .....                 | 10-17 |
| Figure 10-8  | ETMTESSEICR bit assignments .....             | 10-18 |
| Figure 10-9  | ETMPDSR bit assignments .....                 | 10-19 |
| Figure 10-10 | ITMISCIN bit assignments .....                | 10-19 |
| Figure 10-11 | ITTRIGOUT bit assignments .....               | 10-20 |
| Figure 10-12 | ETM_ITATBCTR2 bit assignments .....           | 10-20 |
| Figure 10-13 | ETM_ITATBCTR0 bit assignments .....           | 10-21 |
| Figure 11-1  | TPIU block diagram .....                      | 11-3  |
| Figure 11-2  | TPIU_ACPR bit assignments .....               | 11-6  |
| Figure 11-3  | TPIU_FFSR bit assignments .....               | 11-6  |
| Figure 11-4  | TPIU_FFCR bit assignments .....               | 11-7  |
| Figure 11-5  | TRIGGER bit assignments .....                 | 11-8  |
| Figure 11-6  | Integration FIFO 0 Data bit assignments ..... | 11-9  |

|              |   |       |
|--------------|---|-------|
| Figure 11-7  | ITATBCTR2 bit assignments .....               | 11-9  |
| Figure 11-8  | Integration FIFO 1 Data bit assignments ..... | 11-10 |
| Figure 11-9  | ITATBCTR0 bit assignments .....               | 11-11 |
| Figure 11-10 | TPIU_ITCTRL bit assignments .....             | 11-11 |
| Figure 11-11 | TPIU_DEVID bit assignments .....              | 11-12 |



# Preface

This preface introduces the *Cortex-M3 Technical Reference Manual* (TRM). It contains the following sections:

- *About this book* on page x
- *Feedback* on page xiii.

## About this book

This book is for the Cortex-M3 processor.

## Product revision status

The *mpn* identifier indicates the revision status of the product described in this manual, where:

- rn** Identifies the major revision of the product.
- pn** Identifies the minor revision or modification status of the product.

## Intended audience

This manual is written to help system designers, system integrators, verification engineers, and software programmers who are implementing a *System-on-Chip* (SoC) device based on the Cortex-M3 processor.

## Using this book

This book is organized into the following chapters:

### Chapter 1 *Introduction*

Read this for a description of the components of the processor, and of the product documentation.

### Chapter 2 *Functional Description*

Read this for a description of the functionality of the processor.

### Chapter 3 *Programmers Model*

Read this for a description of the processor register set, modes of operation, and other information for programming the processor.

### Chapter 4 *System Control*

Read this for a description of the registers and programmers model for system control.

### Chapter 5 *Memory Protection Unit*

Read this for a description of the *Memory Protection Unit* (MPU).

### Chapter 6 *Nested Vectored Interrupt Controller*

Read this for a description of the interrupt processing and control.

### Chapter 7 *Debug*

Read this for information about debugging and testing the processor core.

### Chapter 8 *Data Watchpoint and Trace Unit*

Read this for a description of the *Data Watchpoint and Trace* (DWT) unit.

### Chapter 9 *Instrumentation Trace Macrocell Unit*

Read this for a description of the *Instrumentation Trace Macrocell* (ITM) unit.

### Chapter 10 *Embedded Trace Macrocell*

Read this for a description of the processor *Embedded Trace Macrocell* (ETM).

### Chapter 11 *Trace Port Interface Unit*

Read this for a description of the *Trace Port Interface Unit* (TPIU).

**Appendix A Revisions**

Read this for a description of the technical changes between released issues of this book.

**Glossary** Read this for definitions of terms used in this book.

**Conventions**

Conventions that this book can use are described in:

- *Typographical*

**Typographical**

The typographical conventions are:

|                         |   |
|-------------------------|---|
| <i>italic</i>           | Highlights important notes, introduces special terminology, denotes internal cross-references, and citations.                           |
| <b>bold</b>             | Highlights interface elements, such as menu names. Denotes signal names. Also used for terms in descriptive lists, where appropriate.   |
| monospace               | Denotes text that you can enter at the keyboard, such as commands, file and program names, and source code.                             |
| <u>monospace</u>        | Denotes a permitted abbreviation for a command or option. You can enter the underlined text instead of the full command or option name. |
| <i>monospace italic</i> | Denotes arguments to monospace text where the argument is to be replaced by a specific value.   |
| <b>monospace</b>        | Denotes language keywords when used outside example code.   |
| < <b>and</b> >          | Enclose replaceable terms for assembler syntax where they appear in code or code fragments. For example:<br>ADD Rd, Rn, <op2>           |

**Additional reading**

This section lists publications by ARM and by third parties.

See Infocenter, <http://infocenter.arm.com>, for access to ARM documentation.

**ARM publications**

This book contains information that is specific to this product. See the following documents for other relevant information:

- *ARMv7-M Architecture Reference Manual* (ARM DDI 0403)
- *ARM Cortex-M3 Integration and Implementation Manual* (ARM DII 0240)
- *ARM AMBA® 3 AHB-Lite Protocol (v1.0)* (ARM IHI 0033)
- *ARM AMBA™ 3 APB Protocol Specification* (ARM IHI 0024)
- *AMBA 3 ATB Protocol Specification* (ARM IHI 0032)
- *ARM CoreSight™ Components Technical Reference Manual* (ARM DDI 0314)
- *ARM Debug Interface v5 Architecture Specification* (ARM IHI 0031)
- *ARM Embedded Trace Macrocell Architecture Specification* (ARM IHI 0014).

## Other publications

This section lists relevant documents published by third parties:

- IEEE Standard *Test Access Port and Boundary-Scan Architecture* 1149.1-2001 (JTAG).

## Feedback

ARM welcomes feedback on this product and its documentation.

### Feedback on this product

If you have any comments or suggestions about this product, contact your supplier and give:

- The product name.
- The product revision or version.
- An explanation with as much information as you can provide. Include symptoms and diagnostic procedures if appropriate.

### Feedback on this manual

If you have comments on content then send e-mail to [errata@arm.com](mailto:errata@arm.com). Give:

- the title
- the number, doc\_number-draft\_indicator
- the page number(s) to which your comments refer
- a concise explanation of your comments.

ARM also welcomes general suggestions for additions and improvements.

# Chapter 1

## Introduction

This chapter introduces the processor and instruction set. It contains the following sections:

- *About the processor* on page 1-2
- *Features* on page 1-3
- *Interfaces* on page 1-4
- *Configurable options* on page 1-5
- *Product documentation* on page 1-6
- *Product revisions* on page 1-9.

## 1.1 About the processor

The Cortex-M3 is a low-power processor that features low gate count, low interrupt latency, and low-cost debug. It is intended for deeply embedded applications that require FIQ interrupt response features.

## 1.2 Features

The Cortex-M3 processor incorporates:

- a processor core
- a *Nested Vectored Interrupt Controller* (NVIC) closely integrated with the processor core to achieve low latency interrupt processing
- multiple high-performance bus interfaces
- a low-cost debug solution with the optional ability to:
  - implement breakpoints and code patches
  - implement watchpoints, tracing, and system profiling
  - support printf style debugging
  - bridge to a *Trace Port Analyzer* (TPA).
- an optional *Memory Protection Unit* (MPU)
- an optional ETM that enables reconstruction of program execution.



## 1.3 Interfaces

The processor has the following external interfaces:

- multiple memory and device bus interfaces
- ETM interface
- trace port interface
- debug port interface
- if the implementation includes an ETM, a *Cross Trigger Interface (CTI)*.

## 1.4 Configurable options

You can configure your Cortex-M3 implementation to include the following optional components:

- MPU. See Chapter 5 *Memory Protection Unit*.
- *Flash Patch and Breakpoint Unit (FPB)*. See Chapter 7 *Debug*.
- DWT. See Chapter 8 *Data Watchpoint and Trace Unit*.
- ITM. See Chapter 9 *Instrumentation Trace Macrocell Unit*.
- ETM. See Chapter 10 *Embedded Trace Macrocell*.
- *Advanced High-performance Bus Access Port (AHB-AP)*. See Chapter 7 *Debug*.
- *AHB Trace Macrocell (HTM) interface*. See *AHB Trace Macrocell interface* on page 2-5.
- TPIU. See Chapter 11 *Trace Port Interface Unit*.
- *Wake-up Interrupt Controller (WIC)*. See *Low power modes* on page 6-3.
- Debug Port. See *Debug port AHB-AP interface* on page 2-5.

---

**Note**

You can only configure trace functionality in the following combinations:

- no trace functionality
- ITM and DWT
- ITM, DWT, and ETM
- ITM, DWT, ETM, and HTM.

You can configure the debug features provided in the DWT independently.

---

## 1.5 Product documentation

This section describes the processor books, how they relate to the design flow, and the relevant architectural standards and protocols.

See *Additional reading* on page xi for more information about the books described in this section.

### 1.5.1 Documentation

The Cortex-M3 documentation is as follows:

#### Technical Reference Manual

The *Technical Reference Manual* (TRM) describes the functionality and the effects of functional options on the behavior of the Cortex-M3. It is required at all stages of the design flow. Some behavior described in the TRM might not be relevant because of the way that the Cortex-M3 is implemented and integrated. If you are programming the Cortex-M3 then contact:

- the implementor to determine:
  - the build configuration of the implementation
  - what integration, if any, was performed before implementing the processor.
- the integrator to determine the pin configuration of the SoC that you are using.

#### Integration and Implementation Manual

The *Integration and Implementation Manual* (IIM) describes:

- The available build configuration options and related issues in selecting them.
- How to configure the *Register Transfer Level* (RTL) with the build configuration options
- How to integrate the processor into a SoC. This includes a description of the integration kit and describes the pins that the integrator must tie off to configure the macrocell for the required integration.
- How to implement the processor into your design. This includes floorplanning guidelines, Design for Test (DFT) information, and how to perform netlist dynamic verification on the processor.
- The processes to sign off the integration and implementation of the design.

The ARM product deliverables include reference scripts and information about using them to implement your design.

Reference methodology documentation from your EDA tools vendor complements the IIM.

The IIM is a confidential book that is only available to licensees.

#### Cortex-M3 User Guide Reference Material

This document provides reference material that ARM partners can configure and include in a User Guide for an ARM Cortex-M3 processor. Typically:

- each chapter in this reference material might correspond to a section in the User Guide
- each top-level section in this reference material might correspond to a chapter in the User Guide.

However, ARM partners can organize this material in any way, subject to the conditions of the licence agreement under which ARM supplied the material.

## 1.5.2 Design Flow

The processor is delivered as synthesizable RTL. Before it can be used in a product, it must go through the following process:

### Implementation

The implementor configures and synthesizes the RTL to produce a hard macrocell. This might include integrating RAMs into the design.

**Integration** The integrator connects the implemented design into a SoC. This includes connecting it to a memory system and peripherals.

### Programming

The system programmer develops the software required to configure and initialize the processor, and tests the required application software.

Each stage in the process can be performed by a different party. Implementation and integration choices affect the behavior and features of the processor.

For MCUs, often a single design team integrates the processor before synthesizing the complete design. Alternatively, the team can synthesise the processor on its own or partially integrated, to produce a macrocell that is then integrated, possibly by a separate team.

The operation of the final device depends on:

### Build configuration

The implementor chooses the options that affect how the RTL source files are pre-processed. These options usually include or exclude logic that affects one or more of the area, maximum frequency, and features of the resulting macrocell.

### Configuration inputs

The integrator configures some features of the processor by tying inputs to specific values. These configurations affect the start-up behavior before any software configuration is made. They can also limit the options available to the software.

### Software configuration

The programmer configures the processor by programming particular values into registers. This affects the behavior of the processor.

### ———— Note —————

This manual refers to implementation-defined features that are applicable to build configuration options. Reference to a feature that is included means that the appropriate build and pin configuration options are selected. Reference to an enabled feature means one that has also been configured by software.

---

## 1.5.3 Architecture and protocol information

The processor complies with, or implements, the specifications described in:

- *ARM architecture* on page 1-8
- *Bus architecture* on page 1-8
- *Debug* on page 1-8

- *Embedded Trace Macrocell.*

This book complements architecture reference manuals, architecture specifications, protocol specifications, and relevant external standards. It does not duplicate information from these sources.

### **ARM architecture**

The processor implements the ARMv7-M architecture profile. See the *ARMv7-M Architecture Reference Manual*.

For more information about architectural compliance, see Architecture and protocol information on page 1-9.

### **Bus architecture**

The processor provides three primary bus interfaces implementing a variant of the AMBA 3 AHB-Lite protocol. The processor implements an interface for CoreSight and other debug components using the AMBA 3 APB protocol. See

- the *ARM AMBA 3 AHB-Lite Protocol (v1.0)*
- the *ARM AMBA 3 APB Protocol Specification*.

### **Debug**

The debug features of the processor implement the ARM debug interface architecture. See the *ARM Debug Interface v5 Architecture Specification*. The processor also implements debug features defined by the ARMv7-M. See the *ARMv7-M Architecture Reference Manual*.

### **Embedded Trace Macrocell**

The trace features of the processor implement version 3.4 of the ARM Embedded Trace Macrocell architecture. See the *ARM Embedded Trace Macrocell Architecture Specification*.

## 1.6 Product revisions

This section summarizes the differences in functionality between the different releases of this processor:

- *Differences in functionality between r0p0 and r1p0*
- *Differences in functionality between r1p0 and r1p1*
- *Differences in functionality between r1p1 and r2p0 on page 1-10.*

### 1.6.1 Differences in functionality between r0p0 and r1p0

In summary, the differences in functionality include:

- Addition of configurable data value comparison to the DWT module.
- Addition of a **MATCHED** bit to **DWT\_FUNCTION**.
- Addition of configurable **ETMFIFOFULL** stalling functionality to the processor and the ETM.
- Addition of SWV Mode to the ITM.
- CPUID Base Register **VARIANT** field changed to indicate Rev1.
- Cortex-M3 Rev0 Bit-band accesses in BE8 mode required access sizes to be byte. Cortex-M3 Rev1 has been changed so that BE8 bit-band accesses function with any access size.
- Addition of a configuration bit called **STKALIGN** to ensure that all exceptions have eight-byte stack alignment.
- Addition of the Auxiliary Fault Status Register at address **0xE000ED3C**. To set this register, a 32-bit input bus called **AUXFAULT** has been added.
- Addition of HTM support.
- ICode and DCode cacheable and bufferable **HPROT** values permanently tied to write-through.
- Addition of the SWJ-DP. This is the standard CoreSight™ debug port that combines JTAG-DP and SW-DP.
- Addition of **DWT\_PCSR** Register at address **0xE000101C**.
- Errata fixes to the r0p0 release.

### 1.6.2 Differences in functionality between r1p0 and r1p1

In summary, the differences in functionality include:

- Data value matching for watchpoint generation has been made implementation time configurable.
- Architectural clock gating in the ETM is configurable at implementation.
- **DAPCLKEN** was required to be a static signal in r0p0 and r1p0. This requirement has been removed for r1p1.
- **SLEEPING** signal now suppressed until current outstanding instruction fetch has completed.
- Errata fixes to the r1p0 release.

### 1.6.3 Differences in functionality between r1p1 and r2p0

In summary, the differences in functionality include:

- Implementation time options have been added to select between different levels of debug and trace support. This has replaced the previous TIEOFF\_FPEN and TIEOFF\_TRCENA options.
- New implementation option to enable the resetting of all registers within the processor.
- Architectural clock gating inclusion is now controlled using one implementation option.
- **DBGRESTART** input and **DBGRESTARTED** output have been added for use in debugging multi-core systems. See the *ARMv7-M Architecture Reference Manual* for more information.
- **SLEEPHOLDREQn** input and **SLEEPHOLDACKn** have been added to enable the extension of SLEEPING.
- The APB interface has been upgraded from v2.0 to v3.0.
- A new output signal called **INTERNALSTATE** has been added that enables observation of some of the internal state of the core if the OBSERVATION implementation option is used.
- Added support for fault-robust implementations.
- An Auxiliary Control Register has been added with new functionality disable bits to:
  - stop interruption of load/store multiples, divides and multiplies
  - stop IT folding
  - disable the write buffers in Cortex-M3 for default memory map accesses.
- The STKALIGN bit reset value in the Configuration and Control Register at address 0xE000ED14 has been inverted. The reset value is now 1, which means that the stack frame is 8-byte aligned by default.
- Addition of a Wake-up Interrupt Controller to minimize logic in the always clocked domain during sleep.
- Addition of **FIXHMASTERTYPE** pin to prevent debugger marking AHB transactions as core data side if required.
- Errata fixes to the r1p1 release.

# Chapter 2

## Functional Description


This chapter introduces the processor and its external interfaces. It contains the following sections:

- *About the functions* on page 2-2
- *Interfaces* on page 2-4.



## 2.1 About the functions

Figure 2-1 shows the structure of the Cortex-M3 processor.

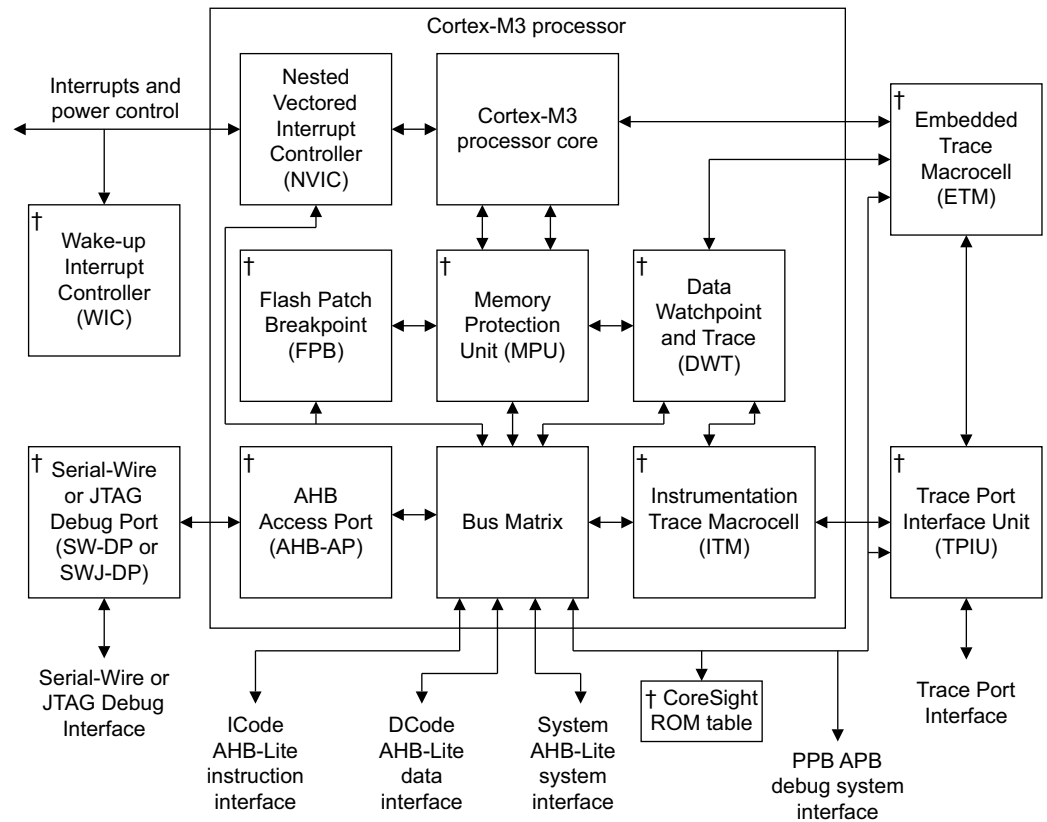

**Figure 2-1 Cortex-M3 block diagram**

The Cortex-M3 processor features:

- A low gate count processor core, with low latency interrupt processing that has:
  - A subset of the Thumb instruction set, defined in the *ARMv7-M Architecture Reference Manual*.
  - Banked *Stack Pointer* (SP).
  - Hardware divide instructions, SDIV and UDIV.
  - Handler and Thread modes.
  - Thumb and Debug states.
  - Support for interruptible-continued instructions LDM, STM, PUSH, and POP for low interrupt latency.
  - Automatic processor state saving and restoration for low latency *Interrupt Service Routine* (ISR) entry and exit.
  - Support for ARMv6 big-endian byte-invariant or little-endian accesses.
  - Support for ARMv6 unaligned accesses.

- *Nested Vectored Interrupt Controller (NVIC)* closely integrated with the processor core to achieve low latency interrupt processing. Features include:
  - External interrupts, configurable from 1 to 240.
  - Bits of priority, configurable from 3 to 8.
  - Dynamic reprioritization of interrupts.
  - Priority grouping. This enables selection of preempting interrupt levels and non preempting interrupt levels.
  - Support for tail-chaining and late arrival of interrupts. This enables back-to-back interrupt processing without the overhead of state saving and restoration between interrupts.
  - Processor state automatically saved on interrupt entry, and restored on interrupt exit, with no instruction overhead.
  - Optional *Wake-up Interrupt Controller (WIC)*, providing ultra-low power sleep mode support.
- *Memory Protection Unit (MPU)*. An optional MPU for memory protection, including:
  - Eight memory regions.
  - *Sub Region Disable (SRD)*, enabling efficient use of memory regions.
  - The ability to enable a background region that implements the default memory map attributes.
- Bus interfaces:
  - Three *Advanced High-performance Bus-Lite (AHB-Lite)* interfaces: ICode, DCode, and System bus interfaces.
  - *Private Peripheral Bus (PPB)* based on *Advanced Peripheral Bus (APB)* interface.
  - Bit-band support that includes atomic bit-band write and read operations.
  - Memory access alignment.
  - Write buffer for buffering of write data.
  - Exclusive access transfers for multiprocessor systems.
- Low-cost debug solution that features:
  - Debug access to all memory and registers in the system, including access to memory mapped devices, access to internal core registers when the core is halted, and access to debug control registers even while **SYSRESETn** is asserted.
  - *Serial Wire Debug Port (SW-DP)* or *Serial Wire JTAG Debug Port (SWJ-DP)* debug access, or both.
  - Optional *Flash Patch and Breakpoint (FPB)* unit for implementing breakpoints and code patches.
  - Optional *Data Watchpoint and Trace (DWT)* unit for implementing watchpoints, data tracing, and system profiling.
  - Optional *Instrumentation Trace Macrocell (ITM)* for support of printf style debugging.
  - Optional *Trace Port Interface Unit (TPIU)* for bridging to a *Trace Port Analyzer (TPA)*, including *Single Wire Output (SWO)* mode.
  - Optional *Embedded Trace Macrocell (ETM)* for instruction trace.

## 2.2 Interfaces

The processor contains the following external interfaces:

- bus interfaces
- *ETM interface* on page 2-5
- *AHB Trace Macrocell interface* on page 2-5
- *Debug port AHB-AP interface* on page 2-5.

### 2.2.1 Bus interfaces

The processor contains four external *Advanced High-performance Bus* (AHB)-Lite bus interfaces:

#### ICode memory interface

Instruction fetches from Code memory space,  $0x00000000$  to  $0x1FFFFFFF$ , are performed over this 32-bit AHB-Lite bus.

The Debugger cannot access this interface. All fetches are word-wide. The number of instructions fetched per word depends on the code running and the alignment of the code in memory.

#### DCode memory interface

Data and debug accesses to Code memory space,  $0x00000000$  to  $0x1FFFFFFF$ , are performed over this 32-bit AHB-Lite bus. Core data accesses have a higher priority than debug accesses on this bus. This means that debug accesses are waited until core accesses have completed when there are simultaneous core and debug access to this bus.

Control logic in this interface converts unaligned data and debug accesses into two or three aligned accesses, depending on the size and alignment of the unaligned access. This stalls any subsequent data or debug access until the unaligned access has completed.

———— **Note** ————

ARM strongly recommends that any external arbitration between the ICode and DCode AHB bus interfaces ensures that DCode has a higher priority than ICode.

#### System interface

Instruction fetches, and data and debug accesses, to address ranges  $0x20000000$  to  $0xDFFFFFFF$  and  $0xE0100000$  to  $0xFFFFFFFF$  are performed over this 32-bit AHB-Lite bus.

For simultaneous accesses to this bus, the arbitration order in decreasing priority is:

- data accesses
- instruction and vector fetches
- debug.

The system bus interface contains control logic to handle unaligned accesses, FPB remapped accesses, bit-band accesses, and pipelined instruction fetches.

#### Private Peripheral Bus (PPB)

Data and debug accesses to external PPB space,  $0xE0040000$  to  $0xE00FFFFF$ , are performed over this 32-bit *Advanced Peripheral Bus* (APB) bus. The *Trace Port Interface Unit* (TPIU) and vendor specific peripherals are on this bus.

Core data accesses have higher priority than debug accesses, so debug accesses are waited until core accesses have completed when there are simultaneous core and debug access to this bus. Only the address bits necessary to decode the External PPB space are supported on this interface.

### 2.2.2 ETM interface

The ETM interface enables simple connection of an ETM to the processor. It provides a channel for instruction trace to the ETM. See the *ARM Embedded Trace Macrocell Architecture Specification*.

### 2.2.3 AHB Trace Macrocell interface

The *AHB Trace Macrocell* (HTM) interface enables a simple connection of the AHB trace macrocell to the processor. It provides a channel for the data trace to the HTM.

Your implementation must include this interface to use the HTM interface. You must set TRCENA to 1 in the Debug Exception and Monitor Control Register (DEMCR) before you enable the HTM to enable the HTM port to supply trace data. See the *ARMv7-M Architecture Reference Manual*.

### 2.2.4 Debug port AHB-AP interface

The processor contains an *Advanced High-performance Bus Access Port* (AHB-AP) interface for debug accesses. An external *Debug Port* (DP) component accesses this interface. The Cortex-M3 system supports three possible DP implementations:

- The *Serial Wire JTAG Debug Port* (SWJ-DP). The SWJ-DP is a standard CoreSight debug port that combines JTAG-DP and *Serial Wire Debug Port* (SW-DP).
- The SW-DP. This provides a two-pin interface to the AHB-AP port.
- No DP present. If no debug functionality is present within the processor, a DP is not required.

The two DP implementations provide different mechanisms for debug access to the processor. Your implementation must contain only one of these components.

———— **Note** ————

Your implementation might contain an alternative implementor-specific DP instead of SW-DP or SWJ-DP. See your implementor for details.

For more detailed information on the DP components, see the *CoreSight Components Technical Reference manual*.

For more information on the AHB-AP, see Chapter 7 *Debug*.

The DP and AP together are referred to as the *Debug Access Port* (DAP).

For more detailed information on the debug interface, see the *ARM Debug Interface v5 Architecture Specification*.

# Chapter 3

## Programmers Model

This chapter describes the processor programmers model. It contains the following sections:

- *About the programmers model* on page 3-2
- *Modes of operation and execution* on page 3-3
- *Instruction set summary* on page 3-4
- *System address map* on page 3-11
- *Write buffer* on page 3-14
- *Bit-banding* on page 3-16
- *Processor core register summary* on page 3-18
- *Exceptions* on page 3-20.

### 3.1 About the programmers model

The *ARMv7-M Architecture Reference Manual* provides a complete description of the programmers model. This chapter gives an overview of the Cortex-M3 processor programmers model that describes the implementation-defined options. It also contains the ARMv7-M Thumb instructions it uses and their cycle counts for the processor. In addition:

- Chapter 4 summarizes the system control features of the programmers model
- Chapter 5 summarizes the MPU features of the programmers model
- Chapter 6 summarizes the NVIC features of the programmers model
- Chapter 7 summarizes the Debug features of the programmers model
- Chapter 8 summarizes the DWT features of the programmers model
- Chapter 9 summarizes the ITM features of the programmers model
- Chapter 10 summarizes the ETM features of the programmers model
- Chapter 11 summarizes the TPIU features of the programmers model.

## 3.2 Modes of operation and execution

This section briefly describes the modes of operation and execution of the Cortex-M3 processor. See the *ARMv7-M Architecture Reference Manual* for more information.

### 3.2.1 Operating modes

The processor supports two modes of operation, Thread mode and Handler mode:

- The processor enters Thread mode on Reset, or as a result of an exception return. Privileged and Unprivileged code can run in Thread mode.
- The processor enters Handler mode as a result of an exception. All code is privileged in Handler mode.

### 3.2.2 Operating states

The processor can operate in one of two operating states:

- Thumb state. This is normal execution running 16-bit and 32-bit halfword aligned Thumb instructions.
- Debug State. This is the state when the processor is in halting debug.

### 3.2.3 Privileged access and user access

Code can execute as privileged or unprivileged. Unprivileged execution limits or excludes access to some resources. Privileged execution has access to all resources. Handler mode is always privileged. Thread mode can be privileged or unprivileged.

### 3.3 Instruction set summary

This section provides information on:

- *Cortex-M3 instructions*
- *Load/store timings* on page 3-8
- *Binary compatibility with other Cortex processors* on page 3-9.

#### 3.3.1 Cortex-M3 instructions

The processor implements the ARMv7-M Thumb instruction set. Table 3-1 shows the Cortex-M3 instructions and their cycle counts. The cycle counts are based on a system with zero wait states.

Within the assembler syntax, depending on the operation, the <op2> field can be replaced with one of the following options:

- a simple register specifier, for example Rm
- an immediate shifted register, for example Rm, LSL #4
- a register shifted register, for example Rm, LSL Rs
- an immediate value, for example #0xE000E000.

For brevity, not all load and store addressing modes are shown. See the *ARMv7-M Architecture Reference Manual* for more information.

Table 3-1 uses the following abbreviations in the Cycles column:

- P** The number of cycles required for a pipeline refill. This ranges from 1 to 3 depending on the alignment and width of the target instruction, and whether the processor manages to speculate the address early.
- B** The number of cycles required to perform the barrier operation. For DSB and DMB, the minimum number of cycles is zero. For ISB, the minimum number of cycles is equivalent to the number required for a pipeline refill.
- N** The number of registers in the register list to be loaded or stored, including PC or LR.
- W** The number of cycles spent waiting for an appropriate event.

**Table 3-1 Cortex-M3 instruction set summary**

| Operation | Description        | Assembler         | Cycles |
|-----------|--------------------|-------------------|--------|
| Move      | Register           | MOV Rd, <op2>     | 1      |
|           | 16-bit immediate   | MOVW Rd, #<imm>   | 1      |
|           | Immediate into top | MOVT Rd, #<imm>   | 1      |
|           | To PC              | MOV PC, Rm        | 1 + P  |
| Add       | Add                | ADD Rd, Rn, <op2> | 1      |
|           | Add to PC          | ADD PC, PC, Rm    | 1 + P  |
|           | Add with carry     | ADC Rd, Rn, <op2> | 1      |
|           | Form address       | ADR Rd, <label>   | 1      |



**Table 3-1 Cortex-M3 instruction set summary (continued)**

| Operation | Description              | Assembler                | Cycles               |
|-----------|--------------------------|--------------------------|----------------------|
| Subtract  | Subtract                 | SUB Rd, Rn, <op2>        | 1                    |
|           | Subtract with borrow     | SBC Rd, Rn, <op2>        | 1                    |
|           | Reverse                  | RSB Rd, Rn, <op2>        | 1                    |
| Multiply  | Multiply                 | MUL Rd, Rn, Rm           | 1                    |
|           | Multiply accumulate      | MLA Rd, Rn, Rm           | 2                    |
|           | Multiply subtract        | MLS Rd, Rn, Rm           | 2                    |
|           | Long signed              | SMULL RdLo, RdHi, Rn, Rm | 3 to 5 <sup>a</sup>  |
|           | Long unsigned            | UMULL RdLo, RdHi, Rn, Rm | 3 to 5 <sup>a</sup>  |
|           | Long signed accumulate   | SMLAL RdLo, RdHi, Rn, Rm | 4 to 7 <sup>a</sup>  |
|           | Long unsigned accumulate | UMLAL RdLo, RdHi, Rn, Rm | 4 to 7 <sup>a</sup>  |
| Divide    | Signed                   | SDIV Rd, Rn, Rm          | 2 to 12 <sup>b</sup> |
|           | Unsigned                 | UDIV Rd, Rn, Rm          | 2 to 12 <sup>b</sup> |
| Saturate  | Signed                   | SSAT Rd, #<imm>, <op2>   | 1                    |
|           | Unsigned                 | USAT Rd, #<imm>, <op2>   | 1                    |
| Compare   | Compare                  | CMP Rn, <op2>            | 1                    |
|           | Negative                 | CMN Rn, <op2>            | 1                    |
| Logical   | AND                      | AND Rd, Rn, <op2>        | 1                    |
|           | Exclusive OR             | EOR Rd, Rn, <op2>        | 1                    |
|           | OR                       | ORR Rd, Rn, <op2>        | 1                    |
|           | OR NOT                   | ORN Rd, Rn, <op2>        | 1                    |
|           | Bit clear                | BIC Rd, Rn, <op2>        | 1                    |
|           | Move NOT                 | MVN Rd, <op2>            | 1                    |
|           | AND test                 | TST Rn, <op2>            | 1                    |
|           | Exclusive OR test        | TEQ Rn, <op1>            | 1                    |
| Shift     | Logical shift left       | LSL Rd, Rn, #<imm>       | 1                    |
|           | Logical shift left       | LSL Rd, Rn, Rs           | 1                    |
|           | Logical shift right      | LSR Rd, Rn, #<imm>       | 1                    |
|           | Logical shift right      | LSR Rd, Rn, Rs           | 1                    |
|           | Arithmetic shift right   | ASR Rd, Rn, #<imm>       | 1                    |
|           | Arithmetic shift right   | ASR Rd, Rn, Rs           | 1                    |

**Table 3-1 Cortex-M3 instruction set summary (continued)**

| Operation | Description           | Assembler                 | Cycles             |
|-----------|-----------------------|---------------------------|--------------------|
| Rotate    | Rotate right          | ROR Rd, Rn, #<imm>        | 1                  |
|           | Rotate right          | ROR Rd, Rn, Rs            | 1                  |
|           | With extension        | RRX Rd, Rn                | 1                  |
| Count     | Leading zeroes        | CLZ Rd, Rn                | 1                  |
| Load      | Word                  | LDR Rd, [Rn, <op2>]       | 2 <sup>c</sup>     |
|           | To PC                 | LDR PC, [Rn, <op2>]       | 2 <sup>c</sup> + P |
|           | Halfword              | LDRH Rd, [Rn, <op2>]      | 2 <sup>c</sup>     |
|           | Byte                  | LDRB Rd, [Rn, <op2>]      | 2 <sup>c</sup>     |
|           | Signed halfword       | LDRSH Rd, [Rn, <op2>]     | 2 <sup>c</sup>     |
|           | Signed byte           | LDRSB Rd, [Rn, <op2>]     | 2 <sup>c</sup>     |
|           | User word             | LDRT Rd, [Rn, #<imm>]     | 2 <sup>c</sup>     |
|           | User halfword         | LDRHT Rd, [Rn, #<imm>]    | 2 <sup>c</sup>     |
|           | User byte             | LDRBT Rd, [Rn, #<imm>]    | 2 <sup>c</sup>     |
|           | User signed halfword  | LDRSHT Rd, [Rn, #<imm>]   | 2 <sup>c</sup>     |
|           | User signed byte      | LDRSBT Rd, [Rn, #<imm>]   | 2 <sup>c</sup>     |
|           | PC relative           | LDR Rd, [PC, #<imm>]      | 2 <sup>c</sup>     |
|           | Doubleword            | LDRD Rd, Rd, [Rn, #<imm>] | 1 + N              |
|           | Multiple              | LDM Rn, {<reglist>}       | 1 + N              |
|           | Multiple including PC | LDM Rn, {<reglist>, PC}   | 1 + N + P          |
| Store     | Word                  | STR Rd, [Rn, <op2>]       | 2 <sup>c</sup>     |
|           | Halfword              | STRH Rd, [Rn, <op2>]      | 2 <sup>c</sup>     |
|           | Byte                  | STRB Rd, [Rn, <op2>]      | 2 <sup>c</sup>     |
|           | Signed halfword       | STRSH Rd, [Rn, <op2>]     | 2 <sup>c</sup>     |
|           | Signed byte           | STRSB Rd, [Rn, <op2>]     | 2 <sup>c</sup>     |
|           | User word             | STRT Rd, [Rn, #<imm>]     | 2 <sup>c</sup>     |
|           | User halfword         | STRHT Rd, [Rn, #<imm>]    | 2 <sup>c</sup>     |
|           | User byte             | STRBT Rd, [Rn, #<imm>]    | 2 <sup>c</sup>     |
|           | User signed halfword  | STRSHT Rd, [Rn, #<imm>]   | 2 <sup>c</sup>     |
|           | User signed byte      | STRSBT Rd, [Rn, #<imm>]   | 2 <sup>c</sup>     |
|           | Doubleword            | STRD Rd, Rd, [Rn, #<imm>] | 1 + N              |
|           | Multiple              | STM Rn, {<reglist>}       | 1 + N              |

**Table 3-1 Cortex-M3 instruction set summary (continued)**

| Operation    | Description             | Assembler                  | Cycles         |
|--------------|-------------------------|----------------------------|----------------|
| Push         | Push                    | PUSH {<reglist>}           | 1 + N          |
|              | Push with link register | PUSH {<reglist>, LR}       | 1 + N          |
| Pop          | Pop                     | POP {<reglist>}            | 1 + N          |
|              | Pop and return          | POP {<reglist>, PC}        | 1 + N + P      |
| Semaphore    | Load exclusive          | LDREX Rd, [Rn, #<imm>]     | 2              |
|              | Load exclusive half     | LDREXH Rd, [Rn]            | 2              |
|              | Load exclusive byte     | LDREXB Rd, [Rn]            | 2              |
|              | Store exclusive         | STREX Rd, Rt, [Rn, #<imm>] | 2              |
|              | Store exclusive half    | STREXH Rd, Rt, [Rn]        | 2              |
|              | Store exclusive byte    | STREXB Rd, Rt, [Rn]        | 2              |
|              | Clear exclusive monitor | CLREX                      | 1              |
| Branch       | Conditional             | B<cc> <label>              | 1 or 1 + Pd    |
|              | Unconditional           | B <label>                  | 1 + P          |
|              | With link               | BL <label>                 | 1 + P          |
|              | With exchange           | BX Rm                      | 1 + P          |
|              | With link and exchange  | BLX Rm                     | 1 + P          |
|              | Branch if zero          | CBZ Rn, <label>            | 1 or 1 + Pd    |
|              | Branch if non-zero      | CBNZ Rn, <label>           | 1 or 1 + Pd    |
|              | Byte table branch       | TBB [Rn, Rm]               | 2 + P          |
|              | Halfword table branch   | TBH [Rn, Rm, LSL#1]        | 2 + P          |
| State change | Supervisor call         | SVC #<imm>                 | -              |
|              | If-then-else            | IT... <cond>               | 1 <sup>e</sup> |
|              | Disable interrupts      | CPSID <flags>              | 1 or 2         |
|              | Enable interrupts       | CPSIE <flags>              | 1 or 2         |
|              | Read special register   | MRS Rd, <specreg>          | 1 or 2         |
|              | Write special register  | MSR <specreg>, Rn          | 1 or 2         |
|              | Breakpoint              | BKPT #<imm>                | -              |
| Extend       | Signed halfword to word | SXTH Rd, <op2>             | 1              |
|              | Signed byte to word     | SXTB Rd, <op2>             | 1              |
|              | Unsigned halfword       | UXTH Rd, <op2>             | 1              |
|              | Unsigned byte           | UXTB Rd, <op2>             | 1              |

**Table 3-1 Cortex-M3 instruction set summary (continued)**

| Operation | Description                 | Assembler                   | Cycles |
|-----------|-----------------------------|-----------------------------|--------|
| Bit field | Extract unsigned            | UBFX Rd, Rn, #<imm>, #<imm> | 1      |
|           | Extract signed              | SBFX Rd, Rn, #<imm>, #<imm> | 1      |
|           | Clear                       | BFC Rd, Rn, #<imm>, #<imm>  | 1      |
|           | Insert                      | BFI Rd, Rn, #<imm>, #<imm>  | 1      |
| Reverse   | Bytes in word               | REV Rd, Rm                  | 1      |
|           | Bytes in both halfwords     | REV16 Rd, Rm                | 1      |
|           | Signed bottom halfword      | REVSH Rd, Rm                | 1      |
|           | Bits in word                | RBIT Rd, Rm                 | 1      |
| Hint      | Send event                  | SEV                         | 1      |
|           | Wait for event              | WFE                         | 1 + W  |
|           | Wait for interrupt          | WFI                         | 1 + W  |
|           | No operation                | NOP                         | 1      |
| Barriers  | Instruction synchronization | ISB                         | 1 + B  |
|           | Data memory                 | DMB                         | 1 + B  |
|           | Data synchronization        | DSB <f1ags>                 | 1 + B  |

- a. UMULL, SMULL, UMLAL, and SMLAL instructions use early termination depending on the size of the source values. These are interruptible, that is abandoned and restarted, with worst case latency of one cycle.
- b. Division operations use early termination to minimize the number of cycles required based on the number of leading ones and zeroes in the input operands.
- c. Neighboring load and store single instructions can pipeline their address and data phases. This enables these instructions to complete in a single execution cycle.
- d. Conditional branch completes in a single cycle if the branch is not taken.
- e. An IT instruction can be folded onto a preceding 16-bit Thumb instruction, enabling execution in zero cycles.

### 3.3.2 Load/store timings

This section describes how best to pair instructions to achieve more reductions in timing.

- STR Rx, [Ry, #imm] is always one cycle. This is because the address generation is performed in the initial cycle, and the data store is performed at the same time as the next instruction is executing. If the store is to the store buffer, and the store buffer is full or not enabled, the next instruction is delayed until the store can complete. If the store is not to the store buffer, for example to the Code segment, and that transaction stalls, the impact on timing is only felt if another load or store operation is executed before completion.
- LDR Rx!, [any] is not normally pipelined. That is, base update load is generally at least a two-cycle operation (more if stalled). However, if the next instruction does not require to read from a register, the load is reduced to one cycle. Non register writing instructions include CMP, TST, NOP, and non-taken IT controlled instructions.
- LDR PC, [any] is always a blocking operation. This means at least two cycles for the load, and three cycles for the pipeline reload. So this operation takes at least five cycles, or more if stalled on the load or the fetch.

- LDR Rx, [PC, #imm] might add a cycle because of contention with the fetch unit.
- TBB and TBH are also blocking operations. These are at least two cycles for the load, one cycle for the add, and three cycles for the pipeline reload. This means at least six cycles, or more if stalled on the load or the fetch.
- LDR [any] are pipelined when possible. This means that if the next instruction is an LDR or STR, and the destination of the first LDR is not used to compute the address for the next instruction, then one cycle is removed from the cost of the next instruction. So, an LDR might be followed by an STR, so that the STR writes out what the LDR loaded. More multiple LDRs can be pipelined together. Some optimized examples are:
  - LDR R0, [R1]; LDR R1, [R2] - normally three cycles total
  - LDR R0, [R1, R2]; STR R0, [R3, #20] - normally three cycles total
  - LDR R0, [R1, R2]; STR R1, [R3, R2] - normally three cycles total
  - LDR R0, [R1, R5]; LDR R1, [R2]; LDR R2, [R3, #4] - normally four cycles total.
- Other instructions cannot be pipelined after STR with register offset. STR can only be pipelined when it follows an LDR, but nothing can be pipelined after the store. Even a stalled STR normally only takes two cycles, because of the store buffer.
- LDREX and STREX can be pipelined exactly as LDR. Because STREX is treated more like an LDR, it can be pipelined as explained for LDR. Equally LDREX is treated exactly as an LDR and so can be pipelined.
- LDRD and STRD cannot be pipelined with preceding or following instructions. However, the two words are pipelined together. So, this operation requires three cycles when not stalled.
- LDM and STM cannot be pipelined with preceding or following instructions. However, all elements after the first are pipelined together. So, a three element LDM takes 2+1+1 or 5 cycles when not stalled. Similarly, an eight element store takes nine cycles when not stalled. When interrupted, LDM and STM instructions continue from where they left off when returned to. The continue operation adds one or two cycles to the first element when started.
- Unaligned word or halfword loads or stores add penalty cycles. A byte aligned halfword load or store adds one extra cycle to perform the operation as two bytes. A halfword aligned word load or store adds one extra cycle to perform the operation as two halfwords. A byte-aligned word load or store adds two extra cycles to perform the operation as a byte, a halfword, and a byte. These numbers increase if the memory stalls. A STR or STRH cannot delay the processor because of the store buffer.

### 3.3.3 Binary compatibility with other Cortex processors

The processor implements a binary compatible subset of the instruction set and features provided by other Cortex-M profile processors. You can move software, including system level software, from the Cortex-M3 processor to other Cortex-M profile processors.

To ensure a smooth transition, ARM recommends that code designed to operate on other Cortex-M profile processor architectures obey the following rules and configure the *Configuration Control Register (CCR)* appropriately:

- use word transfers only to access registers in the NVIC and *System Control Space (SCS)*.
- treat all unused SCS registers and register fields on the processor as Do-Not-Modify.
- configure the following fields in the CCR:
  - STKALIGN bit to 1


- UNALIGN\_TRP bit to 1
- Leave all other bits in the CCR register as their original value.

### 3.4 System address map

The processor contains a bus matrix that arbitrates the processor core and optional *Debug Access Port (DAP)* memory accesses to both the external memory system and to the internal *System Control Space (SCS)* and debug components.

Priority is always given to the processor to ensure that any debug accesses are as non-intrusive as possible. For a zero wait state system, all debug accesses to system memory, SCS, and debug resources are completely non-intrusive.

Figure 3-1 shows the system address map.

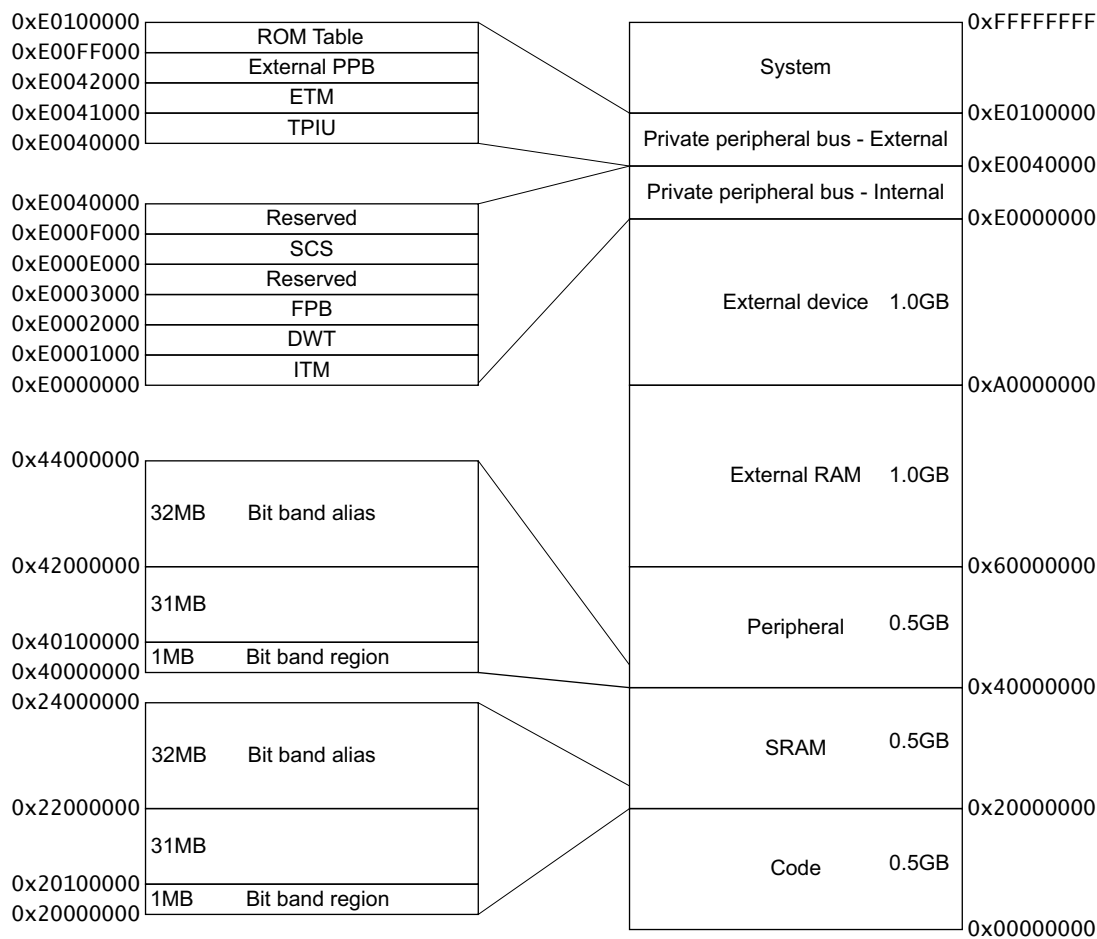

**Figure 3-1 System address map**

Table 3-2 shows the processor interfaces that are addressed by the different memory map regions.

**Table 3-2 Memory regions**

| Memory Map    | Region  |
|---------------|---|
| Code          | Instruction fetches are performed over the ICode bus. Data accesses are performed over the DCode bus. |
| SRAM          | Instruction fetches and data accesses are performed over the system bus.                              |
| SRAM bit-band | Alias region. Data accesses are aliases. Instruction accesses are not aliases.                        |
| Peripheral    | Instruction fetches and data accesses are performed over the system bus.                              |

**Table 3-2 Memory regions (continued)**

| Memory Map             | Region  |
|------------------------|---|
| Peripheral bit-band    | Alias region. Data accesses are aliases. Instruction accesses are not aliases.  |
| External RAM           | Instruction fetches and data accesses are performed over the system bus.  |
| External Device        | Instruction fetches and data accesses are performed over the system bus.  |
| Private Peripheral Bus | External and internal <i>Private Peripheral Bus</i> (PPB) interfaces. See <i>Private peripheral bus</i> . This memory region is <i>Execute Never</i> (XN), and so instruction fetches are prohibited. An MPU, if present, cannot change this. |
| System                 | System segment for vendor system peripherals. This memory region is XN, and so instruction fetches are prohibited. An MPU, if present, cannot change this.  |

See the *ARMv7-M Architecture Reference Manual* for more information about the memory model.

### 3.4.1 Private peripheral bus

The internal *Private Peripheral Bus* (PPB) interface provides access to:

- the *Instrumentation Trace Macrocell* (ITM)
- the *Data Watchpoint and Trace* (DWT)
- the *Flashpatch and Breakpoint* (FPB)
- the *System Control Space* (SCS), including the Memory Protection Unit (MPU) and the Nested Vectored Interrupt Controller (NVIC).

The external PPB interface provides access to:

- the *Trace Point Interface Unit* (TPIU)
- the *Embedded Trace Macrocell* (ETM)
- the ROM table
- implementation-specific areas of the PPB memory map.

### 3.4.2 Unaligned accesses that cross regions

The Cortex-M3 processor supports ARMv7 unaligned accesses, and performs all accesses as single, unaligned accesses. They are converted into two or more aligned accesses by the DCode and System bus interfaces.

———— **Note** —————

All Cortex-M3 external accesses are aligned.

Unaligned support is only available for load/store singles (LDR, STR). Load/store double already supports word aligned accesses, but does not permit other unaligned accesses, and generates a fault if this is attempted.

Unaligned accesses that cross memory map boundaries are architecturally Unpredictable. The processor behavior is boundary dependent, as follows:

- DCode accesses wrap within the region. For example, an unaligned halfword access to the last byte of Code space (0x1FFFFFFF) is converted by the DCode interface into a byte access to 0x1FFFFFFF followed by a byte access to 0x00000000.



- System accesses that cross into PPB space do not wrap within System space. For example, an unaligned halfword access to the last byte of System space (0xDFFFFFFF) is converted by the System interface into a byte access to 0xDFFFFFFF followed by a byte access to 0xE0000000. 0xE0000000 is not a valid address on the System bus.
- System accesses that cross into Code space do not wrap within System space. For example, an unaligned halfword access to the last byte of System space (0xFFFFFFFF) is converted by the System interface into a byte access to 0xFFFFFFFF followed by a byte access to 0x00000000. 0x00000000 is not a valid address on the System bus.
- Unaligned accesses are not supported to PPB space, and so there are no boundary crossing cases for PPB accesses.

Unaligned accesses that cross into the bit-band alias regions are also architecturally Unpredictable. The processor performs the access to the bit-band alias address, but this does not result in a bit-band operation. For example, an unaligned halfword access to 0x21FFFFFF is performed as a byte access to 0x21FFFFFF followed by a byte access to 0x22000000 (the first byte of the bit-band alias).

Unaligned loads that match against a literal comparator in the FPB are not remapped. FPB only remaps aligned addresses.

### 3.5 Write buffer

To prevent bus wait cycles from stalling the processor during data stores, buffered stores to the DCode and System buses go through a one-entry write buffer. If the write buffer is full, subsequent accesses to the bus stall until the write buffer has drained. The write buffer is only used if the bus waits the data phase of the buffered store, otherwise the transaction completes on the bus.

DMB and DSB instructions wait for the write buffer to drain before completing. If an interrupt comes in while DMB or DSB is waiting for the write buffer to drain, the processor returns to the instruction following the DMB or DSB after the interrupt completes. This is because interrupt processing acts as a memory barrier operation.

## 3.6 Exclusive monitor

The Cortex-M3 processor implements a local exclusive monitor. For more information about semaphores and the local exclusive monitor see the *ARMv7M ARM Architecture Reference Manual*.

## 3.7 Bit-banding

Bit-banding maps a complete word of memory onto a single bit in the bit-band region. For example, writing to one of the alias words sets or clears the corresponding bit in the bit-band region. This enables every individual bit in the bit-banding region to be directly accessible from a word-aligned address using a single LDR instruction. It also enables individual bits to be toggled without performing a read-modify-write sequence of instructions.

The processor memory map includes two bit-band regions. These occupy the lowest 1MB of the SRAM and Peripheral memory regions respectively. These bit-band regions map each word in an alias region of memory to a bit in a bit-band region of memory.

The System bus interface contains logic that controls bit-band accesses as follows:

- It remaps bit-band alias addresses to the bit-band region.
- For reads, it extracts the requested bit from the read byte, and returns this in the *Least Significant Bit* (LSB) of the read data returned to the core.
- For writes, it converts the write to an atomic read-modify-write operation.
- The processor does not stall during bit-band operations unless it attempts to access the System bus while the bit-band operation is being carried out.

The memory map has two 32-MB alias regions that map to two 1-MB bit-band regions:

- Accesses to the 32-MB SRAM alias region map to the 1-MB SRAM bit-band region.
- Accesses to the 32-MB peripheral alias region map to the 1-MB peripheral bit-band region.

A mapping formula shows how to reference each word in the alias region to a corresponding bit, or target bit, in the bit-band region. The mapping formula is:

$$\text{bit\_word\_offset} = (\text{byte\_offset} \times 32) + (\text{bit\_number} \times 4)$$

$$\text{bit\_word\_addr} = \text{bit\_band\_base} + \text{bit\_word\_offset}$$

where:

- `bit_word_offset` is the position of the target bit in the bit-band memory region.
- `bit_word_addr` is the address of the word in the alias memory region that maps to the targeted bit.
- `bit_band_base` is the starting address of the alias region.
- `byte_offset` is the number of the byte in the bit-band region that contains the targeted bit.
- `bit_number` is the bit position, 0 to 7, of the targeted bit.

Figure 3-2 on page 3-17 shows examples of bit-band mapping between the SRAM bit-band alias region and the SRAM bit-band region:

- The alias word at `0x23FFFFE0` maps to bit [0] of the bit-band byte at `0x200FFFFF`: `0x23FFFFE0 = 0x22000000 + (0xFFFF*32) + 0*4`.
- The alias word at `0x23FFFFFC` maps to bit [7] of the bit-band byte at `0x200FFFFF`: `0x23FFFFFC = 0x22000000 + (0xFFFF*32) + 7*4`.
- The alias word at `0x22000000` maps to bit [0] of the bit-band byte at `0x20000000`: `0x22000000 = 0x22000000 + (0*32) + 0*4`.

- The alias word at 0x2200001C maps to bit [7] of the bit-band byte at 0x20000000:  $0x2200001C = 0x22000000 + (0*32) + 7*4$ .

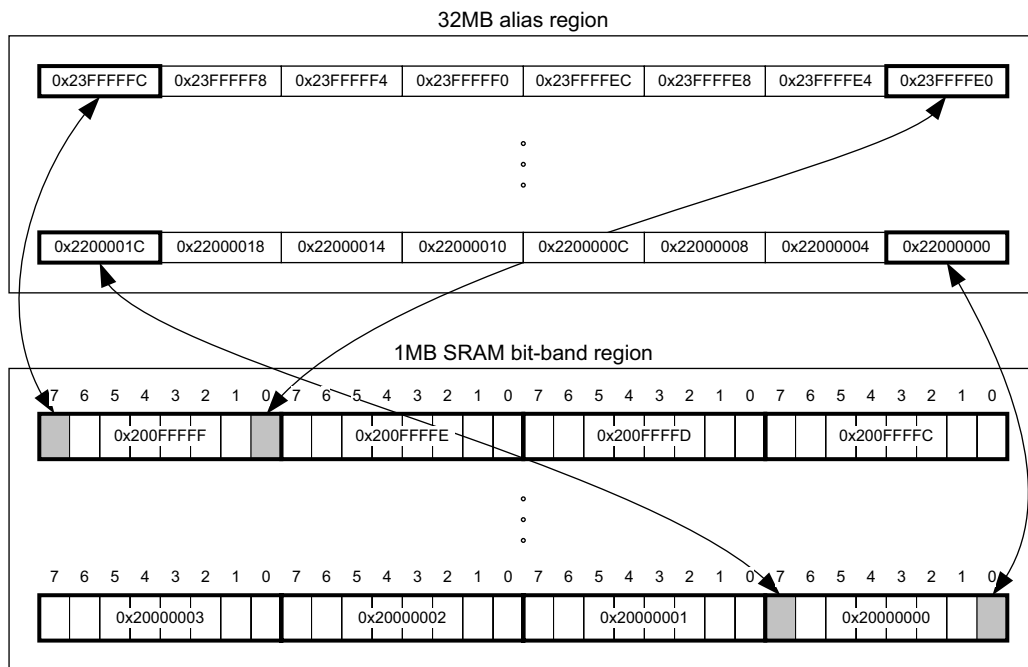


Figure 3-2 Bit-band mapping

### 3.7.1 Directly accessing an alias region

Writing to a word in the alias region has the same effect as a read-modify-write operation on the targeted bit in the bit-band region.

Bit [0] of the value written to a word in the alias region determines the value written to the targeted bit in the bit-band region. Writing a value with bit [0] set writes a 1 to the bit-band bit, and writing a value with bit [0] cleared writes a 0 to the bit-band bit.

Bits [31:1] of the alias word have no effect on the bit-band bit. Writing 0x01 has the same effect as writing 0xFF. Writing 0x00 has the same effect as writing 0x0E.

Reading a word in the alias region returns either 0x01 or 0x00. A value of 0x01 indicates that the targeted bit in the bit-band region is set. A value of 0x00 indicates that the targeted bit is clear. Bits [31:1] are zero.

### 3.7.2 Directly accessing a bit-band region


You can directly access the bit-band region with normal reads and writes to that region.

### 3.8 Processor core register summary

The processor has the following 32-bit registers:

- 13 general-purpose registers, r0-r12
- *Stack Pointer* (SP) alias of banked registers, SP\_process and SP\_main
- *Link Register* (LR), r14
- *Program Counter* (PC), r15
- Special-purpose *Program Status Registers*, (xPSR).

Figure 3-3 shows the processor register set.

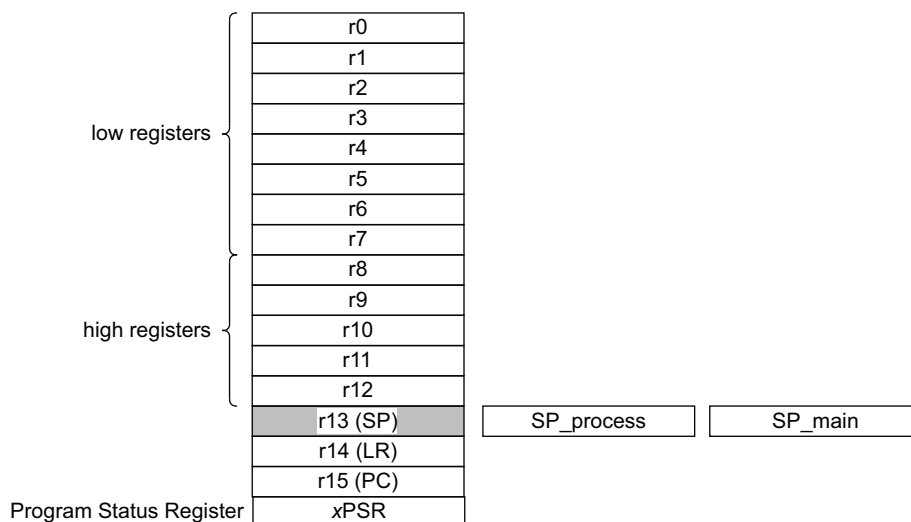

**Figure 3-3 Processor register set**

The general-purpose registers r0-r12 have no special architecturally-defined uses. Most instructions that can specify a general-purpose register can specify r0-r12.

**Low registers** Registers r0-r7 are accessible by all instructions that specify a general-purpose register.

**High registers** Registers r8-r12 are accessible by all 32-bit instructions that specify a general-purpose register.  
Registers r8-r12 are not accessible by all 16-bit instructions.

Registers r13, r14, and r15 have the following special functions:

**Stack pointer** Register r13 is used as the *Stack Pointer* (SP). Because the SP ignores writes to bits [1:0], it is autoaligned to a word, four-byte boundary.  
Handler mode always uses SP\_main, but you can configure Thread mode to use either SP\_main or SP\_process.

**Link register** Register r14 is the subroutine *Link Register* (LR).  
The LR receives the return address from PC when a *Branch and Link* (BL) or *Branch and Link with Exchange* (BLX) instruction is executed.  
The LR is also used for exception return.  
At all other times, you can treat r14 as a general-purpose register.

**Program counter** Register r15 is the *Program Counter* (PC).

Bit [0] is always 0, so instructions are always aligned to word or halfword boundaries.

See the *ARMv7-M Architecture Reference Manual* for more information.

## 3.9 Exceptions

The processor and the *Nested Vectored Interrupt Controller* (NVIC) prioritize and handle all exceptions. When handling exceptions:

- All exceptions are handled in Handler mode.
- Processor state is automatically stored to the stack on an exception, and automatically restored from the stack at the end of the *Interrupt Service Routine* (ISR).
- The vector is fetched in parallel to the state saving, enabling efficient interrupt entry.

The processor supports tail-chaining that enables back-to-back interrupts without the overhead of state saving and restoration.

You configure the number of interrupts, and bits of interrupt priority, during implementation. Software can choose only to enable a subset of the configured number of interrupts, and can choose how many bits of the configured priorities to use.

### ———— Note ————

Vector table entries are compatible with interworking between ARM and Thumb instructions. This causes bit [0] of the vector value to load into the *Execution Program Status Register* (EPSR) T-bit on exception entry. All vector table entries must have bit [0] set. Creating a table entry with bit [0] clear generates an INVSTATE fault on the first instruction of the handler corresponding to this vector.

### 3.9.1 Exception handling

The processor implements advanced exception and interrupt handling, as described in the *ARMv7-M Architecture Reference Manual*.

To reduce interrupt latency, the processor implements both interrupt late-arrival and interrupt tail-chaining mechanisms, as defined by the ARMv7-M architecture:

- There is a maximum of a 12 cycle latency from asserting the interrupt to execution of the first instruction of the ISR when the memory being accessed has no wait states being applied. The first instruction to be executed is fetched in parallel to the stack push.
- Returns from interrupts similarly take twelve cycles where the instruction being returned to is fetched in parallel to the stack pop.
- Tail chaining requires 6 cycles when using zero wait state memory. No stack pushes or pops are performed and only the instruction for the next ISR is fetched.

The processor exception model has the following implementation-defined behavior in addition to the architecturally defined behavior:

- exceptions on stacking from HardFault to NMI lockup at NMI priority
- exceptions on unstacking from NMI to HardFault lockup at HardFault priority.

To minimize interrupt latency, the processor abandons any divide instruction to take any pending interrupt. On return from the interrupt handler, the processor restarts the divide instruction from the beginning. The processor implements the Interruptible-continuable Instruction field. Load multiple (LDM) operations and store multiple (STM) operations are interruptible. The ICI field of the EPSR holds the information required to continue the load or store multiple from the point where the interrupt occurred.



This means that software must not use load-multiple or store-multiple instructions to access a device or memory region that is read-sensitive or sensitive to repeated writes. The software must not use these instructions in any case where repeated reads or writes might cause inconsistent results or unwanted side-effects.

### **Base register update in LDM and STM operations**

There are cases when an LDM or STM updates the base register:

- When the instruction specifies base register write-back, the base register changes to the updated address. An abort restores the original base value.
- When the base register is in the register list of an LDM, and is not the last register in the list, the base register changes to the loaded value.

An LDM or STM is restarted rather than continued if:

- the instruction faults
- the instruction is inside an IT.

If an LDM has completed a base load, it is continued from before the base load.

# Chapter 4

## System Control

This chapter describes the registers that program the processor. It contains the following sections:

- *About system control* on page 4-2
- *Register summary* on page 4-3
- *Register descriptions* on page 4-5.

## 4.1 About system control

This chapter describes the registers that control the operation of the processor.

## 4.2 Register summary

Table 4-1 shows the system control registers. Registers not described in this chapter are described in the *ARMv7-M Architecture Reference Manual*

**Table 4-1 System control registers**

| Address    | Name     | Type     | Reset                   | Description  |
|------------|----------|----------|-------------------------|--|
| 0xE000E008 | ACTLR    | RW       | 0x00000000              | <i>Auxiliary Control Register, ACTLR</i> on page 4-5     |
| 0xE000E010 | STCSR    | RW       | 0x00000000              | SysTick Control and Status Register                      |
| 0xE000E014 | STRVR    | RW       | Unknown                 | SysTick Reload Value Register                            |
| 0xE000E018 | STCVR    | RW clear | Unknown                 | SysTick Current Value Register                           |
| 0xE000E01C | STCR     | RO       | Implementation specific | SysTick Calibration Value Register                       |
| 0xE000ED00 | CPUID    | RO       | 0x412FC230              | <i>CPUID Base Register, CPUID</i> on page 4-5            |
| 0xE000ED04 | ICSR     | RW or RO | 0x00000000              | Interrupt Control and State Register                     |
| 0xE000ED08 | VTOR     | RW       | 0x00000000              | Vector Table Offset Register                             |
| 0xE000ED0C | AIRCR    | RW       | 0x00000000 <sup>a</sup> | Application Interrupt and Reset Control Register         |
| 0xE000ED10 | SCR      | RW       | 0x00000000              | System Control Register                                  |
| 0xE000ED14 | CCR      | RW       | 0x00000200              | Configuration and Control Register.                      |
| 0xE000ED18 | SHPR1    | RW       | 0x00000000              | System Handler Priority Register 1                       |
| 0xE000ED1C | SHPR2    | RW       | 0x00000000              | System Handler Priority Register 2                       |
| 0xE000ED20 | SHPR3    | RW       | 0x00000000              | System Handler Priority Register 3                       |
| 0xE000ED24 | SHCSR    | RW       | 0x00000000              | System Handler Control and State Register                |
| 0xE000ED28 | CFSR     | RW       | 0x00000000              | Configurable Fault Status Registers                      |
| 0xE000ED2C | HFSR     | RW       | 0x00000000              | HardFault Status register                                |
| 0xE000ED30 | DFSR     | RW       | 0x00000000              | Debug Fault Status Register                              |
| 0xE000ED34 | MMFAR    | RW       | Unknown                 | MemManage Address Register <sup>b</sup>                  |
| 0xE000ED38 | BFAR     | RW       | Unknown                 | BusFault Address Register <sup>b</sup>                   |
| 0xE000ED3C | AFSR     | RW       | 0x00000000              | <i>Auxiliary Fault Status Register, AFSR</i> on page 4-6 |
| 0xE000ED40 | ID_PFR0  | RO       | 0x00000030              | Processor Feature Register 0                             |
| 0xE000ED44 | ID_PFR1  | RO       | 0x00000200              | Processor Feature Register 1                             |
| 0xE000ED48 | ID_DFR0  | RO       | 0x00100000              | Debug Features Register 0                                |
| 0xE000ED4C | ID_AFR0  | RO       | 0x00000000              | Auxiliary Features Register 0                            |
| 0xE000ED50 | ID_MMFR0 | RO       | 0x00000030              | Memory Model Feature Register 0                          |
| 0xE000ED54 | ID_MMFR1 | RO       | 0x00000000              | Memory Model Feature Register 1                          |
| 0xE000ED58 | ID_MMFR2 | RO       | 0x00000000              | Memory Model Feature Register 2                          |
| 0xE000ED5C | ID_MMFR3 | RO       | 0x00000000              | Memory Model Feature Register 3                          |
| 0xE000ED60 | ID_ISAR0 | RO       | 0x01141110              | Instruction Set Attributes Register 0                    |

**Table 4-1 System control registers (continued)**

| Address    | Name     | Type | Reset      | Description                           |
|------------|----------|------|------------|---------------------------------------|
| 0xE000ED64 | ID_ISAR1 | RO   | 0x02112000 | Instruction Set Attributes Register 1 |
| 0xE000ED68 | ID_ISAR2 | RO   | 0x21232231 | Instruction Set Attributes Register 2 |
| 0xE000ED6C | ID_ISAR3 | RO   | 0x01111131 | Instruction Set Attributes Register 3 |
| 0xE000ED70 | ID_ISAR4 | RO   | 0x01310102 | Instruction Set Attributes Register 4 |
| 0xE000ED88 | CPACR    | RW   | 0x00000000 | Coprocessor Access Control Register   |
| 0xE000EF00 | STIR     | WO   | 0x00000000 | Software Triggered Interrupt Register |

- a. Bits [10:8] are reset to zero. The ENDIANNESS bit, bit [15], can reset to either state, depending on the implementation.
- b. BFAR and MFAR are the same physical register. Because of this, the BFARVALID and MFAEVALID bits are mutually exclusive.

## 4.3 Register descriptions

This section describes the system control registers whose implementation is specific to this processor.

### 4.3.1 Auxiliary Control Register, ACTLR

The ACTLR characteristics are:

**Purpose** Disables certain aspects of functionality within the processor.

**Usage Constraints** There are no usage constraints.

**Configurations** This register is available in all processor configurations.

**Attributes** See the register summary in Table 4-1 on page 4-3.

Figure 4-1 shows the ACTLR bit assignments.

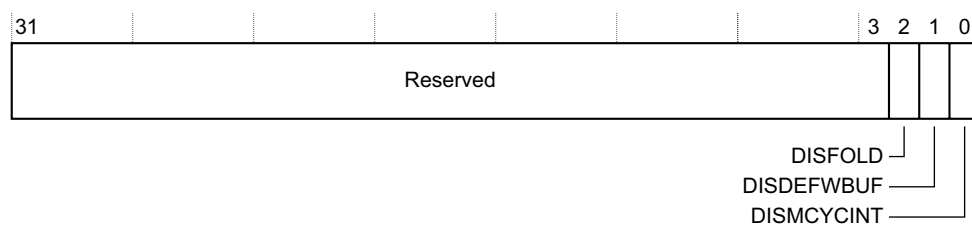


Figure 4-1 ACTLR bit assignments

Table 4-2 shows the ACTLR bit assignments.

Table 4-2 ACTLR bit assignments

| Bits   | Name       | Function   |
|--------|------------|--|
| [31:3] | -          | Reserved   |
| [2]    | DISFOLD    | Disables folding of IT instructions.   |
| [1]    | DISDEFWBUF | Disables write buffer use during default memory map accesses. This causes all bus faults to be precise, but decreases the performance of the processor because stores to memory must complete before the next instruction can be executed. |
| [0]    | DISMCYCINT | Disables interruption of multi-cycle instructions. This increases the interrupt latency of the processor because load/store and multiply/divide operations complete before interrupt stacking occurs.                                      |

### 4.3.2 CPUID Base Register, CPUID

The CPUID characteristics are:

**Purpose** Specifies:


- the ID number of the processor core
- the version number of the processor core
- the implementation details of the processor core.

**Usage Constraints** There are no usage constraints.

**Configurations** This register is available in all processor configurations.

**Attributes** See the register summary in Table 4-1 on page 4-3.

Figure 4-2 shows the CPUID bit assignments.

 

**Figure 4-2 CPUID bit assignments**

Table 4-3 shows the CPUID bit assignments.

**Table 4-3 CPUID bit assignments**


| Bits    | NAME        | Function                                       |
|---------|-------------|--|
| [31:24] | IMPLEMENTER | Indicates implementor: 0x41 = ARM              |
| [23:20] | VARIANT     | Indicates processor revision: 0x2 = Revision 2 |
| [19:16] | (Constant)  | Reads as 0xF                                   |
| [15:4]  | PARTNO      | Indicates part number: 0xC23 = Cortex-M3       |
| [3:0]   | REVISION    | Indicates patch release: 0x0 = Patch 0.        |

### 4.3.3 Auxiliary Fault Status Register, AFSR

The AFSR characteristics are:

- Purpose** Specifies additional system fault information to software.
- Usage Constraints** The AFSR flags map directly onto the AUXFAULT inputs of the processor, and a single-cycle high level on an external pin causes the corresponding AFSR bit to become latched as one. The bit can only be cleared by writing a one to the corresponding AFSR bit.
- When an AFSR bit is written or latched as one, an exception does not occur. If you require an exception, you must use an interrupt.
- Configurations** This register is available in all processor configurations.
- Attributes** See the register summary in Table 4-1 on page 4-3.

Figure 4-3 shows the AFSR bit assignments.

 

**Figure 4-3 AFSR bit assignments**

Table 4-4 shows the AFSR bit assignments.

**Table 4-4 AFSR bit assignments**

| Bits   | Name     | Function                                |
|--------|----------|---|
| [31:0] | AUXFAULT | Latched version of the AUXFAULT inputs. |

# Chapter 5

## Memory Protection Unit

This chapter describes the processor *Memory Protection Unit* (MPU). It contains the following sections:

- *About the MPU* on page 5-2
- *MPU functional description* on page 5-3
- *MPU programmers model* on page 5-4.



## 5.1 About the MPU

The MPU is an optional component for memory protection. The processor supports the standard *ARMv7 Protected Memory System Architecture* model. The MPU provides full support for:

- protection regions
- overlapping protection regions, with ascending region priority:
  - 7 = highest priority
  - 0 = lowest priority.
- access permissions
- exporting memory attributes to the system.

MPU mismatches and permission violations invoke the programmable-priority MemManage fault handler. See the *ARMv7-M Architecture Reference Manual* for more information.

You can use the MPU to:

- enforce privilege rules
- separate processes
- enforce access rules.

## 5.2 MPU functional description

The attribute bits, TEX, C, B, AP, and XN, of the Region Access Control Register control access to the corresponding memory region. If an access is made to an area of memory without the required permissions, then a permission fault is raised. For more information, see the *ARMv7-M Architecture Reference Manual*.

### 5.3 MPU programmers model

Table 5-5 shows the MPU registers. These registers are described in the *ARMv7-M Architecture Reference Manual*.

**Table 5-1 MPU registers**

| Address    | Name        | Type | Reset                   | Description                            |
|------------|-------------|------|-------------------------|--|
| 0xE000ED90 | MPU_TYPE    | RO   | 0x00000800 <sup>a</sup> | MPU Type Register                      |
| 0xE000ED94 | MPU_CTRL    | RW   | 0x00000000              | MPU Control Register                   |
| 0xE000ED98 | MPU_RNR     | RW   | -                       | MPU Region Number Register             |
| 0xE000ED9C | MPU_RBAR    | RW   | -                       | MPU Region Base Address Register       |
| 0xE000EDA0 | MPU_RASR    | RW   | -                       | MPU Region Attribute and Size Register |
| 0xE000EDA4 | MPU_RBAR_A1 |      | -                       | MPU alias registers                    |
| 0xE000EDA8 | MPU_RASR_A1 |      | -                       |  |
| 0xE000EDAC | MPU_RBAR_A2 |      | -                       |  |
| 0xE000EDB0 | MPU_RASR_A2 |      | -                       |  |
| 0xE000EDB4 | MPU_RBAR_A3 |      | -                       |  |
| 0xE000EDB8 | MPU_RASR_A3 |      | -                       |  |

a. If the MPU is not present in the implementation, then this register reads as zero.

# Chapter 6

## **Nested Vectored Interrupt Controller**

This chapter describes the *Nested Vectored Interrupt Controller* (NVIC). It contains the following sections:

- *About the NVIC* on page 6-2
- *NVIC functional description* on page 6-3
- *NVIC programmers model* on page 6-4.

## **6.1 About the NVIC**

The NVIC provides configurable interrupt handling abilities to the processor. It:

- facilitates low-latency exception and interrupt handling
- controls power management

## 6.2 NVIC functional description

The NVIC supports up to 240 interrupts each with up to 256 levels of priority. You can change the priority of an interrupt dynamically. The NVIC and the processor core interface are closely coupled, to enable low latency interrupt processing and efficient processing of late arriving interrupts. The NVIC maintains knowledge of the stacked, or nested, interrupts to enable tail-chaining of interrupts.

You can only fully access the NVIC from privileged mode, but you can cause interrupts to enter a pending state in user mode if you enable this capability using the Configuration Control Register. Any other user mode access causes a bus fault.

You can access all NVIC registers using byte, halfword, and word accesses unless otherwise stated. NVIC registers are located within the SCS.

All NVIC registers and system debug registers are little-endian regardless of the endianness state of the processor.

Processor exception handling is described in *Exceptions* on page 3-20.

### 6.2.1 Low power modes

Your implementation can include a *Wake-up Interrupt Controller* (WIC). This enables the processor and NVIC to be put into a very low-power sleep mode leaving the WIC to identify and prioritize interrupts.

The processor fully implements the *Wait For Interrupt* (WFI), *Wait For Event* (WFE) and the *Send Event* (SEV) instructions. In addition, the processor also supports the use of SLEEPONEXIT, that causes the processor core to enter sleep mode when it returns from an exception handler to Thread mode. See the *ARMv7-M Architecture Reference Manual* for more information.

### 6.2.2 Level versus pulse interrupts

The processor supports both level and pulse interrupts. A level interrupt is held asserted until it is cleared by the ISR accessing the device. A pulse interrupt is a variant of an edge model.

For level interrupts, if the signal is not deasserted before the return from the interrupt routine, the interrupt again enters the pending state and re-activates. This is particularly useful for FIFO and buffer-based devices because it ensures that they drain either by a single ISR or by repeated invocations, with no extra work. This means that the device holds the signal in assert until the device is empty.

A pulse interrupt can be reasserted during the ISR so that the interrupt can be in the pending state and active at the same time. The application design must ensure that a second pulse does not arrive before the first pulse is activated. The second entry to the pending state has no affect because it is already in that state. However, if the interrupt is asserted for at least one cycle, the NVIC latches the pend bit. When the ISR activates, the pend bit is cleared. If the interrupt asserts again while it is activated, it can latch the pend bit again.

Pulse interrupts are mostly used for external signals and for rate or repeat signals.

## 6.3 NVIC programmers model

Table 6-1 shows the NVIC registers.

**Table 6-1 NVIC registers**

| Address                    | Name                       | Type | Reset      | Description                                     |
|----------------------------|----------------------------|------|------------|---|
| 0xE000E004                 | ICTR                       | RO   | -          | <i>Interrupt Controller Type Register, ICTR</i> |
| 0xE000E100 -<br>0xE000E11C | NVIC_ISER0 -<br>NVIC_ISER7 | RW   | 0x00000000 | Interrupt Set-Enable Registers                  |
| 0xE000E180 -<br>0xE000E19C | NVIC_ICER0 -<br>NVIC_ICER7 | RW   | 0x00000000 | Interrupt Clear-Enable Registers                |
| 0xE000E200 -<br>0xE000E21C | NVIC_ISPR0 -<br>NVIC_ISPR7 | RW   | 0x00000000 | Interrupt Set-Pending Registers                 |
| 0xE000E280 -<br>0xE000E29C | NVIC_ICPR0 -<br>NVIC_ICPR7 | RW   | 0x00000000 | Interrupt Clear-Pending Registers               |
| 0xE000E300 -<br>0xE000E31C | NVIC_IABR0 -<br>NVIC_IABR7 | RO   | 0x00000000 | Interrupt Active Bit Register                   |
| 0xE000E400 -<br>0xE000E41F | NVIC_IPR0 -<br>NVIC_IPR59  | RW   | 0x00000000 | Interrupt Priority Register                     |

The following sections describe the NVIC registers whose implementation is specific to this processor. Other registers are described in the *ARMv7M Architecture Reference Manual*.

### 6.3.1 Interrupt Controller Type Register, ICTR

The ICTR characteristics are:


**Purpose** Shows the number of interrupt lines that the NVIC supports.

**Usage Constraints** There are no usage constraints.

**Configurations** This register is available in all processor configurations.

**Attributes** See the register summary in Table 6-1.

Figure 6-1 shows the ICTR bit assignments.

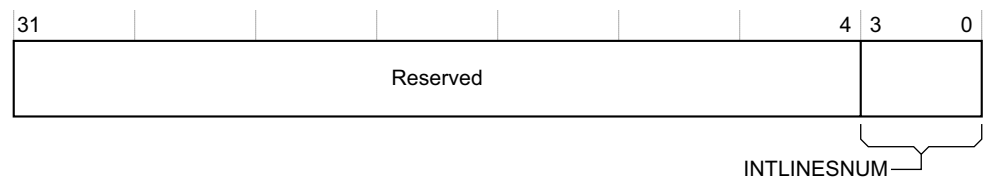

**Figure 6-1 ICTR bit assignments**

Table 6-2 shows the ICTR bit assignments.

**Table 6-2 ICTR bit assignments**

| Bits   | Name        | Function  |
|--------|-------------|---|
| [31:4] | -           | Reserved.   |
| [3:0]  | INTLINESNUM | Total number of interrupt lines in groups of 32:<br>b0000 = 0...32<br>b0001 = 33...64<br>b0010 = 65...96<br>b0011 = 97...128<br>b0100 = 129...160<br>b0101 = 161...192<br>b0110 = 193...224<br>b0111 = 225...256 <sup>a</sup> |

a. The processor supports a maximum of 240 external interrupts.



# Chapter 7

## Debug

This chapter describes how to debug and test software running on the processor. It contains the following sections:

- *About debug* on page 7-2
- *About the AHB-AP* on page 7-6
- *About the Flash Patch and Breakpoint Unit (FPB)* on page 7-9.

## 7.1 About debug

The processor implementation determines the debug configuration, including whether debug is implemented. If the processor does not implement debug, no ROM table is present and the halt, breakpoint, and watchpoint functionality is not present.


Basic debug functionality includes processor halt, single-step, processor core register access, Vector Catch, unlimited software breakpoints, and full system memory access. See the *ARMv7-M Architectural Reference Manual* for more information.

The debug option might include:

- a breakpoint unit supporting 2 literal comparators and 6 instruction comparators, or only 2 instruction comparators
- a watchpoint unit supporting 1 or 4 watchpoints.

For processors that implement debug, ARM recommends that a debugger identify and connect to the debug components using the CoreSight debug infrastructure.

Figure 7-1 shows the recommended flow that a debugger can follow to discover the components in the CoreSight debug infrastructure. In this case a debugger reads the peripheral and component ID registers for each CoreSight component in the CoreSight system.

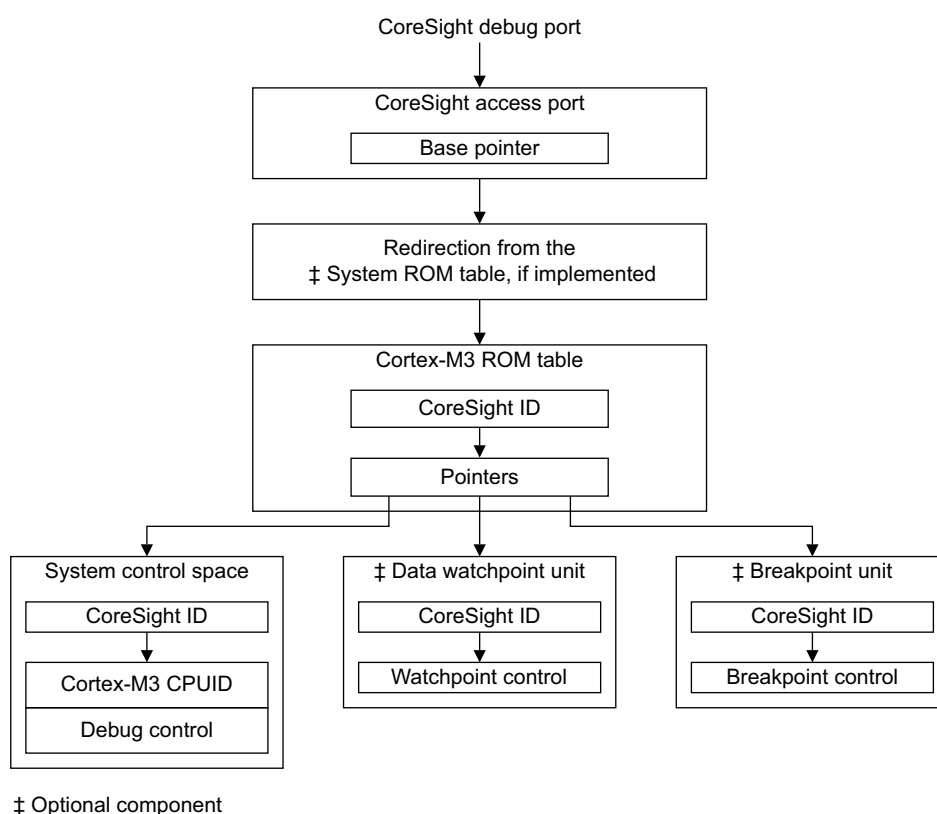

**Figure 7-1 CoreSight discovery**

To identify the Cortex-M3 processor within the CoreSight system, ARM recommends that a debugger perform the following actions:

1. Locate and identify the Cortex-M3 ROM table using its CoreSight identification. See Table 7-1 on page 7-3 for more information.

2. Follow the pointers in that Cortex-M3 ROM table:
  - a. *System Control Space* (SCS)
  - b. *Breakpoint unit* (BPU)
  - c. *Data watchpoint unit* (DWT).

See Table 7-2 for more information.

When a debugger identifies the SCS from its CoreSight identification, it can identify the processor and its revision number from the CPUID register in the SCS at address `0xE000ED00`.

A debugger cannot rely on the Cortex-M3 ROM table being the first ROM table encountered. One or more system ROM tables are required between the access port and the Cortex-M3 ROM table if other CoreSight components are in the system. If a system ROM table is present, this can include a unique identifier for the implementation.

### 7.1.1 Cortex-M3 ROM table identification and entries

Table 7-1 shows the ROM table identification registers and values for debugger detection. This permits debuggers to identify the processor and its debug capabilities.

#### ———— Note ————

The Cortex-M3 ROM table only supports word size transactions.

**Table 7-1 Cortex-M3 ROM table identification values**

| Address   | Register       | Value      | Description  |
|-----------|----------------|------------|--|
| 0xE00FFD0 | Peripheral ID4 | 0x00000000 | <i>Component and Peripheral ID register formats in the ARMv7-M Architectural Reference Manual</i>  |
| 0xE00FFE0 | Peripheral ID0 | 0x00000000 |  |
| 0xE00FFE4 | Peripheral ID1 | 0x00000000 | ———— <b>Note</b> ————<br>• These are the default values for the Peripheral ID registers if the ROM table has not been configured at implementation. Your implementation might use these registers to identify the manufacturer and part number for the device.<br>• The Component ID registers identify this as a CoreSight ROM table. |
| 0xE00FFE8 | Peripheral ID2 | 0x00000000 |  |
| 0xE00FFEC | Peripheral ID3 | 0x00000000 |  |
| 0xE00FFF0 | Component ID0  | 0x0000000D |  |
| 0xE00FFF4 | Component ID1  | 0x00000010 |  |
| 0xE00FFF8 | Component ID2  | 0x00000005 |  |
| 0xE00FFFC | Component ID3  | 0x000000B1 |  |

Table 7-2 shows the CoreSight components that the Cortex-M3 ROM table points to. The values depend on the implemented debug configuration.

**Table 7-2 Cortex-M3 ROM table components**

| Address    | Component | Value                   | Description                                 |
|------------|-----------|-------------------------|---|
| 0xE00FF000 | SCS       | 0xFFF0F003              | See <i>System Control Space</i> on page 7-4 |
| 0xE00FF004 | DWT       | 0xFFF02003 <sup>a</sup> | See Table 8-1 on page 8-4                   |
| 0xE00FF008 | FPB       | 0xFFF03003 <sup>b</sup> | See Table 7-7 on page 7-10                  |
| 0xE00FF00C | ITM       | 0xFFF01003 <sup>c</sup> | See Table 9-1 on page 9-4                   |

**Table 7-2 Cortex-M3 ROM table components (continued)**

| Address    | Component     | Value                    | Description  |
|------------|---------------|--------------------------|--|
| 0xE00FF010 | TPIU          | 0xFFFF41003 <sup>d</sup> | See Table 11-1 on page 11-5  |
| 0xE00FF014 | ETM           | 0xFFFF42003 <sup>e</sup> | See Chapter 10 <i>Embedded Trace Macrocell</i> .   |
| 0xE00FF018 | End marker    | 0x00000000               | See <i>DAP accessible ROM table</i> in the <i>ARMv7-M Architectural Reference Manual</i> |
| 0xE00FF0CC | SYSTEM ACCESS | 0x00000001               |  |

- a. Reads as 0xFFFF02002 if no watchpoints are implemented.
- b. Reads as 0xFFFF03002 if no breakpoints are implemented.
- c. Reads as 0xFFFF01002 if no ITM is implemented.
- d. Reads as 0xFFFF41002 if no TPIU is implemented.
- e. Reads as 0xFFFF42002 if no ETM is implemented.

The ROM table entries point to the debug components of the processor. The offset for each entry is the offset of that component from the ROM table base address, 0xE00FF000.

See the *ARMv7-M Architectural Reference Manual* and the *ARM CoreSight Components Technical Reference Manual* for more information about the ROM table ID and component registers, and their addresses and access types.

### 7.1.2 System Control Space

If debug is implemented, the processor provides debug through registers in the SCS. See:

- *Debug register summary* on page 7-5
- *System address map* on page 3-11.

#### SCS CoreSight identification

Table 7-3 shows the SCS CoreSight identification registers and values for debugger detection. Final debugger identification of the Cortex-M3 processor is through the CPUID register in the SCS. See *CPUID Base Register, CPUID* on page 4-5.

**Table 7-3 SCS identification values**

| Address   | Register       | Value      | Description  |
|-----------|----------------|------------|--|
| 0xE00EFD0 | Peripheral ID4 | 0x00000004 | <i>Component and Peripheral ID register formats</i> in the <i>ARMv7-M Architectural Reference Manual</i> |
| 0xE00EFE0 | Peripheral ID0 | 0x0000000C |  |
| 0xE00EFE4 | Peripheral ID1 | 0x000000B0 |  |
| 0xE00EFE8 | Peripheral ID2 | 0x0000000B |  |
| 0xE00EFEC | Peripheral ID3 | 0x00000000 |  |
| 0xE00EFF0 | Component ID0  | 0x0000000D |  |
| 0xE00EFF4 | Component ID1  | 0x000000E0 |  |
| 0xE00EFF8 | Component ID2  | 0x00000005 |  |
| 0xE00EFFC | Component ID3  | 0x000000B1 |  |

See the *ARMv7-M Architectural Reference Manual* and the *ARM CoreSight Components Technical Reference Manual* for more information about the SCS CoreSight identification registers, and their addresses and access types.

### 7.1.3 Debug register summary

Table 7-4 shows the debug registers. Each of these registers is 32 bits wide and is described in the *ARMv7-M Architectural Reference Manual*.

**Table 7-4 Debug registers**

| Address    | Name  | Type | Reset                   | Description                                  |
|------------|-------|------|-------------------------|--|
| 0xE000ED30 | DFSR  | RW   | 0x00000000 <sup>a</sup> | Debug Fault Status Register                  |
| 0xE000EDF0 | DHCSR | RW   | 0x00000000              | Debug Halting Control and Status Register    |
| 0xE000EDF4 | DCRSR | WO   | -                       | Debug Core Register Selector Register        |
| 0xE000EDF8 | DCRDR | RW   | -                       | Debug Core Register Data Register            |
| 0xE000EDFC | DEMCR | RW   | 0x00000000              | Debug Exception and Monitor Control Register |

a. Power-on reset only

Core debug is an optional component. If core debug is removed then halt mode debugging is not supported, and there is no halt, stepping, or register transfer functionality. Debug monitor mode is still supported.

## 7.2 About the AHB-AP

The AHB-AP is a *Memory Access Port* (MEM-AP) as defined in the *ARM Debug Interface v5 Architecture Specification*. The AHB-AP is an optional debug access port into the Cortex-M3 system, and provides access to all memory and registers in the system, including processor registers through the SCS. System access is independent of the processor status. Either SW-DP or SWJ-DP is used to access the AHB-AP.

The AHB-AP is a master into the Bus Matrix. Transactions are made using the AHB-AP programmers model, which generates AHB-Lite transactions into the Bus Matrix.

### 7.2.1 AHB-AP transaction types

The AHB-AP does not perform back-to-back transactions on the bus, and so all transactions are non-sequential. The AHB-AP can perform unaligned and bit-band transactions. The Bus Matrix handles these. The AHB-AP transactions are not subject to MPU lookups. AHB-AP transactions bypass the FPB, and so the FPB cannot remap AHB-AP transactions.

AHB-AP transactions are little-endian.

### 7.2.2 AHB-AP programmers model

Table 7-5 shows the AHB-AP registers. If the AHB-AP is not present, these registers read as zero. Any register that is not specified in this table reads as zero.

**Table 7-5 AHB-AP register summary**

| Offset <sup>a</sup> | Name    | Type | Reset        | Description                                  |
|---------------------|---------|------|--------------|--|
| 0x00                | CSW     | RW   | See register | AHB-AP Control and Status Word Register, CSW |
| 0x04                | TAR     | RW   | -            | AHB-AP Transfer Address Register             |
| 0x0C                | DRW     | RW   | -            | AHB-AP Data Read/Write Register              |
| 0x10                | BD0     | RW   | -            | AHB-AP Banked Data Register0                 |
| 0x14                | BD1     | RW   | -            | AHB-AP Banked Data Register1                 |
| 0x18                | BD2     | RW   | -            | AHB-AP Banked Data Register2                 |
| 0x1C                | BD3     | RW   | -            | AHB-AP Banked Data Register3                 |
| 0xF8                | DBGDRAR | RO   | 0xE00FF003   | AHB-AP ROM Address Register                  |
| 0xFC                | IDR     | RO   | 0x24770011   | AHB-AP Identification Register               |

a. The offset given in this table is relative to the location of the AHB-AP in the DAP memory space. This space is only visible from the access port. It is not part of the processor memory map.

The following sections describe the AHB-AP registers whose implementation is specific to this processor. Other registers are described in the *CoreSight Components Technical Reference Manual*.

#### AHB-AP Control and Status Word Register, CSW

The CSW characteristics are:


**Purpose** Configures and controls transfers through the AHB interface.

**Usage constraints** There are no usage constraints.

**Configurations** This register is available in all processor configurations.

**Attributes** See the register summary in Table 7-5 on page 7-6.

Figure 7-2 shows the CSW bit assignments.

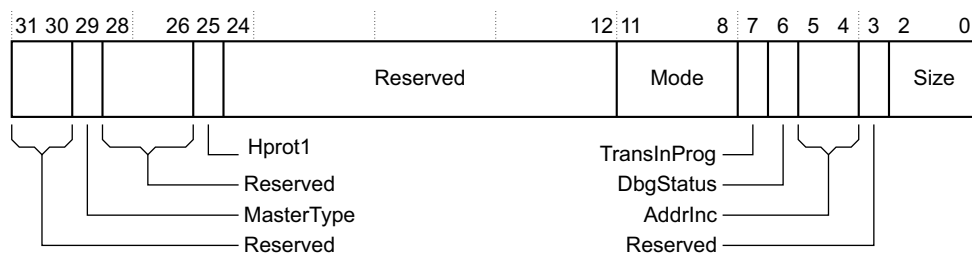

**Figure 7-2 CSW bit assignments**

Table 7-6 shows the CSW bit assignments.

**Table 7-6 CSW bit assignments**

| Bits    | Name                    | Function  |
|---------|-------------------------|---|
| [31:30] | -                       | Reserved. Read as 0b00.   |
| [29]    | MasterType <sup>a</sup> | 0 = core.<br>1 = debug.<br>This bit must not be changed if a transaction is outstanding. A debugger must first check bit [7], TransInProg.<br>Reset value = 0b1.<br>An implementation can configure this bit to be read only with a value of 1. In that case, transactions are always indicated as debug. |
| [28:26] | -                       | Reserved, 0b000.  |
| [25]    | Hprot1                  | User and Privilege control - HPROT[1].<br>Reset value = 0b1.  |
| [24]    | -                       | Reserved, 0b1.  |
| [23:12] | -                       | Reserved, 0x000.  |
| [11:8]  | Mode                    | Mode of operation bits:<br>b0000 = normal download and upload mode<br>b0001-b1111 are reserved.<br>Reset value = 0b0000.  |
| [7]     | TransInProg             | Transfer in progress. This field indicates if a transfer is in progress on the APB master port.   |
| [6]     | DbgStatus               | Indicates the status of the DAPEN port.<br>1 = AHB transfers permitted.<br>0 = AHB transfers not permitted.   |

Table 7-6 CSW bit assignments (continued)

| Bits  | Name    | Function   |
|-------|---------|--|
| [5:4] | AddrInc | <p>Auto address increment and pack mode on Read or Write data access. Only increments if the current transaction completes with no error.</p> <p>Auto address incrementing and packed transfers are not performed on access to Banked Data registers 0x10 - 0x1C. The status of these bits is ignored in these cases.</p> <p>Increments and wraps within a 4-KB address boundary, for example from 0x1000 to 0x1FFC. If the start is at 0x14A0, then the counter increments to 0x1FFC, wraps to 0x1000, then continues incrementing to 0x149C.</p> <p>0b00 = auto increment off.</p> <p>0b01 = increment single. Single transfer from corresponding byte lane.</p> <p>0b10 = increment packed.<sup>b</sup></p> <p>0b11 = reserved. No transfer.</p> <p>Size of address increment is defined by the Size field [2:0].</p> <p>Reset value: 0b00.</p> |
| [3]   | -       | Reserved.  |
| [2:0] | Size    | <p>Size of access field:</p> <p>b000 = 8 bits</p> <p>b001 = 16 bits</p> <p>b010 = 32 bits</p> <p>b011-111 are reserved.</p> <p>Reset value: b000.</p>  |

- a. When clear, this bit prevents the debugger from setting the C\_DEBUGEN bit in the Debug Halting Control and Status Register, and so prevents the debugger from being able to halt the processor.
- b. See the definition of packed transfers in the *ARM Debug Interface v5 Architecture Specification*.



## 7.3 About the Flash Patch and Breakpoint Unit (FPB)

The FPB:

- implements hardware breakpoints
- patches code and data from code space to system space.

A full FPB unit contains:

- Two literal comparators for matching against literal loads from Code space, and remapping to a corresponding area in System space.
- Six instruction comparators for matching against instruction fetches from Code space, and remapping to a corresponding area in System space. Alternatively, you can configure the comparators individually to return a *Breakpoint Instruction* (BKPT) to the processor core on a match, to provide hardware breakpoint capability.

A reduced FPB unit contains:

- Two instruction comparators. You can configure each comparator individually to return a Breakpoint Instruction to the processor on a match, to provide hardware breakpoint capability.

### 7.3.1 FPB functional description

The FPB contains both a global enable and individual enables for the eight comparators. If the comparison for an entry matches, the address is either

- remapped to the address set in the remap register plus an offset corresponding to the comparator that matched
- remapped to a BKPT instruction if that feature is enabled.

The comparison happens dynamically, but the result of the comparison occurs too late to stop the original instruction fetch or literal load taking place from the Code space. The processor ignores this transaction however, and only the remapped transaction is used.

If an MPU is present, the MPU lookups are performed for the original address, not the remapped address.

You can remove the FPB if no debug is required, or you can reduce the number of breakpoints it supports to two. If the FPB supports only two breakpoints then only comparators 0 and 1 are used, and the FPB does not support flash patching.

---

#### Note

- Unaligned literal accesses are not remapped. The original access to the DCode bus takes place in this case.
  - Load exclusive accesses can be remapped. However, it is UNPREDICTABLE whether they are performed as exclusive accesses or not.
  - Setting the flash patch remap location to a bit-band alias is not supported and results in UNPREDICTABLE behavior.
-

### 7.3.2 FPB programmers model

Table 7-7 shows the FPB registers. Depending on the implementation of your processor, some of these registers might not be present. Any register that is configured as not present reads as zero.

**Table 7-7 FPB register summary**

| Address    | Name     | Type | Reset             | Description                         |
|------------|----------|------|-------------------|-------------------------------------|
| 0xE0002000 | FP_CTRL  | RW   | 0x130             | FlashPatch Control Register         |
| 0xE0002004 | FP_REMAP | RW   | -                 | FlashPatch Remap Register           |
| 0xE0002008 | FP_COMP0 | RW   | 1'b0 <sup>a</sup> | FlashPatch Comparator Register0     |
| 0xE000200C | FP_COMP1 | RW   | 1'b0              | FlashPatch Comparator Register1     |
| 0xE0002010 | FP_COMP2 | RW   | 1'b0              | FlashPatch Comparator Register2     |
| 0xE0002014 | FP_COMP3 | RW   | 1'b0              | FlashPatch Comparator Register3     |
| 0xE0002018 | FP_COMP4 | RW   | 1'b0              | FlashPatch Comparator Register4     |
| 0xE000201C | FP_COMP5 | RW   | 1'b0              | FlashPatch Comparator Register5     |
| 0xE0002020 | FP_COMP6 | RW   | 1'b0              | FlashPatch Comparator Register6     |
| 0xE0002024 | FP_COMP7 | RW   | 1'b0              | FlashPatch Comparator Register7     |
| 0xE0002FD0 | PID4     | RO   | 0x04              | Peripheral identification registers |
| 0xE0002FD4 | PID5     | RO   | 0x00              |                                     |
| 0xE0002FD8 | PID6     | RO   | 0x00              |                                     |
| 0xE0002FDC | PID7     | RO   | 0x00              |                                     |
| 0xE0002FE0 | PID0     | RO   | 0x03              |                                     |
| 0xE0002FE4 | PID1     | RO   | 0xB0              |                                     |
| 0xE0002FE8 | PID2     | RO   | 0x2B              |                                     |
| 0xE0002FEC | PID3     | RO   | 0x00              |                                     |
| 0xE0002FF0 | CID0     | RO   | 0x0D              | Component identification registers  |
| 0xE0002FF4 | CID1     | RO   | 0xE0              |                                     |
| 0xE0002FF8 | CID2     | RO   | 0x05              |                                     |
| 0xE0002FFC | CID3     | RO   | 0xB1              |                                     |

a. For FP\_COMP0 to FP\_COMP7, bit 0 is reset to 0. Other bits in these registers are not reset.

All FPB registers are described in the *ARMv7-M Architecture Reference Manual*.

# Chapter 8

## Data Watchpoint and Trace Unit

This chapter describes the *Data Watchpoint and Trace* (DWT) unit. It contains the following sections:

- *About the DWT* on page 8-2
- *DWT functional description* on page 8-3
- *DWT Programmers Model* on page 8-4.

## **8.1 About the DWT**

The DWT is an optional debug unit that provides watchpoints, data tracing, and system profiling for the processor.

## 8.2 DWT functional description

A full DWT contains four comparators that you can configure as

- a hardware watchpoint
- an ETM trigger
- a PC sampler event trigger
- a data address sampler event trigger.

The first comparator, DWT\_COMP0, can also compare against the clock cycle counter, CYCCNT. You can also use the second comparator, DWT\_COMP1, as a data comparator.

A reduced DWT contains one comparator that you can use as a watchpoint or as a trigger. It does not support data matching.

The DWT if present contains counters for:

- clock cycles (CYCCNT)
- folded instructions
- *Load Store Unit* (LSU) operations
- sleep cycles
- CPI, that is all instruction cycles except for the first cycle
- interrupt overhead.

---

**Note**

---

An event is generated each time a counter overflows.

---

You can configure the DWT to generate PC samples at defined intervals, and to generate interrupt event information.

The DWT provides periodic requests for protocol synchronization to the ITM and the TPIU, if your implementation includes the Cortex-M3 TPIU.

### 8.3 DWT Programmers Model

Table 8-1 lists the DWT registers. Depending on the implementation of your processor, some of these registers might not be present. Any register that is configured as not present reads as zero.

**Table 8-1 DWT register summary**

| Address    | Name          | Type | Reset            | Description                         |
|------------|---------------|------|------------------|-------------------------------------|
| 0xE0001000 | DWT_CTRL      | RW   | See <sup>a</sup> | Control Register                    |
| 0xE0001004 | DWT_CYCCNT    | RW   | 0x00000000       | Cycle Count Register                |
| 0xE0001008 | DWT_CPICNT    | RW   | -                | CPI Count Register                  |
| 0xE000100C | DWT_EXCCNT    | RW   | -                | Exception Overhead Count Register   |
| 0xE0001010 | DWT_SLEEPCNT  | RW   | -                | Sleep Count Register                |
| 0xE0001014 | DWT_LSUCNT    | RW   | -                | LSU Count Register                  |
| 0xE0001018 | DWT_FOLDCNT   | RW   | -                | Folded-instruction Count Register   |
| 0xE000101C | DWT_PCSR      | RO   | -                | Program Counter Sample Register     |
| 0xE0001020 | DWT_COMP0     | RW   | -                | Comparator Register0                |
| 0xE0001024 | DWT_MASK0     | RW   | -                | Mask Register0                      |
| 0xE0001028 | DWT_FUNCTION0 | RW   | 0x00000000       | Function Register0                  |
| 0xE0001030 | DWT_COMP1     | RW   | -                | Comparator Register1                |
| 0xE0001034 | DWT_MASK1     | RW   | -                | Mask Register1                      |
| 0xE0001038 | DWT_FUNCTION1 | RW   | 0x00000000       | Function Register1                  |
| 0xE0001040 | DWT_COMP2     | RW   | -                | Comparator Register2                |
| 0xE0001044 | DWT_MASK2     | RW   | -                | Mask Register2                      |
| 0xE0001048 | DWT_FUNCTION2 | RW   | 0x00000000       | Function Register2                  |
| 0xE0001050 | DWT_COMP3     | RW   | -                | Comparator Register3                |
| 0xE0001054 | DWT_MASK3     | RW   | -                | Mask Register3                      |
| 0xE0001058 | DWT_FUNCTION3 | RW   | 0x00000000       | Function Register3                  |
| 0xE0001FD0 | PID4          | RO   | 0x04             | Peripheral identification registers |
| 0xE0001FD4 | PID5          | RO   | 0x00             |                                     |
| 0xE0001FD8 | PID6          | RO   | 0x00             |                                     |
| 0xE0001FDC | PID7          | RO   | 0x00             |                                     |
| 0xE0001FE0 | PID0          | RO   | 0x02             |                                     |
| 0xE0001FE4 | PID1          | RO   | 0xB0             |                                     |
| 0xE0001FE8 | PID2          | RO   | 0x3B             |                                     |
| 0xE0001FEC | PID3          | RO   | 0x00             |                                     |

Table 8-1 DWT register summary (continued)

| Address    | Name | Type | Reset | Description                        |
|------------|------|------|-------|------------------------------------|
| 0xE0001FF0 | CID0 | RO   | 0x00  | Component identification registers |
| 0xE0001FF4 | CID1 | RO   | 0xE0  |                                    |
| 0xE0001FF8 | CID2 | RO   | 0x05  |                                    |
| 0xE0001FFC | CID3 | RO   | 0xB1  |                                    |

a. Possible reset values are:

0x40000000 if four comparators for watchpoints and triggers are present

0x4F000000 if four comparators for watchpoints only are present

0x10000000 if only one comparator is present

0x1F000000 if one comparator for watchpoints and not triggers is present

0x00000000 if DWT is not present.

DWT registers are described in the *ARMv7M Architecture Reference Manual*. Peripheral Identification. Component Identification registers are described in the *ARM CoreSight Components Technical Reference Manual*.

———— **Note** ————

- Cycle matching functionality is only available in comparator 0.
- Data matching functionality is only available in comparator 1.
- Data value is only sampled for accesses that do not produce an MPU or bus fault. The PC is sampled irrespective of any faults. The PC is only sampled for the first address of a burst.
- The FUNCTION field in the DWT\_FUNCTION1 register is overridden for comparators given by DATAVADDR0 and DATAVADDR1 if DATAVMATCH is also set in DWT\_FUNCTION1. The comparators given by DATAVADDR0 and DATAVADDR1 can then only perform address comparator matches for comparator 1 data matches.
- If the data matching functionality is not included during implementation it is not possible to set DATAVADDR0, DATAVADDR1, or DATAVMATCH in DWT\_FUNCTION1. This means that the data matching functionality is not available in the implementation. Test the availability of data matching by writing and reading the DATAVMATCH bit in DWT\_FUNCTION1. If this bit cannot be set then data matching is unavailable.
- PC match is not recommended for watchpoints because it stops after the instruction. It mainly guards and triggers the ETM.

# Chapter 9

## Instrumentation Trace Macrocell Unit

This chapter describes the *Instrumentation Trace Macrocell* (ITM) unit. It contains the following sections:

- *About the ITM* on page 9-2
- *ITM functional description* on page 9-3
- *ITM programmers model* on page 9-4.



## **9.1 About the ITM**

The ITM is a an optional application-driven trace source that supports printf style debugging to trace operating system and application events, and generates diagnostic system information.

## 9.2 ITM functional description

The ITM generates trace information as packets. Multiple sources can generate packets. If multiple sources generate packets at the same time, the ITM arbitrates the order in which packets are output. These sources in decreasing order of priority are:

- Software trace. Software can write directly to ITM stimulus registers to generate packets.
- Hardware trace. The DWT generates these packets, and the ITM outputs them.
- Time stamping. Timestamps are generated relative to packets. The ITM contains a 21-bit counter to generate the timestamp. The Cortex-M3 clock or the bitclock rate of the *Serial Wire Viewer* (SWV) output clocks the counter.

### 9.3 ITM programmers model

Table 9-1 shows the ITM registers. Depending on the implementation of your processor, the ITM registers might not be present. Any register that is configured as not present reads as zero.

———— **Note** ————

- You must enable TRCENA of the Debug Exception and Monitor Control Register before you program or use the ITM.
- If the ITM stream requires synchronization packets, you must configure the synchronization packet rate in the DWT.

**Table 9-1 ITM register summary**

| Address                   | Name                     | Type | Reset      | Description  |
|---------------------------|--------------------------|------|------------|--|
| 0xE0000000-<br>0xE000007C | ITM_STIM0-<br>ITM_STIM31 | RW   | -          | Stimulus Port Registers 0-31                             |
| 0xE0000E00                | ITM_TER                  | RW   | 0x00000000 | Trace Enable Register                                    |
| 0xE0000E40                | ITM_TPR                  | RW   | 0x00000000 | <i>ITM Trace Privilege Register; ITM_TPR on page 9-5</i> |
| 0xE0000E80                | ITM_TCR                  | RW   | 0x00000000 | Trace Control Register                                   |
| 0xE0000FD0                | PID4                     | RO   | 0x00000004 | Peripheral Identification registers                      |
| 0xE0000FD4                | PID5                     | RO   | 0x00000000 |  |
| 0xE0000FD8                | PID6                     | RO   | 0x00000000 |  |
| 0xE0000FDC                | PID7                     | RO   | 0x00000000 |  |
| 0xE0000FE0                | PID0                     | RO   | 0x00000001 |  |
| 0xE0000FE4                | PID1                     | RO   | 0x000000B0 |  |
| 0xE0000FE8                | PID2                     | RO   | 0x0000003B |  |
| 0xE0000FEC                | PID3                     | RO   | 0x00000000 |  |
| 0xE0000FF0                | CID0                     | RO   | 0x0000000D | Component Identification registers                       |
| 0xE0000FF4                | CID1                     | RO   | 0x000000E0 |  |
| 0xE0000FF8                | CID2                     | RO   | 0x00000005 |  |
| 0xE0000FFC                | CID3                     | RO   | 0x000000B1 |  |

———— **Note** ————

ITM registers are fully accessible in privileged mode. In user mode, all registers can be read, but only the Stimulus Registers and Trace Enable Registers can be written, and only when the corresponding Trace Privilege Register bit is set. Invalid user mode writes to the ITM registers are discarded.


The following sections describes the ITM registers whose implementation is specific to this processor. Other registers are described in the *ARMv7-M Architectural Reference Manual*.

### 9.3.1 ITM Trace Privilege Register, ITM\_TPR

The ITM\_TPR characteristics are:

- Purpose** Enables an operating system to control the stimulus ports that are accessible by user code.
- Usage constraints** You can only write to this register in privileged mode.
- Configurations** This register is available if the ITM is configured in your implementation.
- Attributes** See Table 9-1 on page 9-4.

Figure 9-1 shows the ITM\_TPR bit assignments.

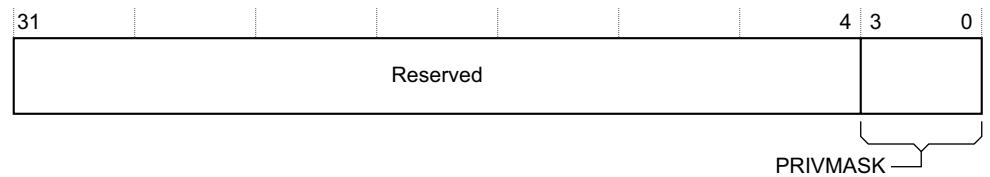

**Figure 9-1 ITM\_TPR bit assignments**

Table 9-2 shows the ITM\_TPR bit assignments.

**Table 9-2 ITM\_TPR bit assignments**

| Bits   | Name     | Function  |
|--------|----------|---|
| [31:4] | -        | Reserved.   |
| [3:0]  | PRIVMASK | Bit mask to enable tracing on ITM stimulus ports:<br>bit [0] = stimulus ports [7:0]<br>bit [1] = stimulus ports [15:8]<br>bit [2] = stimulus ports [23:16]<br>bit [3] = stimulus ports [31:24]. |

# Chapter 10

## Embedded Trace Macrocell

This chapter describes the *Embedded Trace Macrocell* (ETM). It contains the following sections:

- *About the ETM* on page 10-2
- *ETM functional description* on page 10-3
- *ETM Programmers model* on page 10-9.

## 10.1 About the ETM

The ETM is an optional debug component that enables reconstruction of program execution. The ETM is designed to be a high-speed, low-power debug tool that only supports instruction trace. This ensures that area is minimized, and that gate count is reduced.

The ETM implements ARM ETM architecture v3.4. See the *ARM Embedded Trace Macrocell Architecture Specification*.

The ETM traces all 32-bit Thumb instructions as a single instruction. The ETM traces instructions following an IT instruction as normal conditional instructions. The decompressor does not need to refer to the IT instruction.

You can use the CoreSight ETM-M3 either with the Cortex-M3 *Trace Port Interface Unit* (M3-TPIU), or as part of a CoreSight system.

### 10.1.1 Features

ETM-M3 provides:

- tracing of 16-bit and 32-bit Thumb instructions
- four EmbeddedICE watchpoint inputs
- a Trace Start/Stop block with EmbeddedICE inputs
- two external inputs
- a 24-byte FIFO queue.

See the *Embedded Trace Macrocell Architecture Specification* for information about:

- the trace protocol
- controlling tracing using triggering and filtering resources.

See the *Cortex-M3 Integration and Implementation Manual* for information about the macrocell signals.


### 10.1.2 Configurable options

The ETM-M3 macrocell includes the following configuration inputs:

- the maximum number of external inputs, see *External inputs* on page 10-6
- whether the system supports the FIFOFULL mechanism for stalling the processor, see Table 10-1 on page 10-4.

## 10.2 ETM functional description

Figure 10-1 shows a block diagram of the ETM, and shows how the ETM interfaces to the Trace Port Interface Unit (TPIU).

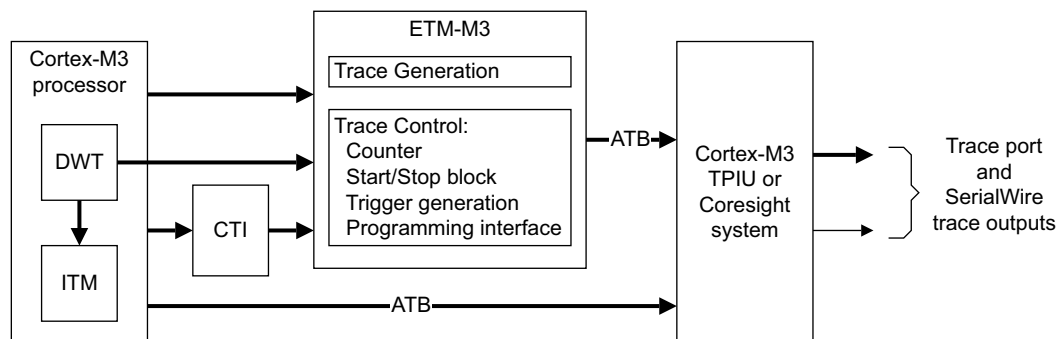

**Figure 10-1 ETM block diagram**

The Cortex-M3 system can perform low-bandwidth data tracing using the *Data Watchpoint and Trace (DWT)* and *Instruction Trace Macrocell (ITM)* components.

The ETM trace output is compatible with the *AMBA Trace Bus (ATB)* protocol, irrespective of the configuration of the trace port size and trace port mode within the ETM programmers model. The TPIU exports trace information from the processor. An implementation can replace the TPIU with other CoreSight trace components.

For more information see:

- Chapter 8 *Data Watchpoint and Trace Unit*
- Chapter 9 *Instrumentation Trace Macrocell Unit*
- Chapter 11 *Trace Port Interface Unit*
- *Embedded Trace Macrocell Architecture Specification*.

The ETM provides a trace ID register for systems that use multiple trace sources. You must configure this register even if only a single trace source is in use.

The following sections provide information on features of the ETM:

- *Resources*
- *Periodic synchronization* on page 10-6
- *Data and instruction address compare resources* on page 10-6
- *External inputs* on page 10-6
- *Start/stop block* on page 10-6
- *Triggering* on page 10-6
- *Interfaces* on page 10-7
- *Operation* on page 10-8.

### 10.2.1 Resources

Because the ETM does not generate data trace information, the lower bandwidth reduces the requirement for complex triggering capabilities. This means that the ETM only includes a small sub-set of the possible resources allowed by the ETM architecture.

Table 10-1 lists the Cortex-M3 resources.

**Table 10-1 Cortex-M3 resources**

| <b>Feature</b>                                   | <b>Present on ETM-M3</b>                 |
|--|--|
| Architecture version                             | ETMv3.4                                  |
| Address comparator pairs                         | 0  |
| Data comparators                                 | 0  |
| Context ID comparators                           | 0  |
| <i>Memory Map Decoders (MMDs)</i>                | 0  |
| Counters   | 0  |
| Sequencer  | No                                       |
| Start/stop block                                 | Yes                                      |
| Embedded ICE comparators                         | 4  |
| External inputs                                  | 2  |
| External outputs                                 | 0  |
| Extended external inputs                         | 0  |
| Extended external input selectors                | 0  |
| FIFOFULL   | Yes                                      |
| FIFOFULL level setting                           | Yes                                      |
| Branch broadcasting                              | Yes                                      |
| ASIC Control Register                            | No                                       |
| Data suppression                                 | No                                       |
| Software access to registers                     | Yes                                      |
| Readable registers                               | Yes                                      |
| FIFO size  | 24 bytes                                 |
| Minimum port size                                | 8 bits                                   |
| Maximum port size                                | 8 bits                                   |
| Normal port mode                                 | -  |
| Normal half-rate clocking, 1:1                   | Yes - asynchronous                       |
| Demux port mode                                  | -  |
| Demux half-rate clocking, 1:2                    | No                                       |
| Mux port mode, 2:1                               | No                                       |
| 1:4 port mode                                    | No                                       |
| Dynamic port mode, including stalling            | No. Supported by asynchronous port mode. |
| <i>Coprocessor Register Transfer (CPRT) data</i> | No                                       |



**Table 10-1 Cortex-M3 resources (continued)**

| Feature           | Present on ETM-M3 |
|-------------------|-------------------|
| Load PC first     | No                |
| Fetch comparisons | No                |
| Load data traced  | No                |

### Resource identification encoding

You configure the trace enable event and trigger event using the same mechanism. For each event, a 17-bit register is used to define the event. This register provides:

- Resource A, bits [6:0]
- Resource B, bits [13:7]
- a Boolean function, bits [16:14].

Table 10-2 shows the encodings used for the Boolean function.

**Table 10-2 Boolean function encoding for events**

| Encoding | Function           |
|----------|--------------------|
| b000     | A                  |
| b001     | NOT(A)             |
| b010     | A AND B            |
| b011     | NOT(A) AND B       |
| b100     | NOT(A) AND NOT (B) |
| b101     | A OR B             |
| b110     | NOT (A) OR B       |
| b111     | NOT (A) OR NOT (B) |

Table 10-3 shows the encodings used for Resource identification.

**Table 10-3 Resource identification encoding**

| Resource type <sup>a</sup> | Index range <sup>b</sup> | Description of resource type |
|----------------------------|--------------------------|------------------------------|
| b010                       | 0-3                      | DWT Comparator inputs (0-3)  |
| b100                       | 0                        | Counter 1 at zero            |
| b101                       | 15                       | Trace Start/Stop resource    |
| b110                       | 0-1                      | ExtIn (0-1)                  |
| b110                       | 15                       | HardWired (always True)      |

a. For Resource A, bits [6:4]. For Resource B, bits [13:11]

b. For Resource A, bits [3:0]. For Resource B, bits [10:7].

## 10.2.2 Periodic synchronization

The ETM uses a fixed synchronization packet generation frequency of every 1024 bytes of trace.

## 10.2.3 Data and instruction address compare resources

The DWT provides four address comparators on the data bus that provide debug functionality. Within the DWT unit, you can specify the functions triggered by a match, and one of these functions is to generate an ETM match input. These inputs are presented to the ETM as Embedded *In Circuit Emulator* (ICE) comparator inputs.

A single DWT resource can trigger an ETM event and also generate instrumentation trace directly from the same event.

You can configure the four DWT comparators individually to compare with the address of the current executing instruction to permit the ETM access to an instruction address compare resource. These inputs are presented to the ETM as Embedded ICE comparator inputs. The DWT provides either 1 or 4 comparators, depending on the implementation of the processor.

———— **Note** —————

Using a DWT comparator as an instruction address comparator reduces the number of available data address comparisons.

See Chapter 8 *Data Watchpoint and Trace Unit* for more information about the DWT unit.

## 10.2.4 External inputs

Two external inputs, **ETMEXTIN[1:0]**, enable additional components to generate trigger and enable signals for the ETM.

## 10.2.5 Start/stop block

The start/stop block provides a single-bit resource that can be used as an input to other parts of the resource logic, including the trace enable logic. The start/stop block can only be controlled by using the EmbeddedICE inputs to the ETM. The DWT controls these inputs.

The start/stop block is set to the start state if any of the EmbeddedICE watchpoint inputs selected as start resources in **ETMTESSEICR** go HIGH. The start/stop block is set to the stop state if any of the EmbeddedICE watchpoint inputs selected as stop resources in **ETMTESSEICR** go LOW.

If bit [25] of **ETMTECR1** is 1, tracing will only be enabled when the start/stop block is in the start state.

Tracing is also only enabled when the result of evaluating the Trace Enable Event is TRUE. This event can be set to always be TRUE by programming a value of 0x6F to **ETMTEEVR**. For more information see the *Embedded Trace Macrocell Architecture Specification*.

## 10.2.6 Triggering

The ETM provides a trigger resource that can be used to identify a point within a trace run. The generation of a trigger does not affect the tracing in any way, but the trigger will be output in the trace stream, and can also be passed to other trace components or used to halt the processor. An external trace port analyzer can use the trigger to determine when to start and stop capture of trace.

## 10.2.7 Interfaces

The ETM-M3 has the following external interfaces:

- ATB** A 32-bit *Advanced Trace Bus* provides trace output from the macrocell. See the *AMBA 3 ATB Protocol Specification* for more information about this interface.
- APB** An *Advanced Peripheral Bus* provides the control interface for the macrocell. See the *AMBA 3 APB Protocol Specification* for more information about this interface.
- CTI** Your implementation can provide a *Cross Trigger Interface* to manage the interconnection of trigger and control signals between the processor core, ETM, and TPIU. The implementation of your Cortex-M3 processor determines which ETM functions are visible to the CTI.

### Recommended CTI connections

Table 10-4 and Table 10-5 show the recommended CTI connections for Cortex-M3 systems.

———— **Note** —————

These tables show the ARM standard connections, but the actual connections are implementation-defined. Check the documentation from the supplier of your device for any changes to these connections.

**Table 10-4 Input connections**

| Trigger bit | Source signal        | Source device | Comments  |
|-------------|----------------------|---------------|---|
| [7]         | <b>ETMTRIGOUT</b>    | ETM           | Recommended if ETM is present.  |
| [6]         | <b>ETMTRIGGER[2]</b> | DWT           | Recommended.  |
| [5]         | <b>ETMTRIGGER[1]</b> | DWT           | Recommended.  |
| [4]         | <b>ETMTRIGGER[0]</b> | DWT           | Recommended.  |
| [3]         | <b>ACQCOMP</b>       | ETB           | Recommended if an <i>Embedded Trace Buffer</i> (ETB) is present.                            |
| [2]         | <b>FULL</b>          | ETB           | If multiple cores share a single ETB, you must only connect to the CTI of one of the cores. |
| [1]         | User Defined         | -             | -   |
| [0]         | <b>DBGACK</b>        | Core          | Compulsory.   |

**Table 10-5 Trigger output connections**

| Trigger bit | Destination signal | Destination device | Comments                      |
|-------------|--------------------|--------------------|-------------------------------|
| [7]         | User defined       | -                  | -                             |
| [6]         | User defined       | -                  | -                             |
| [5]         | <b>ETMEXTIN[1]</b> | ETM                | Compulsory if ETM is present. |
| [4]         | <b>ETMEXTIN[0]</b> | ETM                | Compulsory if ETM is present. |

Table 10-5 Trigger output connections (continued)

| Trigger bit | Destination signal | Destination device | Comments  |
|-------------|--------------------|--------------------|---|
| [3]         | <b>INTISR[y]</b>   | NVIC               | Recommended if an ETB is present. If multiple cores share a single ETB, you must only connect to the CTI of one of the cores. |
| [2]         | <b>INTISR[x]</b>   | NVIC               | Compulsory. Any interrupt can be used.  |
| [1]         | User defined       | -                  | -   |
| [0]         | <b>EDBGRQ</b>      | Core               | Compulsory.   |

### 10.2.8 Operation

ETM-M3 implements version 3.4 of the ARM Embedded Trace Macrocell protocol. See *ETM Programmers model* on page 10-9 and the *Embedded Trace Macrocell Architecture Specification* for more information.

## 10.3 ETM Programmers model

This section describes the mechanisms for programming the registers used to set up the trace and triggering facilities of the macrocell. The programmers model enables you to use the ETM registers to control the macrocell.

### 10.3.1 Modes of operation and execution

When the ETM is powered up or reset, you must program all of the registers that do not have an architected reset state before you enable tracing. If you do not do so, the trace results are UNPREDICTABLE.

When programming the ETM registers you must enable all the changes at the same time. To achieve this, the Programming bit in ETMCR should be used. See *Main Control Register, ETMCR* on page 10-10

When the Programming bit is set to 0 you must not write to registers other than ETMCR, because this can lead to UNPREDICTABLE behavior.

When setting the Programming bit, you must not change any other bits of ETMCR. You must only change the value of bits other than the Programming bit of ETMCR when bit [1] of ETMSR is set to 1. ARM recommends that you use a read-modify-write procedure when changing ETMCR.

### 10.3.2 Register summary

Table 10-6 shows the ETM registers.

**Table 10-6 ETM registers**

| Address    | Name        | Reset      | Type | Description   |
|------------|-------------|------------|------|---|
| 0xE0041000 | ETMCR       | 0x00000411 | RW   | <i>Main Control Register, ETMCR</i> on page 10-10                                     |
| 0xE0041004 | ETMCCR      | 8C800000   | RO   | <i>Configuration Code Register, ETMCCR</i> on page 10-13                              |
| 0xE0041008 | ETMTRIGGER  | -          | RW   | See <i>ARM Embedded Trace Macrocell Architecture Specification</i> .                  |
| 0xE0041010 | ETMSR       | -          | RW   | See <i>ARM Embedded Trace Macrocell Architecture Specification</i> .                  |
| 0xE0041014 | ETMSCR      | 0x00020D09 | RO   | <i>System Configuration Register, ETMSCR</i> on page 10-14                            |
| 0xE0041020 | ETMTEEVR    | -          | RW   | See <i>ARM Embedded Trace Macrocell Architecture Specification</i> .                  |
| 0xE0041024 | ETMTECR1    | -          | RW   | <i>TraceEnable Control 1 Register, ETMTECR1</i> on page 10-15                         |
| 0xE0041028 | ETMFFLR     | -          | RW   | See <i>ARM Embedded Trace Macrocell Architecture Specification</i> .                  |
| 0xE00411E0 | ETMSYNCFR   | 0x00000400 | RO   | See <i>ARM Embedded Trace Macrocell Architecture Specification</i> .                  |
| 0xE00411E4 | ETMIDR      | 0x4114F242 | RO   | <i>ID Register, ETMIDR</i> on page 10-16  |
| 0xE00411E8 | ETMCCER     | 0x00141800 | RO   | <i>Configuration Code Extension Register, ETMCCER</i> on page 10-17                   |
| 0xE00411F0 | ETMTESSEICR | -          | RW   | <i>TraceEnable Start/Stop EmbeddedICE Control Register, ETMTESSEICR</i> on page 10-18 |
| 0xE0041200 | ETMTRACEIDR | 0x00000000 | RW   | See <i>ARM Embedded Trace Macrocell Architecture Specification</i> .                  |
| 0xE0041208 | ETMIDR2     | 0x00000000 | RO   | See <i>ARM Embedded Trace Macrocell Architecture Specification</i> .                  |
| 0xE0041314 | ETMPDSR     | 0x00000001 | RO   | <i>Device Power-Down Status Register, ETMPDSR</i> on page 10-18                       |

Table 10-6 ETM registers (continued)

| Address    | Name          | Reset      | Type | Description  |
|------------|---------------|------------|------|--|
| 0xE0041EE0 | ITMISCIN      | -          | RO   | Integration Test Miscellaneous Inputs, <i>ITMISCIN</i> on page 10-19   |
| 0xE0041EE8 | ITTRIGOUT     | -          | WO   | Integration Test Trigger Out, <i>ITTRIGOUT</i> on page 10-20           |
| 0xE0041EF0 | ETM_ITATBCTR2 | -          | RO   | ETM Integration Test ATB Control 2, <i>ETM_ITATBCTR2</i> on page 10-20 |
| 0xE0041EF8 | ETM_ITATBCTR0 | -          | WO   | ETM Integration Test ATB Control 0, <i>ETM_ITATBCTR0</i> on page 10-21 |
| 0xE0041F00 | ETMITCTRL     | 0x00000000 | RW   | See <i>ARM Embedded Trace Macrocell Architecture Specification</i> .   |
| 0xE0041FA0 | ETMCLAIMSET   | -          | RW   | See <i>ARM Embedded Trace Macrocell Architecture Specification</i> .   |
| 0xE0041FA4 | ETMCLAIMCLR   | -          | RW   | See <i>ARM Embedded Trace Macrocell Architecture Specification</i> .   |
| 0xE0041FB0 | ETMLAR        | -          | RW   | See <i>ARM Embedded Trace Macrocell Architecture Specification</i> .   |
| 0xE0041FB4 | ETMLSR        | -          | RO   | See <i>ARM Embedded Trace Macrocell Architecture Specification</i> .   |
| 0xE0041FB8 | ETMAUTHSTATUS | -          | RO   | See <i>ARM Embedded Trace Macrocell Architecture Specification</i> .   |
| 0xE0041FCC | ETMDEVTYPE    | 0x00000013 | RO   | See <i>ARM Embedded Trace Macrocell Architecture Specification</i> .   |
| 0xE0041FD0 | ETMPIDR4      | 0x00000004 | RO   | See <i>ARM Embedded Trace Macrocell Architecture Specification</i> .   |
| 0xE0041FD4 | ETMPIDR5      | 0x00000000 | RO   |  |
| 0xE0041FD8 | ETMPIDR6      | 0x00000000 | RO   |  |
| 0xE0041FDC | ETMPIDR7      | 0x00000000 | RO   |  |
| 0xE0041FE0 | ETMPIDR0      | 0x00000024 | RO   |  |
| 0xE0041FE4 | ETMPIDR1      | 0x000000B9 | RO   |  |
| 0xE0041FE8 | ETMPIDR2      | 0x0000002B | RO   |  |
| 0xE0041FEC | ETMPIDR3      | 0x00000000 | RO   |  |
| 0xE0041FF0 | ETMCIDR0      | 0x0000000D | RO   | See <i>ARM Embedded Trace Macrocell Architecture Specification</i> .   |
| 0xE0041FF4 | ETMCIDR1      | 0x00000090 | RO   |  |
| 0xE0041FF8 | ETMCIDR2      | 0x00000005 | RO   |  |
| 0xE0041FFC | ETMCIDR3      | 0x000000B1 | RO   |  |

### 10.3.3 Main Control Register, ETMCR

The ETMCR characteristics are:

|                          |  |
|--------------------------|--|
| <b>Purpose</b>           | Controls general operation of the ETM, such as whether tracing is enabled.     |
| <b>Usage constraints</b> | There are no usage constraints.  |
| <b>Configurations</b>    | This register is only available if the processor is configured to use the ETM. |
| <b>Attributes</b>        | See the ETM register summary in Table 10-6 on page 10-9.                       |

Figure 10-2 on page 10-11 shows the ETMCR bit assignments.

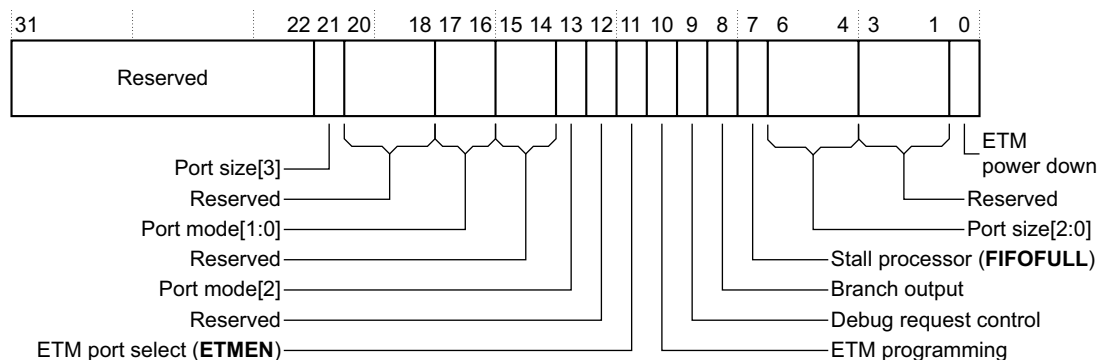


Figure 10-2 ETMCR bit assignments

Table 10-7 shows the ETMCR bit assignments.

Table 10-7 ETMCR bit assignments

| Bits    | Name                  | Function   |
|---------|-----------------------|--|
| [31:22] | -                     | RAZ  |
| [21]    | Port size[3]          | This bit is implemented but has no function. An ETM reset sets this bit to 0.  |
| [20:18] | -                     | Reserved   |
| [17:16] | Port mode [1:0]       | These bits are implemented but have no function. An ETM reset sets these bits to 0.  |
| [15:14] | -                     | Reserved   |
| [13]    | Port mode[2]          | This bit is implemented but has no function. An ETM reset sets this bit to 0.  |
| [12]    | -                     | Reserved   |
| [11]    | ETM port selection    | This bit can be used to control other trace components in an implementation. The possible values are:<br><b>0</b> <b>ETMEN</b> is LOW.<br><b>1</b> <b>ETMEN</b> is HIGH.<br>This bit must be set by the trace software tools to ensure that trace output is enabled from this ETM.<br>An ETM reset sets this bit to 0. |
| [10]    | ETM programming       | This bit must be set to 1 at the start of the ETM programming sequence. Tracing is prevented while this bit is set to 1.<br>On an ETM reset this bit is set to 0.  |
| [9]     | Debug request control | When set to 1 and the trigger event occurs, the <b>DBGREQ</b> output is asserted until <b>DBGACK</b> is observed. This enables the ARM processor to be forced into Debug state.<br>An ETM reset sets this bit to 0.  |

Table 10-7 ETMCR bit assignments (continued)

| Bits  | Name            | Function   |
|-------|-----------------|--|
| [8]   | Branch output   | <p>When set to 1 all branch addresses are output, even if the branch was because of a direct branch instruction. Setting this bit enables reconstruction of the program flow without having access to the memory image of the code being executed.</p> <p>When this bit is set to 1, more trace data is generated, and this may affect the performance of the trace system. Information about the execution of a branch is traced regardless of the state of this bit.</p> <p>An ETM reset sets this bit to 0.</p>   |
| [7]   | Stall processor | <p>The <b>FIFOFULL</b> output can be used to stall the processor to prevent overflow. The <b>FIFOFULL</b> output is only enabled when the stall processor bit is set to 1. When the bit is 0 the <b>FIFOFULL</b> output remains LOW at all times and the FIFO overflows if there are too many trace packets. Trace resumes without corruption once the FIFO has drained, if overflow does occur.</p> <p>An ETM reset sets this bit to 0.</p> <p>For information about the interaction of this bit with the ETMFFLR register see the <i>Embedded Trace Macrocell Architecture Specification</i>.</p>  |
| [6:4] | Port size [2:0] | <p>The ETM-M3 has no influence over the external pins used for trace. These bits are implemented but not used.</p> <p>On an ETM reset these bits reset to 0b001.</p>   |
| [3:1] | -               | Reserved   |
| [0]   | ETM power down  | <p>This bit can be used by an implementation to control if the ETM is in a low power state. This bit must be cleared by the trace software tools at the beginning of a debug session.</p> <p>When this bit is set to 1, writes to some registers and fields might be ignored. You can always write to the following registers and fields:</p> <ul style="list-style-type: none"> <li>• ETMCR bit [0]</li> <li>• ETMLAR</li> <li>• ETMCLAIMSET register</li> <li>• ETMCLAIMCLR register.</li> </ul> <p>When the ETMCR is written with this bit set to 1, bits other than bit [0] might be ignored.</p> <p>On an ETM reset this bit is set to 1.</p> |



### 10.3.4 Configuration Code Register, ETMCCR

The ETM Configuration Code Register characteristics are:

- Purpose** Enables software to read the implementation-specific configuration of the ETM.
- Usage constraints** There are no usage constraints.
- Configurations** This register is only available if the processor is configured to use the ETM.
- Attributes** See the ETM register summary in Table 10-6 on page 10-9.

Figure 10-3 shows the ETMCCR bit assignments.

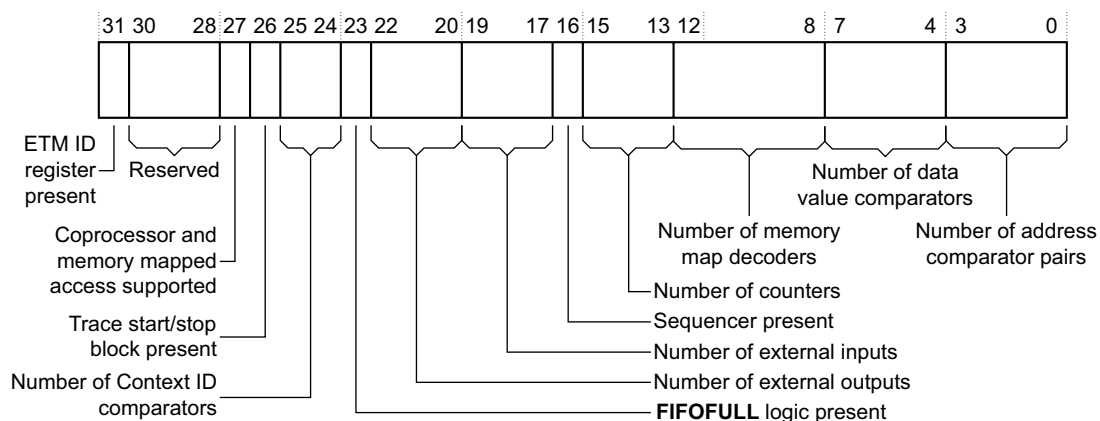


Figure 10-3 ETMCCR bit assignments

Table 10-8 shows the ETMCCR bit assignments.

Table 10-8 ETMCCR bit assignments

| Bits    | Name                             | Function   |
|---------|----------------------------------|--|
| [31]    | ETM ID register present          | The value of this bit is 1, indicating that the ETMIDR, register 0x79, is present and defines the ETM architecture version in use.   |
| [30:28] | -                                | Reserved.  |
| [27]    | Coprorocessor and memory access  | The value of this bit is 1, indicating that memory-mapped access to registers is supported.  |
| [26]    | Trace start/stop block present   | The value of this bit is 1, indicating that the Trace start/stop block is present.   |
| [25:24] | Number of Context ID comparators | The value of these bits is b00, indicating that Context ID comparators are not implemented.  |
| [23]    | <b>FIFOFULL</b> logic present    | The value of this bit is 1, indicating that <b>FIFOFULL</b> logic is present in the ETM. To use FIFOFULL the system must also support the function, as indicated by bit [8] of ETMSCR, see <i>System Configuration Register, ETMSCR</i> on page 10-14. |
| [22:20] | Number of external outputs       | The value of these bits is b000, indicating that no external outputs are supported.  |
| [19:17] | Number of external inputs        | The value of these bits is between b000 and b010, indicating the number of external inputs, from 0 to 2, implemented in the system.  |
| [16]    | Sequencer present                | The value of this bit is 0, indicating that the sequencer is not implemented.  |

**Table 10-8 ETMCCR bit assignments (continued)**


| Bits    | Name                               | Function  |
|---------|------------------------------------|---|
| [15:13] | Number of counters                 | The value of these bits is b000, indicating counters are not implemented.                         |
| [12:8]  | Number of memory map decoders      | The value of these bits is b00000, indicating that memory map decoder inputs are not implemented. |
| [7:4]   | Number of data value comparators   | The value of these bits is b0000, indicating that data value comparators are not implemented.     |
| [3:0]   | Number of address comparator pairs | The value of these bits is b0000, indicating that address comparator pairs are not implemented.   |

### 10.3.5 System Configuration Register, ETMSCR

The ETMSCR characteristics are:

- Purpose** Shows the ETM features supported by the implementation of the ETM macrocell.
- Usage constraints** There are no usage constraints.
- Configurations** This register is only available if the processor is configured to use the ETM.
- Attributes** See the register summary in Table 10-6 on page 10-9.

Figure 10-4 shows the ETMSCR bit assignments.

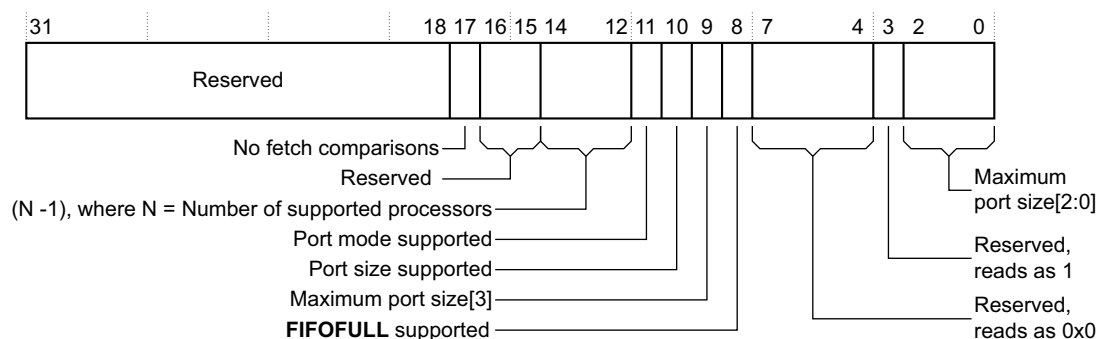

**Figure 10-4 ETMSCR bit assignments**

Table 10-9 shows the ETMSCR bit assignments.

**Table 10-9 ETMSCR bit assignments**

| Bits    | Name                 | Function  |
|---------|----------------------|---|
| [31:18] | -                    | Reserved.   |
| [17]    | No Fetch comparisons | The value of this bit is 1, indicating that fetch comparisons are not implemented.  |
| [16:15] | -                    | Reserved.   |
| [14:12] | (N-1)                | These bits give the number of supported processors minus 1. The value of these bits is b000, indicating that there is only one processor connected. |
| [11]    | Port mode supported  | This bit reads as 1 if the currently selected port mode is supported. This has no effect on the TPIU trace port.                                    |

Table 10-9 ETMSCR bit assignments (continued)

| Bits  | Name                      | Function   |
|-------|---------------------------|--|
| [10]  | Port size supported       | This bit reads as 1 if the currently selected port size is supported. This has no effect on the TPIU trace port.                           |
| [9]   | Maximum port size [3]     | Maximum ETM port size bit [3]. This bit is used in conjunction with bits [2:0]. Its value is 0. This has no effect on the TPIU trace port. |
| [8]   | <b>FIFOFULL</b> supported | The value of this bit is 1, indicating that <b>FIFOFULL</b> is supported. This bit is used in conjunction with bit [23] of the ETMCCR.     |
| [7:4] | -                         | Reserved, Read-As-Zero.  |
| [3]   | -                         | Reserved, Read-As-One.   |
| [2:0] | Maximum port size [2:0]   | Maximum ETM port size bits [2:0]. These bits are used in conjunction with bit [9]. The value of these bits is b001.                        |

### 10.3.6 TraceEnable Control 1 Register, ETMTECR1

The ETMTECR1 characteristics are:

**Purpose** Enables the start/stop logic used for trace enable.

**Usage constraints** There are no usage constraints.

**Configurations** This register is only available if the processor is configured to use the ETM.

**Attributes** See the register summary in Table 10-6 on page 10-9.

Figure 10-5 shows the ETMTECR1 bit assignments.

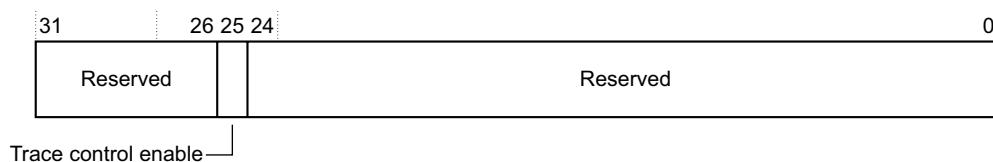


Figure 10-5 ETMTECR1 bit assignments

Table 10-10 shows the ETMTECR1 bit assignments.

Table 10-10 ETMTECR1 bit assignments


| Bits    | Name                 | Function   |
|---------|----------------------|--|
| [31:26] | -                    | Reserved.  |
| [25]    | Trace control enable | Trace start/stop enable. The possible values of this bit are:<br><b>0</b> Tracing is unaffected by the trace start/stop logic.<br><b>1</b> Tracing is controlled by the trace on and off addresses configured for the trace start/stop logic.<br>The trace start/stop resource, resource 0x5F, is unaffected by the value of this bit. |
| [24:0]  | -                    | Reserved.  |

### 10.3.7 ID Register, ETMIDR

The ETMIDR characteristics are:

- Purpose** Holds the ETM architecture variant, and defines the programmers model for the ETM.
- Usage constraints** There are no usage constraints.
- Configurations** This register is only available if the processor is configured to use the ETM.
- Attributes** See the register summary in Table 10-6 on page 10-9.

Figure 10-6 shows the ETMIDR bit assignments.

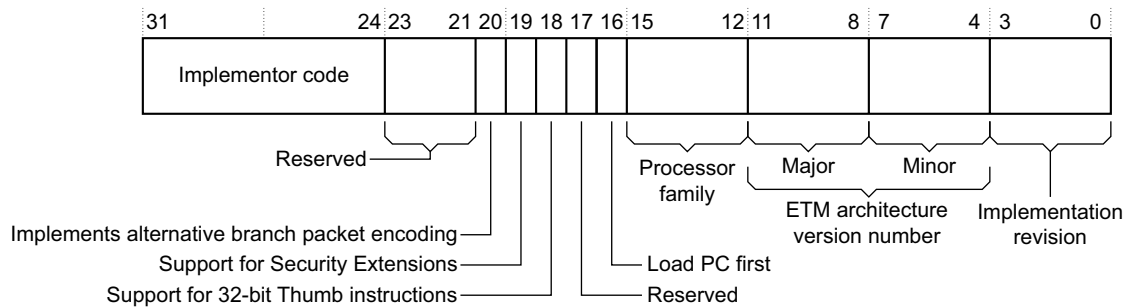

**Figure 10-6 ETMIDR bit assignments**

Table 10-11 shows the ETMIDR bit assignments.

**Table 10-11 ETMIDR bit assignments**

| Bits    | Name                             | Function   |
|---------|----------------------------------|--|
| [31:24] | Implementor code                 | These bits identify ARM as the implementor of the processor. The value of these bits is 01000001.                |
| [23:21] | -                                | Reserved.  |
| [20]    | Branch packet encoding           | The value of this bit is 1, indicating that alternative branch packet encoding is implemented.                   |
| [19]    | Security Extensions support      | The value of this bit is 0, indicating that the ETM behaves as if the processor is in Secure state at all times. |
| [18]    | 32-bit Thumb instruction tracing | The value of this bit is 1, indicating that a 32-bit Thumb instruction is traced as a single instruction.        |
| [17]    | -                                | Reserved.  |
| [16]    | Load PC first                    | The value of this bit is 0, indicating that data tracing is not supported.                                       |
| [15:12] | Processor family                 | The value of these bits is b1111, indicating that the processor family is not identified in this register.       |
| [11:8]  | Major ETM architecture version   | The value of these bits is b0010, indicating major architecture version number 3, ETMv3.                         |
| [7:4]   | Minor ETM architecture version   | The value of these bits is b0100, indicating minor architecture version number 4.                                |
| [3:0]   | Implementation revision          | The value of these bits is b0010, indicating implementation revision, 2.   |

### 10.3.8 Configuration Code Extension Register, ETMCCER

The ETMCCER characteristics are:

- Purpose** Holds ETM configuration information additional to that in the ETMCCR. See *Configuration Code Register, ETMCCR* on page 10-13.
- Usage constraints** There are no usage constraints.
- Configurations** This register is only available if the processor is configured to use the ETM.
- Attributes** See the register summary in Table 10-6 on page 10-9.

Figure 10-7 shows the ETMCCER bit assignments.

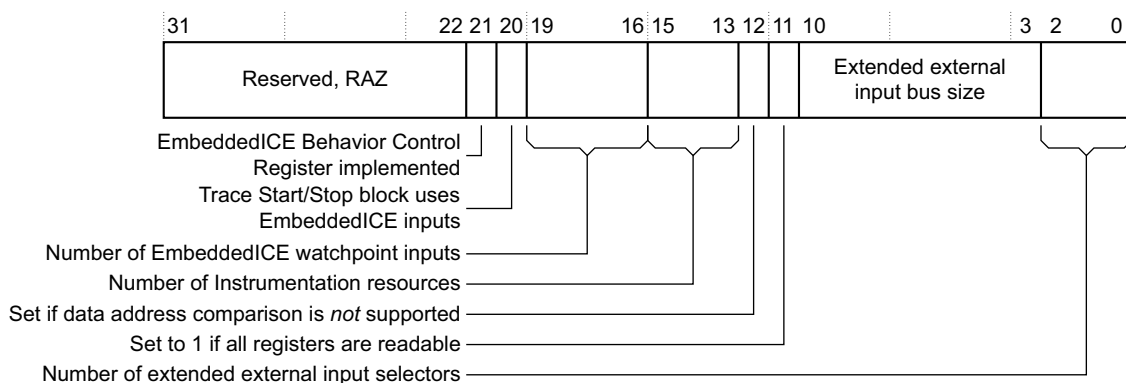


Figure 10-7 ETMCCER bit assignments

Table 10-12 shows the ETMCCER bit assignments.

Table 10-12 ETMCCER bit assignments


| Bits    | Name  | Function   |
|---------|---|--|
| [31:22] | -   | Reserved. Read-As-Zero.  |
| [21]    | EmbeddedICE behavior control implemented                  | The value of this bit is 0, indicating that the ETMEIBCR is not implemented. For more information on EmbeddedICE behavior see the <i>Embedded Trace Macrocell Architecture Specification</i> . |
| [20]    | Trace Start/Stop block uses EmbeddedICE watchpoint inputs | The value of this bit is 1, indicating that the Trace Start/Stop block uses the EmbeddedICE watchpoint inputs.   |
| [19:16] | EmbeddedICE watchpoint inputs                             | The value of these bits is b0100, indicating that the number of EmbeddedICE watchpoint inputs implemented is four. These inputs come from the DWT.   |
| [15:13] | Instrumentation resources                                 | The value of these bits is b000, indicating that no Instrumentation resources are supported.   |
| [12]    | Data address comparisons                                  | The value of this bit is 1, indicating that data address comparisons are not supported.  |
| [11]    | Readable registers  | The value of this bit is 1, indicating that all registers are readable.  |
| [10:3]  | Extended external input bus                               | The value of these bits is 0, indicating that the extended external input bus is not implemented.  |
| [2:0]   | Extended external input selectors                         | The value of these bits is 0, indicating that extended external input selectors are not implemented.   |

### 10.3.9 TraceEnable Start/Stop EmbeddedICE Control Register, ETMTESSEICR

The ETMTESSEICR characteristics are:

- Purpose** Specifies the EmbeddedICE watchpoint comparator inputs that are used to control the start/stop resource.
- Usage constraints** There are no usage constraints.
- Configurations** This register is only available if the processor is configured to use the ETM.
- Attributes** See the register summary in Table 10-6 on page 10-9.

Figure 10-8 shows the ETMTESSEICR bit assignments.

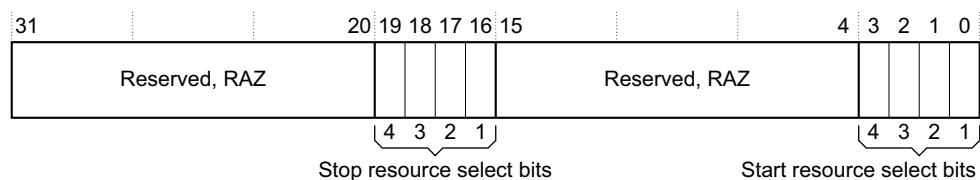

**Figure 10-8 ETMTESSEICR bit assignments**

Table 10-13 shows the ETMTESSEICR bit assignments.

**Table 10-13 ETMTESSEICR bit assignments**

| Bits    | Name                     | Function   |
|---------|--------------------------|--|
| [31:20] | -                        | Reserved, Read-as-zero.  |
| [19:16] | Stop resource selection  | Setting any of these bits to 1 selects the corresponding EmbeddedICE watchpoint input as a <b>TraceEnable</b> stop resource. Bit [16] corresponds to input 1, bit [17] corresponds to input 2, bit [18] corresponds to input 3, and bit [19] corresponds to input 4. |
| [15:4]  | -                        | Reserved, Read-As-Zero.  |
| [3:0]   | Start resource selection | Setting any of these bits to 1 selects the corresponding EmbeddedICE watchpoint input as a <b>TraceEnable</b> start resource. Bit [0] corresponds to input 1, bit [1] corresponds to input 2, bit [2] corresponds to input 3, and bit [3] corresponds to input 4.    |

### 10.3.10 Device Power-Down Status Register, ETMPDSR

The ETMPDSR characteristics are:

- Purpose** Indicates the power-down status of the ETM.
- Usage constraints** There are no usage constraints.
- Configurations** This register is only available if the processor is configured to use an ETM.
- Attributes** See the register summary in Table 10-6 on page 10-9

Figure 10-9 on page 10-19 shows the ETMPDSR bit assignments.

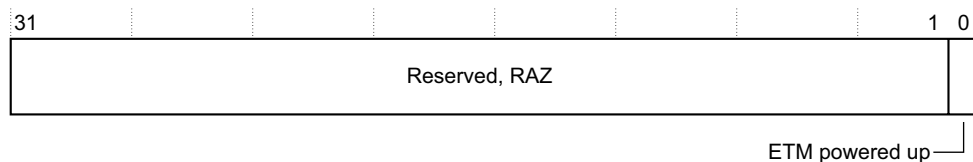


Figure 10-9 ETMPDSR bit assignments

Table 10-14 shows the ETMPDSR bit assignments.

Table 10-14 ETMPDSR bit assignments

| Bits   | Name           | Function  |
|--------|----------------|---|
| [31:1] | -              | Reserved, Read-As-Zero.   |
| [0]    | ETM powered up | The value of this bit indicates whether you can access the ETM Trace Registers. The value of this bit is always 1, indicating that the ETM Trace Registers can be accessed. |

### 10.3.11 Integration Test Miscellaneous Inputs, ITMISCIN

The ITMISCIN characteristics are:

**Purpose** Integration test.

**Usage constraints** There are no usage constraints.

**Configurations** This register is only available if the processor is configured to use the ETM.

**Attributes** See the register summary in Table 10-6 on page 10-9.

Figure 10-10 shows the ITMISCIN bit assignments.

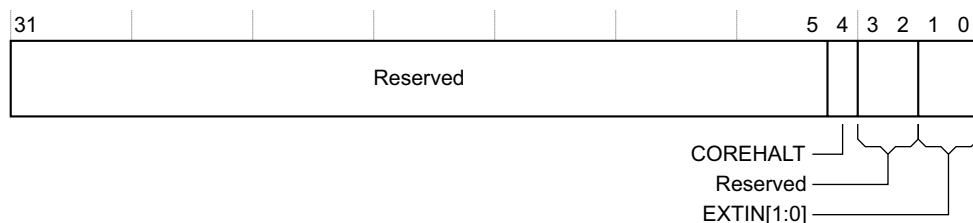


Figure 10-10 ITMISCIN bit assignments

Table 10-15 shows the ITMISCIN bit assignments.

Table 10-15 ITMISCIN bit assignments


| Bits   | Name       | Function   |
|--------|------------|--|
| [31:5] | -          | Reserved.  |
| [4]    | COREHALT   | A read of this bit returns the value of the COREHALT input pin.      |
| [3:2]  | -          | Reserved.  |
| [1:0]  | EXTIN[1:0] | A read of these bits returns the value of the EXTIN[1:0] input pins. |

### 10.3.12 Integration Test Trigger Out, ITTRIGOUT

The ITMISCIN characteristics are:

- Purpose** Integration test.
- Usage constraints** You must set bit [0] of ETMITCTRL to use this register.
- Configurations** This register is only available if the processor is configured to use the ETM.
- Attributes** See the register summary in Table 10-6 on page 10-9

Figure 10-11 shows the ITTRIGOUT bit assignments.

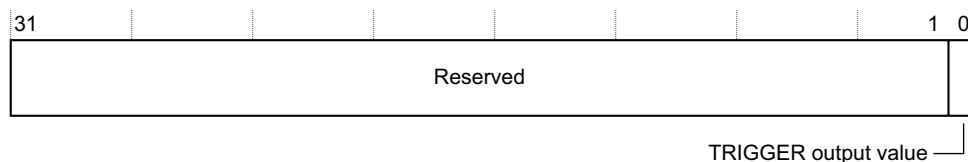

**Figure 10-11 ITTRIGOUT bit assignments**

Table 10-16 shows the ITTRIGOUT bit assignments.

**Table 10-16 ITTRIGOUT bit assignments**


| Bits   | Name                 | Function                                     |
|--------|----------------------|--|
| [31:1] | -                    | Reserved                                     |
| [0]    | TRIGGER output value | A write to this bit sets the TRIGGER output. |

### 10.3.13 ETM Integration Test ATB Control 2, ETM\_ITATBCTR2

The ETM\_ITATBCTR2 characteristics are:

- Purpose** Integration test.
- Usage constraints** You must set bit [0] of ETMITCTRL to use this register.
- Configurations** This register is only available if the processor is configured to use the ETM.
- Attributes** See the register summary in Table 10-6 on page 10-9

Figure 10-12 shows the ETM\_ITATBCTR2 bit assignments.

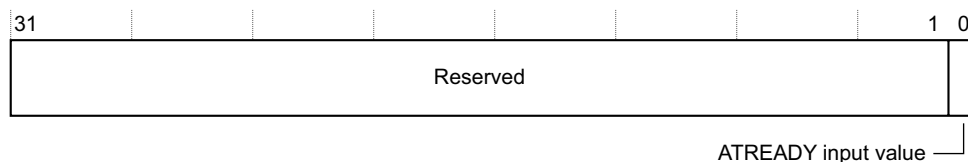

**Figure 10-12 ETM\_ITATBCTR2 bit assignments**



Table 10-17 shows the ETM\_ITATBCTR2 bit assignments.

**Table 10-17 ETM\_ITATBCTR2 bit assignments**


| Bits   | Name                | Function   |
|--------|---------------------|--|
| [31:1] | -                   | Reserved   |
| [0]    | ATREADY input value | A read of this bit returns the value of the ETM ATREADY input. |

### 10.3.14 ETM Integration Test ATB Control 0, ETM\_ITATBCTR0

The ETM\_ITATBCTR0 characteristics are:

- Purpose** Integration test.
- Usage constraints** You must set bit [0] of ETMITCTRL to use this register.
- Configurations** This register is only available if the processor is configured to use the ETM.
- Attributes** See the register summary in Table 10-6 on page 10-9.

Figure 10-13 shows the ETM\_ITATBCTR0 bit assignments.

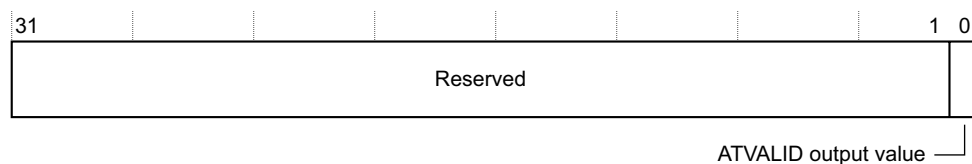

**Figure 10-13 ETM\_ITATBCTR0 bit assignments**

Table 10-18 shows the ETM\_ITATBCTR0 bit assignments.

**Table 10-18 ETM\_ITATBCTR0 bit assignments**

| Bits   | Name                 | Function  |
|--------|----------------------|---|
| [31:1] | -                    | Reserved  |
| [0]    | ATVALID output value | A write to this bit sets the value of the ETM ATVALID output. |

# Chapter 11

## Trace Port Interface Unit

This chapter describes the Cortex-M3 TPIU, the Trace Port Interface Unit that is specific to the Cortex-M3 processor. It contains the following sections:

- *About the Cortex-M3 TPIU* on page 11-2
- *TPIU functional description* on page 11-3
- *TPIU programmers model* on page 11-5.

## 11.1 About the Cortex-M3 TPIU

The Cortex-M3 TPIU is an optional component that acts as a bridge between the on-chip trace data from the *Embedded Trace Macrocell* (ETM) and the *Instrumentation Trace Macrocell* (ITM), with separate IDs, to a data stream. The TPIU encapsulates IDs where required, and the data stream is then captured by a *Trace Port Analyzer* (TPA).

The Cortex-M3 TPIU is specially designed for low-cost debug. It is a special version of the CoreSight TPIU. Your implementation can replace the Cortex-M3 TPIU with other CoreSight components if your implementation requires the additional features of the CoreSight TPIU.

In this chapter, the term TPIU refers to the Cortex-M3 TPIU. For information about the CoreSight TPIU, see the *ARM CoreSight Components Technical Reference Manual*.

## 11.2 TPIU functional description

There are two configurations of the TPIU:

- A configuration that supports ITM debug trace.
- A configuration that supports both ITM and ETM debug trace.


If your implementation requires no trace support then the TPIU might not be present.

———— **Note** ————

If your Cortex-M3 system uses the optional ETM component, the TPIU configuration supports both ITM and ETM debug trace. See Chapter 10 *Embedded Trace Macrocell*.

### 11.2.1 TPIU block diagrams

Figure 11-1 shows the component layout of the TPIU for both configurations.

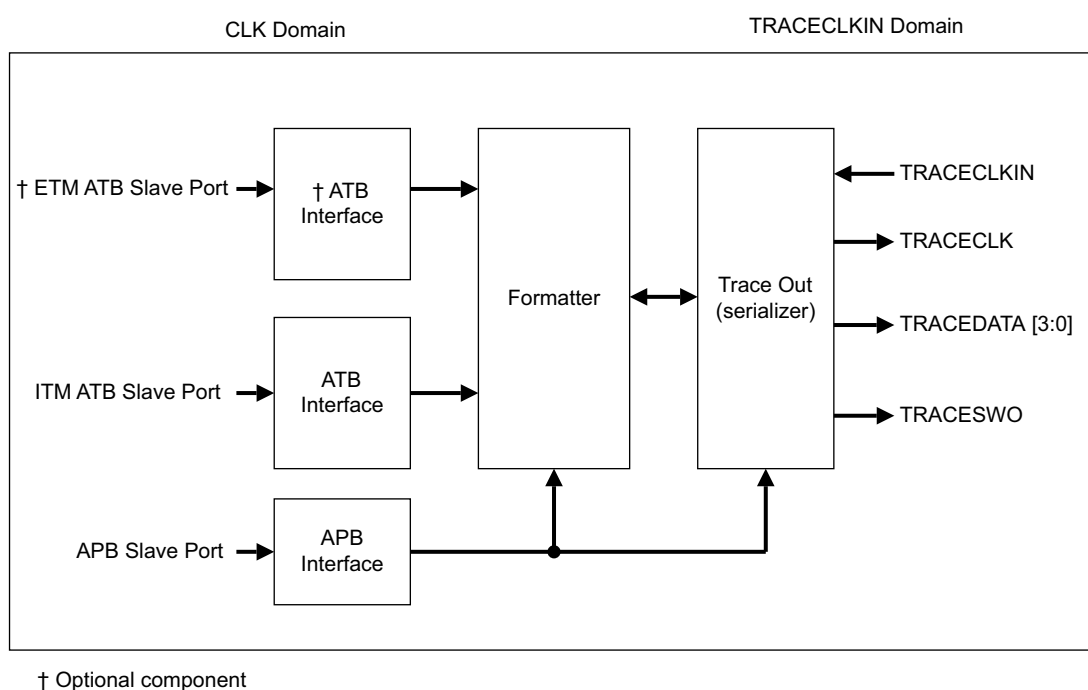

**Figure 11-1** TPIU block diagram

### 11.2.2 TPIU Formatter

The formatter inserts source ID signals into the data packet stream so that trace data can be re-associated with its trace source. The formatter is always active when the Trace Port Mode is active.

The formatting protocol is described in the *CoreSight Architecture Specification*. You must enable synchronization packets in the DWT to provide synchronization for the formatter.

When the formatter is enabled, the NULL ID and bytes of 0x00 data can be inserted if there is no data to output after a frame has been started. Once the frame has been completed, full synchronization packets will be inserted until new data is ready to be output.

### 11.2.3 Serial Wire Output format

The TPIU can output trace data in a *Serial Wire Output* (SWO) format:

- TPIU\_DEVID specifies the formats that are supported. See *TPIU\_DEVID* on page 11-12.
- TPIU\_SPPR specifies the SWO format in use. See the *ARMv7-M Architecture Reference Manual*.

When one of the two SWO modes is selected, you can enable the TPIU to bypass the formatter for trace output. If the formatter is bypassed, only the ITM and DWT trace source passes through. The TPIU accepts and discards data from the ETM. This function can be used to connect a device containing an ETM to a trace capture device that is only able to capture SWO data.

## 11.3 TPIU programmers model

Table 11-1 provides a summary of the TPIU registers. Depending on the implementation of your processor, the TPIU registers might not be present, or the CoreSight TPIU might be present instead. Any register that is configured as not present reads as zero.

**Table 11-1 TPIU registers**

| Address    | Name        | Type | Reset      | Description  |
|------------|-------------|------|------------|--|
| 0xE0040000 | TPIU_SSPSR  | RO   | 0x0xx      | Supported Parallel Port Size Register                                |
| 0xE0040004 | TPIU_CSPPSR | RW   | 0x01       | Current Parallel Port Size Register                                  |
| 0xE0040010 | TPIU_ACPR   | RW   | 0x0000     | <i>Asynchronous Clock Prescaler Register; TPIU_ACPR on page 11-6</i> |
| 0xE00400F0 | TPIU_SPPR   | RW   | 0x01       | Selected Pin Protocol Register                                       |
| 0xE0040300 | TPIU_FFSR   | RO   | 0x08       | <i>Formatter and Flush Status Register; TPIU_FFSR on page 11-6</i>   |
| 0xE0040304 | TPIU_FFCR   | RW   | 0x102      | <i>Formatter and Flush Control Register; TPIU_FFCR on page 11-7</i>  |
| 0xE0040308 | TPIU_FSCR   | RO   | 0x00       | Formatter Synchronization Counter Register                           |
| 0xE0040EE8 | TRIGGER     | RO   | 0x0        | <i>TRIGGER on page 11-8</i>  |
| 0xE0040EEC | FIFO data 0 | RO   | 0x--000000 | <i>Integration FIFO 0 Data on page 11-8</i>                          |
| 0xE0040EF0 | ITATBCTR2   | RO   | 0x0        | <i>ITATBCTR2 on page 11-9</i>  |
| 0xE0040EFC | FIFO data 1 | RO   | 0x--000000 | <i>Integration FIFO 1 Data on page 11-10</i>                         |
| 0xE0040EF8 | ITATBCTR0   | RO   | 0x0        | <i>ITATBCTR0 on page 11-11</i>                                       |
| 0xE0040F00 | ITCTRL      | RW   | 0x0        | <i>Integration Mode Control, TPIU_ITCTRL on page 11-11</i>           |
| 0xE0040FA0 | CLAIMSET    | RW   | 0xF        | Claim tag set  |
| 0xE0040FA4 | CLAIMCLR    | RW   | 0x0        | Claim tag clear  |
| 0xE0040FC8 | DEVID       | RO   | -          | <i>TPIU_DEVID on page 11-12</i>                                      |
| 0xE0040FD0 | PID4        | RO   | 0x04       | Peripheral identification registers                                  |
| 0xE0040FD4 | PID5        | RO   | 0x00       |  |
| 0xE0040FD8 | PID6        | RO   | 0x00       |  |
| 0xE0040FDC | PID7        | RO   | 0x00       |  |
| 0xE0040FE0 | PID0        | RO   | 0xA1       |  |
| 0xE0040FE4 | PID1        | RO   | 0xB9       |  |
| 0xE0040FE8 | PID2        | RO   | 0x0B       |  |
| 0xE0040FEC | PID3        | RO   | 0x00       | Component identification registers                                   |
| 0xE0040FF0 | CID0        | RO   | 0x0D       |  |
| 0xE0040FF4 | CID1        | RO   | 0x90       |  |
| 0xE0040FF8 | CID2        | RO   | 0x05       |  |
| 0xE0040FFC | CID3        | RO   | 0xB1       |  |

The following sections describe the TPIU registers whose implementation is specific to this processor. The Formatter, Integration Mode Control, and Claim Tag registers are described in the *CoreSight Components Technical Reference Manual*. Other registers are described in the *ARMv7-M Architecture Reference Manual*.

### 11.3.1 Asynchronous Clock Prescaler Register, TPIU\_ACPR

The TPIU\_ACPR characteristics are:

- Purpose** Scales the baud rate of the asynchronous output.
- Usage constraints** There are no usage constraints.
- Configurations** This register is available in all processor configurations.
- Attributes** See Table 11-1 on page 11-5.

Figure 11-2 shows the TPIU\_ACPR bit assignments.

 


Figure 11-2 TPIU\_ACPR bit assignments

Table 11-2 shows the TPIU\_ACPR bit assignments.

Table 11-2 TPIU\_ACPR bit assignments

| Bits    | Name      | Function                                 |
|---------|-----------|--|
| [31:13] | -         | Reserved. RAZ/SBZP.                      |
| [12:0]  | PRESCALER | Divisor for TRACECLKIN is Prescaler + 1. |

### 11.3.2 Formatter and Flush Status Register, TPIU\_FFSR

The TPIU\_FFSR characteristics are:

- Purpose** Indicates the status of the TPIU formatter.
- Usage constraints** There are no usage constraints.
- Configurations** This register is available in all processor configurations.
- Attributes** See Table 11-1 on page 11-5.

Figure 11-3 shows the TPIU\_FFSR bit assignments.

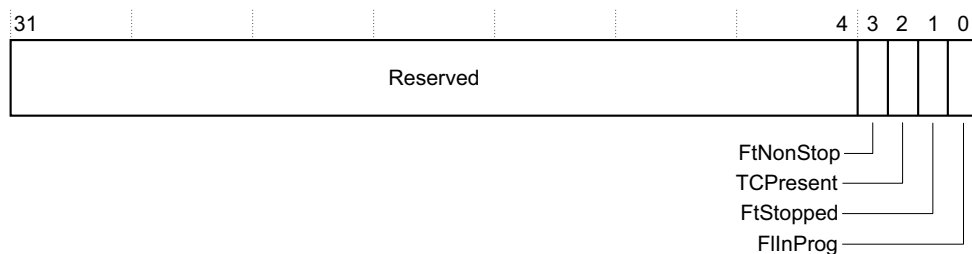


Figure 11-3 TPIU\_FFSR bit assignments

Table 11-3 shows the TPIU\_FFSR bit assignments.

**Table 11-3 TPIU\_FFSR bit assignments**


| Bits   | Name      | Function                    |
|--------|-----------|-----------------------------|
| [31:4] | -         | Reserved                    |
| [3]    | FtNonStop | Formatter cannot be stopped |
| [2]    | TCPresent | This bit always reads zero  |
| [1]    | FtStopped | This bit always reads zero  |
| [0]    | FlInProg  | This bit always reads zero  |

### 11.3.3 Formatter and Flush Control Register, TPIU\_FFCR

The TPIU\_FFCR characteristics are:

- Purpose** Controls the TPIU formatter.
- Usage constraints** There are no usage constraints.
- Configurations** This register is available in all processor configurations.
- Attributes** See Table 11-1 on page 11-5.

Figure 11-4 shows the TPIU\_FFCR bit assignments.

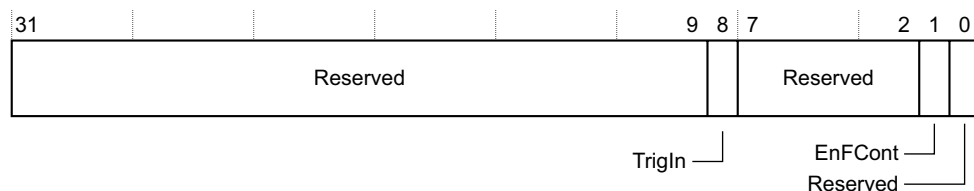

**Figure 11-4 TPIU\_FFCR bit assignments**

Table 11-4 shows the TPIU\_FFCR bit assignments.

**Table 11-4 TPIU\_FFCR bit assignments**

| Bits   | Name    | Function   |
|--------|---------|--|
| [31:9] | -       | Reserved.  |
| [8]    | TrigIn  | This bit Reads-As-One (RAO), specifying that triggers are inserted when a trigger pin is asserted.                       |
| [7:2]  | -       | Reserved.  |
| [1]    | EnFCont | Enable continuous formatting. Value can be:<br>0 = Continuous formatting disabled.<br>1 = Continuous formatting enabled. |
| [0]    | -       | Reserved.  |

The TPIU can output trace data in a *Serial Wire Output (SWO)* format. See *Serial Wire Output format* on page 11-4.



When one of the two SWO modes is selected, bit [1] of TPIU\_FFCR enables the formatter to be bypassed. If the formatter is bypassed, only the ITM and DWT trace source passes through. The TPIU accepts and discards data from the ETM. This function is can be used to connect a device containing an ETM to a trace capture device that is only able to capture SWO data. Enabling or disabling the formatter causes momentary data corruption.

———— **Note** —————


If TPIU\_SPPR is set to select Parallel Port Mode, the formatter is automatically enabled. If you then select one of the SWO modes, TPIU\_FFCR reverts to its previously programmed value.

### 11.3.4 TRIGGER

The TRIGGER characteristics are:

- Purpose** Integration test of the TRIGGER input.
- Usage constraints** There are no usage constraints.
- Configurations** This register is available in all processor configurations.
- Attributes** See Table 11-1 on page 11-5.

Figure 11-5 shows the TRIGGER bit assignments.

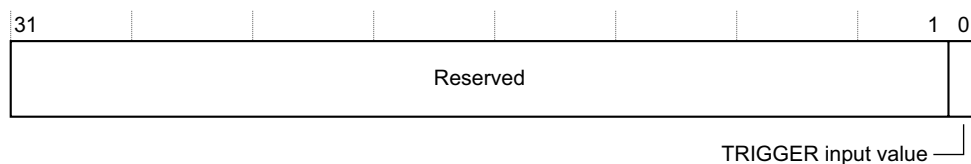

**Figure 11-5 TRIGGER bit assignments**

Table 11-5 shows the TRIGGER bit assignments.

**Table 11-5 TRIGGER bit assignments**

| Bits   | Name                | Function                                       |
|--------|---------------------|--|
| [31:1] | -                   | Reserved                                       |
| [0]    | TRIGGER input value | When read, this bit returns the TRIGGER input. |

### 11.3.5 Integration FIFO 0 Data

The Integration FIFO 0 Data characteristics are:

- Purpose** Trace data integration testing.
- Usage constraints** You must set bit [1] of TPIU\_ITCTRL to use this register. See *Integration Mode Control, TPIU\_ITCTRL* on page 11-11.
- Configurations** This register is available in all processor configurations.
- Attributes** See Table 11-1 on page 11-5.

Figure 11-6 on page 11-9 shows the Integration FIFO 0 Data bit assignments.

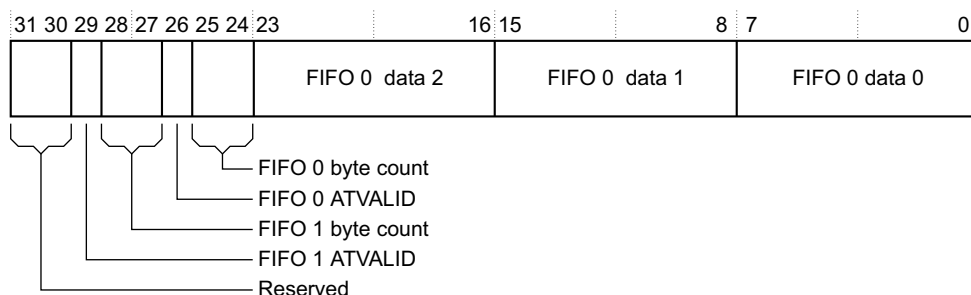


Figure 11-6 Integration FIFO 0 Data bit assignments

Table 11-6 shows the Integration FIFO 0 Data bit assignments.

Table 11-6 Integration FIFO 0 bit assignments

| Bits    | Name                 | Function  |
|---------|----------------------|---|
| [31:30] | -                    | Reserved  |
| [29]    | FIFO 1 ATVALID input | Returns the value of the ATVALID2 signal.   |
| [28:27] | FIFO 1 byte count    | Number of bytes of FIFO 1 trace data since last read of Integration ITM Data Register.  |
| [26]    | FIFO 0 ATVALID input | Returns the value of the ATVALID1 signal.   |
| [25:24] | FIFO 0 byte count    | Number of bytes of FIFO 0 trace data since last read of Integration ETM Data Register.  |
| [23:16] | FIFO 0 data 2        | These fields contain ETM data if the ETM is present. If the ETM is not present, these fields contain ITM data. The TPIU discards this data when the register is read. |
| [15:8]  | FIFO 0 data 1        |   |
| [7:0]   | FIFO 0 data 0        |   |

### 11.3.6 ITATBCTR2

The ITATBCTR2 characteristics are:

**Purpose** Integration test.

**Usage constraints** You must set bit [0] of TPIU\_ITCTRL to use this register. See *Integration Mode Control, TPIU\_ITCTRL* on page 11-11.

**Configurations** This register is available in all processor configurations.

**Attributes** See Table 11-1 on page 11-5.

Figure 11-7 shows the ITATBCTR2 bit assignments.

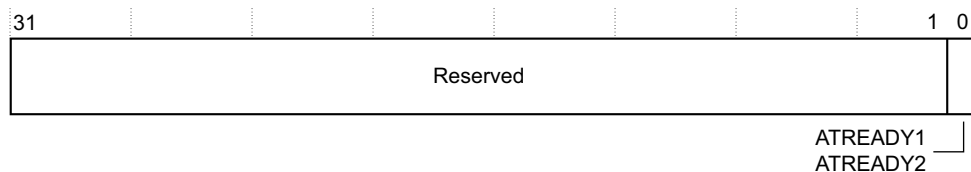


Figure 11-7 ITATBCTR2 bit assignments

Table 11-7 shows the ITATBCTR2 bit assignments.

**Table 11-7 ITATBCTR2 bit assignments**


| Bits   | Name               | Function  |
|--------|--------------------|---|
| [31:1] | -                  | Reserved  |
| [0]    | ATREADY1, ATREADY2 | This bit sets the value of both the ETM and ITM ATREADY outputs, if the TPIU is in integration test mode. |

### 11.3.7 Integration FIFO 1 Data

The Integration FIFO 1 Data characteristics are:

|                          |   |
|--------------------------|---|
| <b>Purpose</b>           | Trace data integration testing.   |
| <b>Usage constraints</b> | You must set bit [1] of TPIU_ITCTRL to use this register. See <i>Integration Mode Control, TPIU_ITCTRL</i> on page 11-11. |
| <b>Configurations</b>    | This register is available in all processor configurations.   |
| <b>Attributes</b>        | See Table 11-1 on page 11-5   |

Figure 11-8 shows the Integration FIFO 1 Data bit assignments.

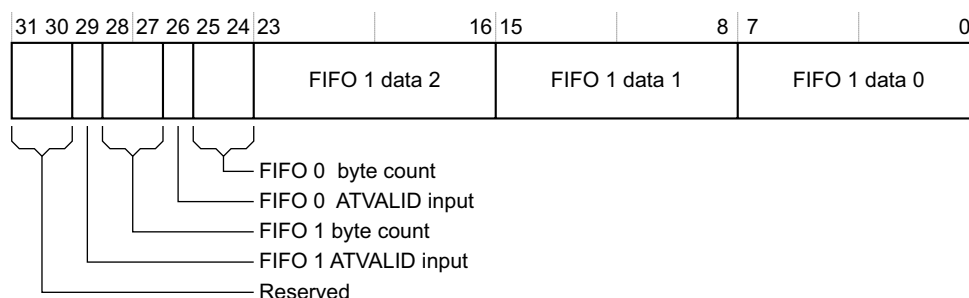

**Figure 11-8 Integration FIFO 1 Data bit assignments**

Table 11-8 shows the Integration FIFO 1 Data bit assignments.

**Table 11-8 Integration FIFO 1 Data bit assignments**


| Bits    | Name                 | Function   |
|---------|----------------------|--|
| [31:30] | -                    | Reserved   |
| [29]    | FIFO 1 ATVALID input | Returns the value of the FIFO 1 ATVALID2 signal.   |
| [28:27] | FIFO 1 byte count    | Number of bytes of FIFO 1 trace data since last read of Integration ITM Data Register.                           |
| [26]    | FIFO 0 ATVALID input | Returns the value of the FIFO 0 ATVALID1 signal.   |
| [25:24] | FIFO 0 byte count    | Number of bytes of FIFO 0 trace data since last read of Integration ETM Data Register.                           |
| [23:16] | FIFO 1 data 2        | These fields contain ITM trace data if an ETM is present. The TPIU discards this data when the register is read. |
| [15:8]  | FIFO 1 data 1        |  |
| [7:0]   | FIFO 1 data 0        |  |

### 11.3.8 ITATBCTR0

The ITATBCTR0 characteristics are:

- Purpose** Integration test.
- Usage constraints** There are no usage constraints.
- Configurations** This register is available in all processor configurations.
- Attributes** See Table 11-1 on page 11-5.

Figure 11-9 shows the ITATBCTR0 bit assignments.

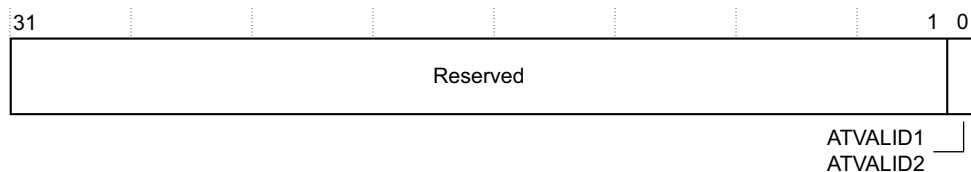

**Figure 11-9 ITATBCTR0 bit assignments**

Table 11-9 shows the ITATBCTR0 bit assignments.

**Table 11-9 ITATBCTR0 bit assignments**


| Bits   | Name               | Function  |
|--------|--------------------|---|
| [31:1] | -                  | Reserved  |
| [0]    | ATVALID1, ATVALID2 | A read of this bit returns the value of ATVALIDS1 OR-ed with ATVALIDS2. |

### 11.3.9 Integration Mode Control, TPIU\_ITCTRL

The TPIU\_ITCTRL characteristics are:

- Purpose** Specifies normal or integration mode for the TPIU.
- Usage constraints** There are no usage constraints.
- Configurations** This register is available in all processor configurations.
- Attributes** See Table 11-1 on page 11-5.

Figure 11-10 shows the TPIU\_ITCTRL bit assignments.

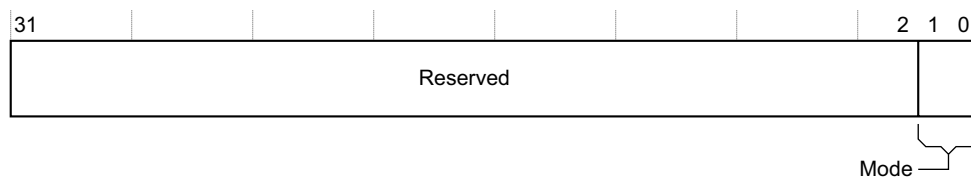

**Figure 11-10 TPIU\_ITCTRL bit assignments**

Table 11-10 shows the TPIU\_ITCTRL bit assignments.

**Table 11-10 TPIU\_ITCTRL bit assignments**


| Bits   | Name | Function   |
|--------|------|--|
| [31:2] | -    | Reserved.  |
| [1:0]  | Mode | Specifies the current mode for the TPIU:<br>b00 normal mode<br>b01 integration test mode<br>b10 integration data test mode<br>b11 Reserved.<br>In integration data test mode, the trace output is disabled, and data can be read directly from each input port using the integration data registers. |

### 11.3.10 TPIU\_DEVID

The TPIU\_DEVID characteristics are:

- Purpose** Indicates the functions provided by the TPIU for use in topology detection.
- Usage constraints** There are no usage constraints.
- Configurations** This register is available in all processor configurations.
- Attributes** See Table 11-1 on page 11-5.

Figure 11-11 shows the TPIU\_DEVID bit assignments.

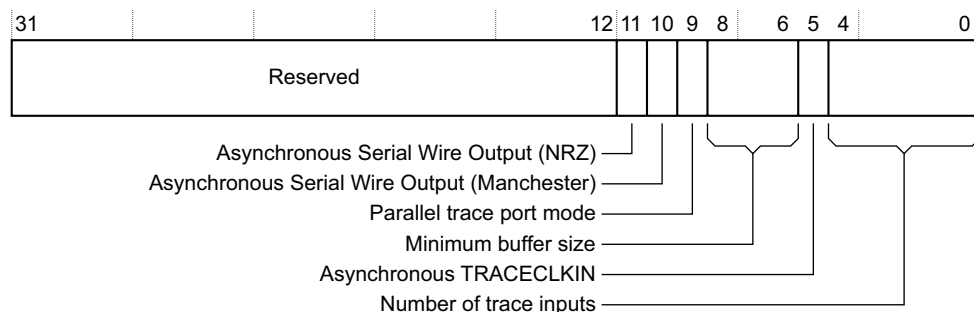

**Figure 11-11 TPIU\_DEVID bit assignments**

Table 11-11 shows the TPIU\_DEVID bit assignments.

**Table 11-11 TPIU\_DEVID bit assignments**

| Bits    | Name   | Function   |
|---------|--|--|
| [31:12] | -  | Reserved   |
| [11]    | Asynchronous Serial Wire Output (NRZ)        | This bit Reads-As-One (RAO), indicating that the output is supported.                |
| [10]    | Asynchronous Serial Wire Output (Manchester) | This bit Reads-As-One (RAO), indicating that the output is supported.                |
| [9]     | Parallel trace port mode                     | This bit Reads-As-Zero (RAZ), indicating that parallel trace port mode is supported. |

Table 11-11 TPIU\_DEVID bit assignments (continued)

| Bits  | Name                              | Function  |
|-------|-----------------------------------|---|
| [8:6] | Minimum buffer size               | Specifies the minimum TPIU buffer size:<br>b010 = 4 bytes   |
| [5]   | Asynchronous<br><b>TRACECLKIN</b> | Specifies whether <b>TRACECLKIN</b> can be asynchronous to <b>CLK</b> :<br>b1 = <b>TRACECLKIN</b> can be asynchronous to <b>CLK</b> .                           |
| [4:0] | Number of trace inputs            | Specifies the number of trace inputs:<br>b000000 = 1 input<br>b000001 = 2 inputs<br>If your implementation includes an ETM, the value of this field is b000001. |

# Appendix A

## Revisions

This appendix describes the technical changes between released issues of this book.

**Table A-1 Differences between issue E and issue F**

| Change   | Location   |
|--|--|
| Introductory processor information updated   | Issue H distributes this information between <i>About the processor</i> on page 1-2 and <i>Features</i> on page 1-3 and removes duplicate information from these sections. |
| Processor block diagram updated  | Figure 2-1 on page 2-2   |
| Introductory information added, including: <ul style="list-style-type: none"> <li>• TPIU subsection</li> <li>• Addition of note to SW/SWJ-DP subsection</li> <li>• ROM table subsection.</li> </ul>              | Issue H removes this information.  |
| Introductory processor core information updated  |  |
| APB bus now version 3.0  | <i>Architecture and protocol information</i> on page 1-7   |
| Configurable options information expanded to include: <ul style="list-style-type: none"> <li>• Added DWT configurability information</li> <li>• New subsections for ITM, AHB-AP, FPB and Observation.</li> </ul> | <i>Configurable options</i> on page 1-5  |
| New subsection added to list changes in functionality between r1p1 and r2p0  | <i>Differences in functionality between r1p1 and r2p0</i> on page 1-10   |
| Information about the programmers model updated  | Issue H distributes this information between <i>Operating modes</i> on page 3-3 and <i>Operating states</i> on page 3-3.   |

Table A-1 Differences between issue E and issue F (continued)

| Change  | Location   |
|---|--|
| Definition of ICI field of Execution Program Status Register updated          | Issue H removes this information.                    |
| Table of nonsupported Thumb instructions removed.                             |  |
| Second footnote on Table 5-1 removed.   | Issue H removes this information.                    |
| Addition of note to vector table and reset description                        |  |
| Description of <b>SLEEPING</b> and <b>SLEEPDEEP</b> signals updated.          |  |
| Description of extending sleep functionality added                            |  |
| Addition of Auxiliary Control Register  | <i>Auxiliary Control Register, ACTLR</i> on page 4-5 |
| Irq 0 to 31 Priority Register amended to Irq 0 to 3 Priority Register         | Issue H removes this information.                    |
| Irq 236 to 239 Priority Register amended to Irq 224 to 239 Priority Register  |  |
| <b>HCLK</b> changed to <b>FCLK</b>  |  |
| Addition of ascending MPU region priority information                         | <i>About the MPU</i> on page 5-2                     |
| Extra paragraph added.  | Issue H removes this information.                    |
| Debug Core Register Selector Register REGSEL bit field function updated       |  |
| Paragraph added about removing FPB  |  |
| Addition of note about configuring flash patch registers to be present or not | <i>FPB programmers model</i> on page 7-10            |
| First bullet point updated  | <i>About the DWT</i> on page 8-2                     |
| Addition of note about configuring DWT registers to be present or not         | <i>DWT Programmers Model</i> on page 8-4             |
| DWT Control Register reset state updated                                      | Table 8-1 on page 8-4                                |
| DWT Control Register bit assignments updated                                  | Issue H removes this information.                    |
| Addition of note about configuring ITM registers to be present or not         | <i>ITM programmers model</i> on page 9-4             |
| ITM Trace Control Register TSENA field bit function updated                   |  |
| Addition of note about configuring AHB-AP registers to be present or not      | <i>AHB-AP programmers model</i> on page 7-6          |
| AHB-AP Banked Data Register DATA field reset value removed                    | Issue H removes this information.                    |
| Addition of information about absence of debug functionality                  | <i>About debug</i> on page 7-2                       |
| Information about exclusive memory accesses updated                           | Issue H removes this information.                    |
| Note about bit-band accesses updated  | <i>Bit-banding</i> on page 3-16                      |
| ETM block diagram updated   | Figure 10-1 on page 10-3                             |



Table A-1 Differences between issue E and issue F (continued)

| Change  | Location  |
|---|---|
| HCLK and CLK replaced by FCLK   | Issue H removes this information.                             |
| ETM Trigger Even Register description upgraded  |   |
| ETM Status Register description updated   |   |
| TraceEnable register replaced by Trace Start/Stop Resource Control  |   |
| TraceEnable Control 2 register added  |   |
| Lock Status Register added  |   |
| Description of FIFOFULL Region Register added   |   |
| Description of FIFOFULL Level Register updated  |   |
| Description of CoreSight Trace ID Register updated  |   |
| Description ETM Control Register implementation bits expanded   | <i>Main Control Register, ETMCR</i> on page 10-10             |
| Description of TraceEnable Control 1 Register updated   | <i>TraceEnable Control 1 Register, ETMTECR1</i> on page 10-15 |
| Description ETM ID Register updated to reflect revision 2   | <i>ID Register, ETMIDR</i> on page 10-16                      |
| Subsection describing ETM Event Resources added   | <i>Resources</i> on page 10-3                                 |
| Subsection describing Cross Trigger Interface added   | <i>Recommended CTI connections</i> on page 10-7               |
| Branch status interface section updated   | Issue H removes this information.                             |
| Note about <b>HADDRICore</b> and <b>HTRANSICore</b> removed   |   |
| Example of an opcode sequence timing diagram updated  |   |
| Description of APB interface inputs added   |   |
| Addition of note about configuring TPIU registers to be present or not  | <i>TPIU programmers model</i> on page 11-5                    |
| The following TPIU registers removed from summary table and descriptions: <ul style="list-style-type: none"> <li>• Trigger control registers</li> <li>• EXTCTL port registers</li> <li>• Test pattern registers.</li> </ul>   | Issue H removes this information.                             |
| The following TPIU registers added to the summary table and descriptions: <ul style="list-style-type: none"> <li>• Integration Register: TRIGGER</li> <li>• Integration Mode Control Register</li> <li>• Integration Register: FIFO data 0</li> <li>• Integration Register: FIFO data 1</li> <li>• Claim tag set register</li> <li>• Claim tag clear register</li> <li>• Device ID register</li> <li>• PID registers</li> <li>• CID registers.</li> </ul> |   |

Table A-2 Differences between issue F and issue G

| Change   | Location  |
|--|---|
| Wake-up Interrupt Controller (WIC) added to Cortex-M3 block diagram              | Figure 2-1 on page 2-2  |
| Section 1-2 and section 1-3 combined   | Issue H distributes this information between <i>Features</i> on page 1-3, <i>Interfaces</i> on page 1-4, and <i>Configurable options</i> on page 1-5. |
| New subsection added to list changes in functionality between r1p1 and r2p0      | <i>Differences in functionality between r1p1 and r2p0</i> on page 1-10  |
| New subsection added to describe the WIC   | <i>Low power modes</i> on page 6-3  |
| New bullet point to describe <b>FIXHMASTERTYPE</b> pin                           | <i>Differences in functionality between r1p1 and r2p0</i> on page 1-10  |
| Table of supported instruction removed   | Issue H reinstates this information in Table 3-1 on page 3-4.   |
| More information added about the stacked xPSR                                    | Issue H removes this information.   |
| Reset value of Configuration Control Register changed to 0x00000200              |   |
| System and Vendor_SYS memory regions added to table of memory region permissions |   |
| Memory region for Private Peripheral Bus changed to +0000000                     |   |
| <b>SLEEPHOLDREQ</b> changed to <b>SLEEPHOLDREQn</b>                              |   |
| <b>SLEEPHOLDACK</b> changed to <b>SLEEPHOLDACKn</b>                              |   |
| <b>DEEPSLEEP</b> signal changed to <b>SLEEPDEEP</b>                              |   |
| <b>DBGRESTARTACK</b> changed to <b>DBGRESTARTED</b>                              |   |
| <b>DBGRESTARTREQ</b> changed to <b>DBGRESTART</b>                                |   |
| New subsection added to describe the WIC   |   |
| Address of Irq 224 to 239 Priority Register changed to 0xE000E4EC                |   |
| Enhanced description of function of C_MASKINTS field                             |   |
| Settings for DWT Function Registers updated                                      |   |
| Minor change to timing information of ETMIA                                      |   |

Table A-2 Differences between issue F and issue G (continued)

| Change   | Location                          |
|--|-----------------------------------|
| Change to timing information for ETMIVALID   | Issue H removes this information. |
| <b>SLEEPHOLDREQn</b> removed from table of miscellaneous input ports timing parameters                             |                                   |
| Table of low power input ports timing parameters added   |                                   |
| <b>FIXHMASTERTYPE</b> added to table of debug input ports timing parameters  |                                   |
| Input changed to Output in table header  |                                   |
| SLEEPING, SLEEPDEEP, and SLEEPHOLDACKn removed from table of miscellaneous output ports timing parameters          |                                   |
| <b>SLEEPDEEP</b> , <b>SLEEPING</b> , <b>SLEEPHOLDREQ</b> , and <b>SLEEPHOLDACK</b> removed                         |                                   |
| New section added to describe the low power interface signals  |                                   |
| New section added to describe the WIC interface signals  |                                   |
| <b>SLEEPHOLDACKn</b> removed from table of miscellaneous signals   |                                   |
| Asserted changed to de-asserted in the description of <b>SLEEPHOLDREQn</b> in table of low power interface signals |                                   |
| <b>FIXMASTERTPYE</b> added to list of AHB-AP interface signals   |                                   |

————— **Note** —————

Issue H of this book is significantly reorganized and simplified to eliminate duplication of information contained in the ARM Architecture Reference Manual and other ARM documentation.

Table A-3 Differences between issue G and issue H

| Change  | Location   |
|---|--|
| Chapter 1 simplified to provide only a high-level description of the processor. Some information to Chapter 2.  | Chapter 1 <i>Introduction</i><br>Chapter 2 <i>Functional Description</i>                                     |
| Removed the following sections from Chapter 1: <ul style="list-style-type: none"> <li>• Execution pipeline stages</li> <li>• Prefetch unit</li> <li>• Branch target forwarding</li> <li>• Store buffers.</li> </ul> | See the <i>ARMv7-M Architecture Reference Manual</i> and the implementation documentation for the processor. |
| Added functional description chapter  | Chapter 2 <i>Functional Description</i>  |
| Simplified description of the programmers model and modes of operation and execution  | <i>About the programmers model</i> on page 3-2<br><i>Modes of operation and execution</i> on page 3-3        |
| Added cycle counts to instruction set summary   | <i>Instruction set summary</i> on page 3-4   |

**Table A-3 Differences between issue G and issue H (continued)**

| <b>Change</b>   | <b>Location</b>   |
|---|---|
| Descriptions of the memory system and of exceptions moved to Chapter 3.   | Chapter 3 <i>Programmers Model</i>  |
| Component-specific registers moved from System Control chapter to appropriate chapters within the manual.   | Chapter 4 <i>System Control</i>   |
| Deleted Clocking and Resets chapter.  | See the implementation documentation for the processor.   |
| Deleted Power Management chapter.   |   |
| In the Memory Protection Unit and Nested Vector Interrupt Controller chapters, removed description of architecturally-defined registers.                    |   |
| Reorganized debug description into a single chapter.  | Chapter 7 <i>Debug</i>  |
| Deleted Bus Interface chapter and moved high-level information to appropriate chapters.   | Chapter 1 <i>Introduction</i><br>Chapter 2 <i>Functional Description</i><br>Chapter 3 <i>Programmers Model</i>                              |
| Deleted Debug Port chapter and incorporated general information from this chapter into chapters 2 and 7.  | Chapter 2 <i>Functional Description</i><br>Chapter 7 <i>Debug</i>   |
| Moved information from the System Debug chapter to create new chapters for the Data Watchpoint and Trace Unit and the Instrumentation Trace Macrocell Unit. | Chapter 8 <i>Data Watchpoint and Trace Unit</i><br>Chapter 9 <i>Instrumentation Trace Macrocell Unit</i>                                    |
| Reorganized Embedded Trace Macrocell description into a single chapter.   | Chapter 10 <i>Embedded Trace Macrocell</i>  |
| Removed signal information and architecturally-defined register descriptions from the Trace Port Interface Unit chapter.                                    | Removed duplicate information. See the <i>ARMv7-M Architecture Reference Manual</i> and the implementation documentation for the processor. |
| Moved instruction timing information to chapter 3.  | <i>Instruction set summary</i> on page 3-4  |
| Removed AC Characteristics and Signal Descriptions chapters.  | See the implementation documentation for the processor.   |

# Glossary

This glossary describes some of the terms used in technical documents from ARM.

**Abort** A mechanism that indicates to a core that the attempted memory access is invalid or not allowed or that the data returned by the memory access is invalid. An abort can be caused by the external or internal memory system as a result of attempting to access invalid or protected instruction or data memory.

*See also* Data Abort, External Abort and Prefetch Abort.

**Addressing modes** Various mechanisms, shared by many different instructions, for generating values used by the instructions.

**Advanced High-performance Bus (AHB)**

A bus protocol with a fixed pipeline between address/control and data phases. It only supports a subset of the functionality provided by the AMBA AXI protocol. The full AMBA AHB protocol specification includes a number of features that are not commonly required for master and slave IP developments and ARM recommends only a subset of the protocol is usually used. This subset is defined as the AMBA AHB-Lite protocol.

*See also* Advanced Microcontroller Bus Architecture and AHB-Lite.

**Advanced Microcontroller Bus Architecture (AMBA)**

A family of protocol specifications that describe a strategy for the interconnect. AMBA is the ARM open standard for on-chip buses. It is an on-chip bus specification that details a strategy for the interconnection and management of functional blocks that make up a *System-on-Chip* (SoC). It aids in the development of embedded processors with one or more CPUs or signal processors and multiple peripherals. AMBA complements a reusable design methodology by defining a common backbone for SoC modules.

**Advanced Peripheral Bus (APB)**

A simpler bus protocol than AXI and AHB. It is designed for use with ancillary or general-purpose peripherals such as timers, interrupt controllers, UARTs, and I/O ports. Connection to the main system bus is through a system-to-peripheral bus bridge that helps to reduce system power consumption.

**AHB** *See* Advanced High-performance Bus.

**AHB Access Port (AHB-AP)**

An optional component of the DAP that provides an AHB interface to a SoC.

**AHB-AP** *See* AHB Access Port.

**AHB-Lite**

A subset of the full AMBA AHB protocol specification. It provides all of the basic functions required by the majority of AMBA AHB slave and master designs, particularly when used with a multi-layer AMBA interconnect. In most cases, the extra facilities provided by a full AMBA AHB interface are implemented more efficiently by using an AMBA AXI protocol interface.

**AHB Trace Macrocell**

A hardware macrocell that, when connected to a processor core, outputs data trace information on a trace port.

**Aligned**

A data item stored at an address that is divisible by the number of bytes that defines the data size is said to be aligned. Aligned words and halfwords have addresses that are divisible by four and two respectively. The terms word-aligned and halfword-aligned therefore stipulate addresses that are divisible by four and two respectively.

**AMBA**

*See* Advanced Microcontroller Bus Architecture.

**Advanced Trace Bus (ATB)**

A bus used by trace devices to share CoreSight capture resources.

**APB**

*See* Advanced Peripheral Bus.

**Application Specific Integrated Circuit (ASIC)**

An integrated circuit that has been designed to perform a specific application function. It can be custom-built or mass-produced.

**Architecture**

The organization of hardware and/or software that characterizes a processor and its attached components, and enables devices with similar characteristics to be grouped together when describing their behavior, for example, Harvard architecture, instruction set architecture, ARMv7-M architecture.

**ARM instruction**

An instruction of the ARM Instruction Set Architecture (ISA). These cannot be executed by the Cortex-M3 processor.

**ARM state**

The processor state in which the processor executes the instructions of the ARM ISA. The processor only operates in Thumb state, never in ARM state.

**ASIC**

*See* Application Specific Integrated Circuit.

**ATB**

*See* Advanced Trace Bus.

**ATB bridge**

A synchronous ATB bridge provides a register slice to facilitate timing closure through the addition of a pipeline stage. It also provides a unidirectional link between two synchronous ATB domains.

An asynchronous ATB bridge provides a unidirectional link between two ATB domains with asynchronous clocks. It is intended to support connection of components with ATB ports residing in different clock domains.

|                                 |   |
|---------------------------------|---|
| <b>Base register</b>            | A register specified by a load or store instruction that is used to hold the base value for the instruction's address calculation. Depending on the instruction and its addressing mode, an offset can be added to or subtracted from the base register value to form the address that is sent to memory.   |
| <b>Base register write-back</b> | Updating the contents of the base register used in an instruction target address calculation so that the modified address is changed to the next higher or lower sequential address in memory. This means that it is not necessary to fetch the target address for successive instruction transfers and enables faster burst accesses to sequential memory.   |
| <b>Beat</b>                     | Alternative word for an individual data transfer within a burst. For example, an INCR4 burst comprises four beats.  |
| <b>BE-8</b>                     | Big-endian view of memory in a byte-invariant system.<br><i>See also</i> BE-32, LE, Byte-invariant and Word-invariant.  |
| <b>BE-32</b>                    | Big-endian view of memory in a word-invariant system.<br><i>See also</i> BE-8, LE, Byte-invariant and Word-invariant.   |
| <b>Big-endian</b>               | Byte ordering scheme in which bytes of decreasing significance in a data word are stored at increasing addresses in memory.<br><i>See also</i> Little-endian and Endianness.  |
| <b>Big-endian memory</b>        | Memory in which: <ul style="list-style-type: none"> <li>• a byte or halfword at a word-aligned address is the most significant byte or halfword within the word at that address</li> <li>• a byte at a halfword-aligned address is the most significant byte within the halfword at that address.</li> </ul> <i>See also</i> Little-endian memory.  |
| <b>Boundary scan chain</b>      | A boundary scan chain is made up of serially-connected devices that implement boundary scan technology using a standard JTAG TAP interface. Each device contains at least one TAP controller containing shift registers that form the chain connected between <b>TDI</b> and <b>TDO</b> , through which test data is shifted. Processors can contain several shift registers to enable you to access selected parts of the device.          |
| <b>Branch folding</b>           | Branch folding is a technique where the branch instruction is completely removed from the instruction stream presented to the execution pipeline.   |
| <b>Breakpoint</b>               | A breakpoint is a mechanism provided by debuggers to identify an instruction at which program execution is to be halted. Breakpoints are inserted by the programmer to enable inspection of register contents, memory locations, variable values at fixed points in the program execution to test that the program is operating correctly. Breakpoints are removed after the program is successfully tested.<br><i>See also</i> Watchpoint. |
| <b>Burst</b>                    | A group of transfers to consecutive addresses. Because the addresses are consecutive, there is no requirement to supply an address for any of the transfers after the first one. This increases the speed at which the group of transfers can occur. Bursts over AMBA are controlled using signals to indicate the length of the burst and how the addresses are incremented.<br><i>See also</i> Beat.                                      |

|                                     |  |
|-------------------------------------|--|
| <b>Byte</b>                         | An 8-bit data item.  |
| <b>Byte-invariant</b>               | <p>In a byte-invariant system, the address of each byte of memory remains unchanged when switching between little-endian and big-endian operation. When a data item larger than a byte is loaded from or stored to memory, the bytes making up that data item are arranged into the correct order depending on the endianness of the memory access. The ARM architecture supports byte-invariant systems in ARMv6 and later versions. When byte-invariant support is selected, unaligned halfword and word memory accesses are also supported. Multi-word accesses are expected to be word-aligned.</p> <p><i>See also</i> Word-invariant.</p> |
| <b>Clock gating</b>                 | Gating a clock signal for a macrocell with a control signal and using the modified clock that results to control the operating state of the macrocell.   |
| <b>Clocks Per Instruction (CPI)</b> | <i>See</i> Cycles Per Instruction (CPI).   |
| <b>Cold reset</b>                   | <p>Also known as power-on reset.</p> <p><i>See also</i> Warm reset.</p>  |
| <b>Context</b>                      | <p>The environment that each process operates in for a multitasking operating system.</p> <p><i>See also</i> Fast context switch.</p>  |
| <b>Core</b>                         | A core is that part of a processor that contains the ALU, the datapath, the general-purpose registers, the Program Counter, and the instruction decode and control circuitry.  |
| <b>Core reset</b>                   | <i>See</i> Warm reset.   |
| <b>CoreSight</b>                    | The infrastructure for monitoring, tracing, and debugging a complete system on chip.   |
| <b>CPI</b>                          | <i>See</i> Cycles per instruction.   |
| <b>Cycles Per instruction (CPI)</b> | <p>Cycles per instruction (or clocks per instruction) is a measure of the number of computer instructions that can be performed in one clock cycle. This figure of merit can be used to compare the performance of different CPUs that implement the same instruction set against each other. The lower the value, the better the performance.</p>   |
| <b>Data Abort</b>                   | <p>An indication from a memory system to the core of an attempt to access an illegal data memory location. An exception must be taken if the processor attempts to use the data that caused the abort.</p> <p><i>See also</i> Abort.</p>   |
| <b>DCode Memory</b>                 | Memory space at 0x00000000 to 0x1FFFFFFF.  |
| <b>Debug Access Port (DAP)</b>      | A TAP block that acts as an AMBA, AHB or AHB-Lite, master for access to a system bus. The DAP is the term used to encompass a set of modular blocks that support system wide debug. The DAP is a modular component, intended to be extendable to support optional access to multiple systems such as memory mapped AHB and CoreSight APB through a single debug interface.   |
| <b>Debugger</b>                     | A debugging system that includes a program, used to detect, locate, and correct software faults, together with custom hardware that supports software debugging.   |
| <b>Embedded Trace Buffer</b>        | The ETB provides on-chip storage of trace data using a configurable sized RAM.   |



**Embedded Trace Macrocell (ETM)**

A hardware macrocell that, when connected to a processor core, outputs instruction trace information on a trace port.

**Endianness**

Byte ordering. The scheme that determines the order that successive bytes of a data word are stored in memory. An aspect of the system's memory mapping.

*See also* Little-endian and Big-endian

**ETB**

*See* Embedded Trace Buffer.

**ETM**

*See* Embedded Trace Macrocell.

**Exception**

An error or event which can cause the processor to suspend the currently executing instruction stream and execute a specific exception handler or interrupt service routine. The exception could be an external interrupt or NMI, or it could be a fault or error event that is considered serious enough to require that program execution is interrupted. Examples include attempting to perform an invalid memory access, external interrupts, and undefined instructions. When an exception occurs, normal program flow is interrupted and execution is resumed at the corresponding exception vector. This contains the first instruction of the interrupt service routine to deal with the exception.

**Exception handler**

*See* Interrupt service routine.

**Exception vector**

*See* Interrupt vector.

**External PPB**

PPB memory space at 0xE0040000 to 0xE00FFFFF.

**Flash Patch and Breakpoint unit (FPB)**

A set of address matching tags, that reroute accesses into flash to a special part of SRAM. This permits patching flash locations for breakpointing and quick fixes or changes.

**Formatter**

The formatter is an internal input block in the ETB and TPIU that embeds the trace source ID within the data to create a single trace stream.

**Halfword**

A 16-bit data item.

**Halt mode**

One of two mutually exclusive debug modes. In halt mode all processor execution halts when a breakpoint or watchpoint is encountered. All processor state, coprocessor state, memory and input/output locations can be examined and altered by the JTAG interface.

*See also* Monitor debug-mode.

**Host**

A computer that provides data and other services to another computer. Especially, a computer providing debugging services to a target being debugged.

**HTM**

*See* AHB Trace Macrocell.

**ICode Memory**

Memory space at 0x00000000 to 0x1FFFFFFF.

**Illegal instruction**

An instruction that is architecturally Undefined.

**Implementation-defined**

The behavior is not architecturally defined, but is defined and documented by individual implementations.

**Implementation-specific**

The behavior is not architecturally defined, and does not have to be documented by individual implementations. Used when there are a number of implementation options available and the option chosen does not affect software compatibility.

|  |   |
|--|---|
| <b>Instruction cycle count</b>             | The number of cycles for which an instruction occupies the Execute stage of the pipeline.   |
| <b>Instrumentation trace</b>               | A component for debugging real-time systems through a simple memory-mapped trace interface, providing printf style debugging.   |
| <b>Intelligent Energy Management (IEM)</b> | A technology that enables dynamic voltage scaling and clock frequency variation to be used to reduce power consumption in a device.   |
| <b>Internal PPB</b>                        | PPB memory space at 0xE0000000 to 0xE003FFFF.   |
| <b>Interrupt service routine</b>           | A program that control of the processor is passed to when an interrupt occurs.  |
| <b>Interrupt vector</b>                    | One of a number of fixed addresses in low memory that contains the first instruction of the corresponding interrupt service routine.  |
| <b>Joint Test Action Group (JTAG)</b>      | The name of the organization that developed standard IEEE 1149.1. This standard defines a boundary-scan architecture used for in-circuit testing of integrated circuit devices. It is commonly known by the initials JTAG.  |
| <b>JTAG</b>                                | <i>See</i> Joint Test Action Group.   |
| <b>JTAG Debug Port (JTAG-DP)</b>           | An optional external interface for the DAP that provides a standard JTAG interface for debug access.  |
| <b>JTAG-DP</b>                             | <i>See</i> JTAG Debug Port.   |
| <b>LE</b>                                  | Little-endian view of memory in both byte-invariant and word-invariant systems. <i>See also</i> Byte-invariant, Word-invariant.   |
| <b>Little-endian</b>                       | Byte ordering scheme in which bytes of increasing significance in a data word are stored at increasing addresses in memory.<br><br><i>See also</i> Big-endian and Endianness.   |
| <b>Little-endian memory</b>                | Memory in which: <ul style="list-style-type: none"> <li>• a byte or halfword at a word-aligned address is the least significant byte or halfword within the word at that address</li> <li>• a byte at a halfword-aligned address is the least significant byte within the halfword at that address.</li> </ul> <i>See also</i> Big-endian memory. |
| <b>Load/store architecture</b>             | A processor architecture where data-processing operations only operate on register contents, not directly on memory contents.   |
| <b>Load Store Unit (LSU)</b>               | The part of a processor that handles load and store transfers.  |
| <b>LSU</b>                                 | <i>See</i> Load Store Unit.   |
| <b>Macrocell</b>                           | A complex logic block with a defined interface and behavior. A typical VLSI system comprises several macrocells (such as a processor, an ETM, and a memory block) plus application-specific logic.  |

|  |  |
|--|--|
| <b>Memory coherency</b>                            | A memory is coherent if the value read by a data read or instruction fetch is the value that was most recently written to that location. Memory coherency is made difficult when there are multiple possible physical locations that are involved, such as a system that has main memory, a write buffer and a cache.  |
| <b>Memory Protection Unit (MPU)</b>                | Hardware that controls access permissions to blocks of memory. Unlike an MMU, an MPU does not modify addresses.  |
| <b>Microprocessor</b>                              | <i>See</i> Processor.  |
| <b>Monitor debug-mode</b>                          | One of two mutually exclusive debug modes. In Monitor debug-mode the processor enables a software abort handler provided by the debug monitor or operating system debug task. When a breakpoint or watchpoint is encountered, this enables vital system interrupts to continue to be serviced while normal program execution is suspended.<br><br><i>See also</i> Halt mode.                       |
| <b>MPU</b>   | <i>See</i> Memory Protection Unit.   |
| <b>Multi-layer</b>                                 | An interconnect scheme similar to a cross-bar switch. Each master on the interconnect has a direct link to each slave, The link is not shared with other masters. This enables each master to process transfers in parallel with other masters. Contention only occurs in a multi-layer interconnect at a payload destination, typically the slave.  |
| <b>Nested Vectored Interrupt Controller (NVIC)</b> | Provides the processor with configurable interrupt handling abilities.   |
| <b>NMI</b>   | <i>See</i> Non-maskable interrupt  |
| <b>Non-maskable interrupt</b>                      | A NonMaskable Interrupt (NMI) can be signalled by a peripheral or triggered by software. This is the highest priority exception other than reset. It is permanently enabled and has a fixed priority of -2. NMIs cannot be: <ul style="list-style-type: none"> <li>• masked or prevented from activation by any other exception</li> <li>• preempted by any exception other than Reset.</li> </ul> |
| <b>NVIC</b>  | <i>See</i> Nested Vectored Interrupt Controller.   |
| <b>Penalty</b>                                     | The number of cycles in which no useful Execute stage pipeline activity can occur because an instruction flow is different from that assumed or predicted.   |
| <b>PFU</b>   | <i>See</i> Prefetch Unit.  |
| <b>PMU</b>   | <i>See</i> Power Management Unit.  |
| <b>Power Management Unit (PMU)</b>                 | Provides the processor with power management capability.   |
| <b>Power-on reset</b>                              | <i>See</i> Cold reset.   |
| <b>PPB</b>   | <i>See</i> Private Peripheral Bus.   |
| <b>Prefetching</b>                                 | In pipelined processors, the process of fetching instructions from memory to fill up the pipeline before the preceding instructions have finished executing. Prefetching an instruction does not mean that the instruction has to be executed.   |

|                                    |   |
|------------------------------------|---|
| <b>Prefetch Abort</b>              | An indication from a memory system to the core that an instruction has been fetched from an illegal memory location. An exception must be taken if the processor attempts to execute the instruction. A Prefetch Abort can be caused by the external or internal memory system as a result of attempting to access invalid instruction memory.<br><br><i>See also</i> Data Abort, Abort.                                  |
| <b>Prefetch Unit (PFU)</b>         | The PFU fetches instructions from the memory system that can supply one word each cycle. The PFU buffers up to three word fetches in its FIFO, which means that it can buffer up to three 32-bit Thumb instructions or six 16-bit Thumb instructions.   |
| <b>Private Peripheral Bus</b>      | Memory space at 0xE0000000 to 0xE00FFFFF.   |
| <b>Processor</b>                   | A processor is the circuitry in a computer system required to process data using the computer instructions. It is an abbreviation of microprocessor. A clock source, power supplies, and main memory are also required to create a minimum complete working computer system.  |
| <b>RW1C</b>                        | Register bits marked RW1C can be read normally and support write-one-to-clear. A read then write of the result back to the register will clear all bits set. RW1C protects against read-modify-write errors occurring on bits set between reading the register and writing the value back (since they are written as zero, they will not be cleared).   |
| <b>RealView ICE</b>                | A system for debugging embedded processor cores using a JTAG interface.   |
| <b>Reserved</b>                    | A field in a control register or instruction format is reserved if the field is to be defined by the implementation, or produces Unpredictable results if the contents of the field are not zero. These fields are reserved for use in future extensions of the architecture or are implementation-specific. All reserved bits not used by the implementation must be written as 0 and read as 0.                         |
| <b>Scan chain</b>                  | A scan chain is made up of serially-connected devices that implement boundary scan technology using a standard JTAG TAP interface. Each device contains at least one TAP controller containing shift registers that form the chain connected between <b>TDI</b> and <b>TDO</b> , through which test data is shifted. Processors can contain several shift registers to enable you to access selected parts of the device. |
| <b>Serial-Wire Debug Port</b>      | An optional external interface for the DAP that provides a serial-wire bidirectional debug interface.   |
| <b>Serial-Wire JTAG Debug Port</b> | A standard debug port that combines JTAG-DP and SW-DP.  |
| <b>SW-DP</b>                       | <i>See</i> Serial-Wire Debug Port.  |
| <b>SWJ-DP</b>                      | <i>See</i> Serial-Wire JTAG Debug Port.   |
| <b>Synchronization primitive</b>   | The memory synchronization primitive instructions are those instructions that are used to ensure memory synchronization. That is, the LDREX and STREX instructions.   |
| <b>System memory</b>               | Memory space at 0x20000000 to 0xFFFFFFFF, excluding PPB space at 0xE0000000 to 0xE00FFFFF.  |
| <b>TAP</b>                         | <i>See</i> Test access port.  |
| <b>Test Access Port (TAP)</b>      | The collection of four mandatory and one optional terminals that form the input/output and control interface to a JTAG boundary-scan architecture. The mandatory terminals are <b>TDI</b> , <b>TDO</b> , <b>TMS</b> , and <b>TCK</b> . The optional terminal is <b>TRST</b> . This signal is mandatory in ARM cores because it is used to reset the debug logic.  |

|   |   |
|---|---|
| <b>Thread Control Block</b>               | A data structure used by an operating system kernel to maintain information specific to a single thread of execution.   |
| <b>Thumb instruction</b>                  | A halfword that specifies an operation for an ARM processor in Thumb state to perform. Thumb instructions must be halfword-aligned.   |
| <b>Thumb state</b>                        | A processor that is executing Thumb (16-bit) halfword aligned instructions is operating in Thumb state.   |
| <b>TPA</b>                                | See <i>Trace Port Analyzer</i> .  |
| <b>TPIU</b>                               | See <i>Trace Port Interface Unit</i> .  |
| <b>Trace Port Analyzer (TPA)</b>          | A hardware device that captures trace information output on a trace port. This can be a low-cost product designed specifically for trace acquisition, or a logic analyzer.  |
| <b>Trace Port Interface Unit (TPIU)</b>   | Drains trace data and acts as a bridge between the on-chip trace data and the data stream captured by a TPA.  |
| <b>Unaligned</b>                          | A data item stored at an address that is not divisible by the number of bytes that defines the data size is said to be unaligned. For example, a word stored at an address that is not divisible by four.   |
| <b>Wake-up Interrupt Controller (WIC)</b> | The Wake-up Interrupt Controller provides significantly reduced gate count interrupt detection and prioritization logic.  |
| <b>Warm reset</b>                         | Also known as a core reset. Initializes the majority of the processor excluding the debug controller and debug logic. This type of reset is useful if you are using the debugging features of a processor.  |
| <b>Watchpoint</b>                         | A watchpoint is a mechanism provided by debuggers to halt program execution when the data contained by a particular memory address is changed. Watchpoints are inserted by the programmer to enable inspection of register contents, memory locations, and variable values when memory is written to test that the program is operating correctly. Watchpoints are removed after the program is successfully tested. <i>See also</i> Breakpoint.  |
| <b>WIC</b>                                | See <i>Wake-up Interrupt Controller</i> .   |
| <b>Word</b>                               | A 32-bit data item.   |
| <b>Word-invariant</b>                     | <p>In a word-invariant system, the address of each byte of memory changes when switching between little-endian and big-endian operation, in such a way that the byte with address A in one endianness has address A EOR 3 in the other endianness. As a result, each aligned word of memory always consists of the same four bytes of memory in the same order, regardless of endianness. The change of endianness occurs because of the change to the byte addresses, not because the bytes are rearranged.</p> <p>The ARM architecture supports word-invariant systems in ARMv3 and later versions. When word-invariant support is selected, the behavior of load or store instructions that are given unaligned addresses is instruction-specific, and is in general not the expected behavior for an unaligned access. It is recommended that word-invariant systems use the endianness that produces the required byte addresses at all times, apart possibly from very early in their reset handlers before they have set up the endianness, and that this early part of the reset handler must use only aligned word memory accesses.</p> <p><i>See also</i> Byte-invariant.</p> |
| <b>Write buffer</b>                       | A pipeline stage for buffering write data to prevent bus stalls from stalling the processor.  |