

Arm[®] Compiler

Version 6.6

Migration and Compatibility Guide

The logo for Arm, consisting of the lowercase letters 'arm' in a bold, sans-serif font.

Arm® Compiler

Migration and Compatibility Guide

Copyright © 2014–2017, 2019 Arm Limited or its affiliates. All rights reserved.

Release Information

Document History

Issue	Date	Confidentiality	Change
A	14 March 2014	Non-Confidential	Arm Compiler v6.00 Release
B	15 December 2014	Non-Confidential	Arm Compiler v6.01 Release
C	30 June 2015	Non-Confidential	Arm Compiler v6.02 Release
D	18 November 2015	Non-Confidential	Arm Compiler v6.3 Release
E	24 February 2016	Non-Confidential	Arm Compiler v6.4 Release
F	29 June 2016	Non-Confidential	Arm Compiler v6.5 Release
G	04 November 2016	Non-Confidential	Arm Compiler v6.6 Release
H	08 May 2017	Non-Confidential	Arm Compiler v6.6.1 Release
I	29 November 2017	Non-Confidential	Arm Compiler v6.6.2 Release
J	28 August 2019	Non-Confidential	Arm Compiler v6.6.3 Release

Non-Confidential Proprietary Notice

This document is protected by copyright and other related rights and the practice or implementation of the information contained in this document may be protected by one or more patents or pending patent applications. No part of this document may be reproduced in any form by any means without the express prior written permission of Arm. **No license, express or implied, by estoppel or otherwise to any intellectual property rights is granted by this document unless specifically stated.**

Your access to the information in this document is conditional upon your acceptance that you will not use or permit others to use the information for the purposes of determining whether implementations infringe any third party patents.

THIS DOCUMENT IS PROVIDED “AS IS”. ARM PROVIDES NO REPRESENTATIONS AND NO WARRANTIES, EXPRESS, IMPLIED OR STATUTORY, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTORY QUALITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO THE DOCUMENT. For the avoidance of doubt, Arm makes no representation with respect to, and has undertaken no analysis to identify or understand the scope and content of, third party patents, copyrights, trade secrets, or other rights.

This document may include technical inaccuracies or typographical errors.

TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT WILL ARM BE LIABLE FOR ANY DAMAGES, INCLUDING WITHOUT LIMITATION ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED AND REGARDLESS OF THE THEORY OF LIABILITY, ARISING OUT OF ANY USE OF THIS DOCUMENT, EVEN IF ARM HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

This document consists solely of commercial items. You shall be responsible for ensuring that any use, duplication or disclosure of this document complies fully with any relevant export laws and regulations to assure that this document or any portion thereof is

not exported, directly or indirectly, in violation of such export laws. Use of the word “partner” in reference to Arm’s customers is not intended to create or refer to any partnership relationship with any other company. Arm may make changes to this document at any time and without notice.

If any of the provisions contained in these terms conflict with any of the provisions of any click through or signed written agreement covering this document with Arm, then the click through or signed written agreement prevails over and supersedes the conflicting provisions of these terms. This document may be translated into other languages for convenience, and you agree that if there is any conflict between the English version of this document and any translation, the terms of the English version of the Agreement shall prevail.

The Arm corporate logo and words marked with ® or ™ are registered trademarks or trademarks of Arm Limited (or its subsidiaries) in the US and/or elsewhere. All rights reserved. Other brands and names mentioned in this document may be the trademarks of their respective owners. Please follow Arm’s trademark usage guidelines at <http://www.arm.com/company/policies/trademarks>.

Copyright © 2014–2017, 2019 Arm Limited (or its affiliates). All rights reserved.

Arm Limited. Company 02557590 registered in England.

110 Fulbourn Road, Cambridge, England CB1 9NJ.

LES-PRE-20349

Confidentiality Status

This document is Non-Confidential. The right to use, copy and disclose this document may be subject to license restrictions in accordance with the terms of the agreement entered into by Arm and the party that Arm delivered this document to.

Unrestricted Access is an Arm internal classification.

Product Status

The information in this document is Final, that is for a developed product.

Web Address

www.arm.com

Contents

Arm® Compiler Migration and Compatibility Guide

	Preface	
	<i>About this book</i>	9
Chapter 1	Configuration and Support Information	
	1.1 <i>Support level definitions</i>	1-12
	1.2 <i>Compiler configuration information</i>	1-16
Chapter 2	Migrating from Arm® Compiler 5 to Arm® Compiler 6	
	2.1 <i>Migration overview</i>	2-18
	2.2 <i>Toolchain differences</i>	2-19
	2.3 <i>Default differences</i>	2-20
	2.4 <i>Optimization differences</i>	2-22
	2.5 <i>Diagnostic messages</i>	2-24
	2.6 <i>Migration example</i>	2-26
Chapter 3	Migrating from armcc to armclang	
	3.1 <i>Migration of compiler command-line options from Arm® Compiler 5 to Arm® Compiler 6</i>	3-29
	3.2 <i>Arm® Compiler 5 and Arm® Compiler 6 stack protection behavior</i>	3-36
	3.3 <i>Command-line options for preprocessing assembly source code</i>	3-38
	3.4 <i>Migrating architecture and processor names for command-line options</i>	3-39
Chapter 4	Compiler Source Code Compatibility	
	4.1 <i>Language extension compatibility: keywords</i>	4-46

4.2	<i>Language extension compatibility: attributes</i>	4-49
4.3	<i>Language extension compatibility: pragmas</i>	4-51
4.4	<i>Language extension compatibility: intrinsics</i>	4-54
4.5	<i>Diagnostics for pragma compatibility</i>	4-58
4.6	<i>C and C++ implementation compatibility</i>	4-60
4.7	<i>Compatibility of C++ objects</i>	4-62

Chapter 5

Migrating from armasm to the armclang Integrated Assembler

5.1	<i>Overview of differences between armasm and GNU syntax assembly code</i>	5-65
5.2	<i>Comments</i>	5-67
5.3	<i>Labels</i>	5-68
5.4	<i>Numeric local labels</i>	5-69
5.5	<i>Functions</i>	5-71
5.6	<i>Sections</i>	5-72
5.7	<i>Symbol naming rules</i>	5-74
5.8	<i>Numeric literals</i>	5-75
5.9	<i>Operators</i>	5-76
5.10	<i>Alignment</i>	5-77
5.11	<i>PC-relative addressing</i>	5-78
5.12	<i>Conditional directives</i>	5-79
5.13	<i>Data definition directives</i>	5-80
5.14	<i>Instruction set directives</i>	5-82
5.15	<i>Miscellaneous directives</i>	5-83
5.16	<i>Symbol definition directives</i>	5-84

Appendix A

Code Examples

A.1	<i>Example startup code for Arm® Compiler 5 project</i>	Appx-A-87
A.2	<i>Example startup code for Arm® Compiler 6 project</i>	Appx-A-89

Appendix B

Licenses

B.1	<i>Apache License</i>	Appx-B-92
-----	-----------------------------	-----------

List of Figures

Arm® Compiler Migration and Compatibility Guide

<i>Figure 1-1</i>	<i>Integration boundaries in Arm Compiler 6</i>	<i>1-14</i>
-------------------	---	-------------

List of Tables

Arm® Compiler Migration and Compatibility Guide

Table 1-1	<i>FlexNet versions</i>	1-16
Table 2-1	<i>List of compilation tools</i>	2-19
Table 2-2	<i>Differences in defaults</i>	2-20
Table 2-3	<i>Optimization settings</i>	2-22
Table 2-4	<i>Command-line changes</i>	2-26
Table 3-1	<i>Comparison of compiler command-line options in Arm Compiler 6 and Arm Compiler 5</i>	3-29
Table 3-2	<i>Architecture selection in Arm Compiler 5 and Arm Compiler 6</i>	3-39
Table 3-3	<i>Processor selection in Arm Compiler 5 and Arm Compiler 6</i>	3-40
Table 4-1	<i>Keyword language extensions in Arm Compiler 5 and Arm Compiler 6</i>	4-46
Table 4-2	<i>Migrating the <code>__packed</code> keyword</i>	4-48
Table 4-3	<i>Support for <code>__declspec</code> attributes</i>	4-49
Table 4-4	<i>Migrating <code>__attribute__((at(address)))</code> and zero-initialized <code>__attribute__((section("name")))</code></i> ...	4-50
Table 4-5	<i>Pragma language extensions that must be replaced</i>	4-51
Table 4-6	<i>Compiler intrinsic support in Arm Compiler 6</i>	4-54
Table 4-7	<i>Pragma diagnostics</i>	4-58
Table 4-8	<i>C and C++ implementation detail differences</i>	4-60
Table 5-1	<i>Operator translation</i>	5-76
Table 5-2	<i>Conditional directive translation</i>	5-79
Table 5-3	<i>Data definition directives translation</i>	5-80
Table 5-4	<i>Instruction set directives translation</i>	5-82
Table 5-5	<i>Miscellaneous directives translation</i>	5-83
Table 5-6	<i>Symbol definition directives translation</i>	5-84

Preface

This preface introduces the *Arm® Compiler Migration and Compatibility Guide*.

It contains the following:

- [About this book on page 9](#).

About this book

The Arm® Compiler Migration and Compatibility Guide provides migration and compatibility information for users moving from older versions of Arm Compiler to Arm Compiler 6.

Using this book

This book is organized into the following chapters:

Chapter 1 Configuration and Support Information

Summarizes the support levels and FlexNet versions supported by the Arm compilation tools.

Chapter 2 Migrating from Arm® Compiler 5 to Arm® Compiler 6

Provides an overview of the differences between Arm Compiler 5 and Arm Compiler 6.

Chapter 3 Migrating from armcc to armclang

Compares Arm Compiler 6 command-line options to older versions of Arm Compiler.

Chapter 4 Compiler Source Code Compatibility

Provides details of source code compatibility between Arm Compiler 6 and older armcc compiler versions.

Chapter 5 Migrating from armasm to the armclang Integrated Assembler

Describes how to migrate assembly code from armasm syntax to GNU syntax (used by armclang).

Appendix A Code Examples

Provides source code examples for Arm Compiler 5 and Arm Compiler 6.

Appendix B Licenses

Describes the Apache license.

Glossary

The Arm® Glossary is a list of terms used in Arm documentation, together with definitions for those terms. The Arm Glossary does not contain terms that are industry standard unless the Arm meaning differs from the generally accepted meaning.

See the *Arm® Glossary* for more information.

Typographic conventions

italic

Introduces special terminology, denotes cross-references, and citations.

bold

Highlights interface elements, such as menu names. Denotes signal names. Also used for terms in descriptive lists, where appropriate.

monospace

Denotes text that you can enter at the keyboard, such as commands, file and program names, and source code.

monospace

Denotes a permitted abbreviation for a command or option. You can enter the underlined text instead of the full command or option name.

monospace italic

Denotes arguments to monospace text where the argument is to be replaced by a specific value.

monospace bold

Denotes language keywords when used outside example code.

<and>

Encloses replaceable terms for assembler syntax where they appear in code or code fragments.
For example:

```
MRC p15, 0, <Rd>, <CRn>, <CRm>, <Opcode_2>
```

SMALL CAPITALS

Used in body text for a few terms that have specific technical meanings, that are defined in the *Arm® Glossary*. For example, IMPLEMENTATION DEFINED, IMPLEMENTATION SPECIFIC, UNKNOWN, and UNPREDICTABLE.

Feedback

Feedback on this product

If you have any comments or suggestions about this product, contact your supplier and give:

- The product name.
- The product revision or version.
- An explanation with as much information as you can provide. Include symptoms and diagnostic procedures if appropriate.

Feedback on content

If you have comments on content then send an e-mail to errata@arm.com. Give:

- The title *Arm Compiler Migration and Compatibility Guide*.
- The number DUI0742J.
- If applicable, the page number(s) to which your comments refer.
- A concise explanation of your comments.

Arm also welcomes general suggestions for additions and improvements.

Note

Arm tests the PDF only in Adobe Acrobat and Acrobat Reader, and cannot guarantee the quality of the represented document when used with any other PDF reader.

Other information

- [Arm® Developer](#).
- [Arm® Information Center](#).
- [Arm® Technical Support Knowledge Articles](#).
- [Technical Support](#).
- [Arm® Glossary](#).

Chapter 1

Configuration and Support Information

Summarizes the support levels and FlexNet versions supported by the Arm compilation tools.

It contains the following sections:

- [1.1 Support level definitions on page 1-12.](#)
- [1.2 Compiler configuration information on page 1-16.](#)

1.1 Support level definitions

This describes the levels of support for various Arm Compiler 6 features.

Arm Compiler 6 is built on Clang and LLVM technology. Therefore it has more functionality than the set of product features described in the documentation. The following definitions clarify the levels of support and guarantees on functionality that are expected from these features.

Arm welcomes feedback regarding the use of all Arm Compiler 6 features, and endeavors to support users to a level that is appropriate for that feature. You can contact support at <https://developer.arm.com/support>.

Identification in the documentation

All features that are documented in the Arm Compiler 6 documentation are product features, except where explicitly stated. The limitations of non-product features are explicitly stated.

Product features

Product features are suitable for use in a production environment. The functionality is well-tested, and is expected to be stable across feature and update releases.

- Arm endeavors to give advance notice of significant functionality changes to product features.
- If you have a support and maintenance contract, Arm provides full support for use of all product features.
- Arm welcomes feedback on product features.
- Any issues with product features that Arm encounters or is made aware of are considered for fixing in future versions of Arm Compiler.

In addition to fully supported product features, some product features are only alpha or beta quality.

Beta product features

Beta product features are implementation complete, but have not been sufficiently tested to be regarded as suitable for use in production environments.

Beta product features are indicated with [BETA].

- Arm endeavors to document known limitations on beta product features.
- Beta product features are expected to eventually become product features in a future release of Arm Compiler 6.
- Arm encourages the use of beta product features, and welcomes feedback on them.
- Any issues with beta product features that Arm encounters or is made aware of are considered for fixing in future versions of Arm Compiler.

Alpha product features

Alpha product features are not implementation complete, and are subject to change in future releases, therefore the stability level is lower than in beta product features.

Alpha product features are indicated with [ALPHA].

- Arm endeavors to document known limitations of alpha product features.
- Arm encourages the use of alpha product features, and welcomes feedback on them.
- Any issues with alpha product features that Arm encounters or is made aware of are considered for fixing in future versions of Arm Compiler.

Community features

Arm Compiler 6 is built on LLVM technology and preserves the functionality of that technology where possible. This means that there are additional features available in Arm Compiler that are not listed in the documentation. These additional features are known as community features. For information on these community features, see the [documentation for the Clang/LLVM project](#).

Where community features are referenced in the documentation, they are indicated with [COMMUNITY].

- Arm makes no claims about the quality level or the degree of functionality of these features, except when explicitly stated in this documentation.
- Functionality might change significantly between feature releases.
- Arm makes no guarantees that community features will remain functional across update releases, although changes are expected to be unlikely.

Some community features might become product features in the future, but Arm provides no roadmap for this. Arm is interested in understanding your use of these features, and welcomes feedback on them. Arm supports customers using these features on a best-effort basis, unless the features are unsupported. Arm accepts defect reports on these features, but does not guarantee that these issues will be fixed in future releases.

Guidance on use of community features

There are several factors to consider when assessing the likelihood of a community feature being functional:

- The following figure shows the structure of the Arm Compiler 6 toolchain:

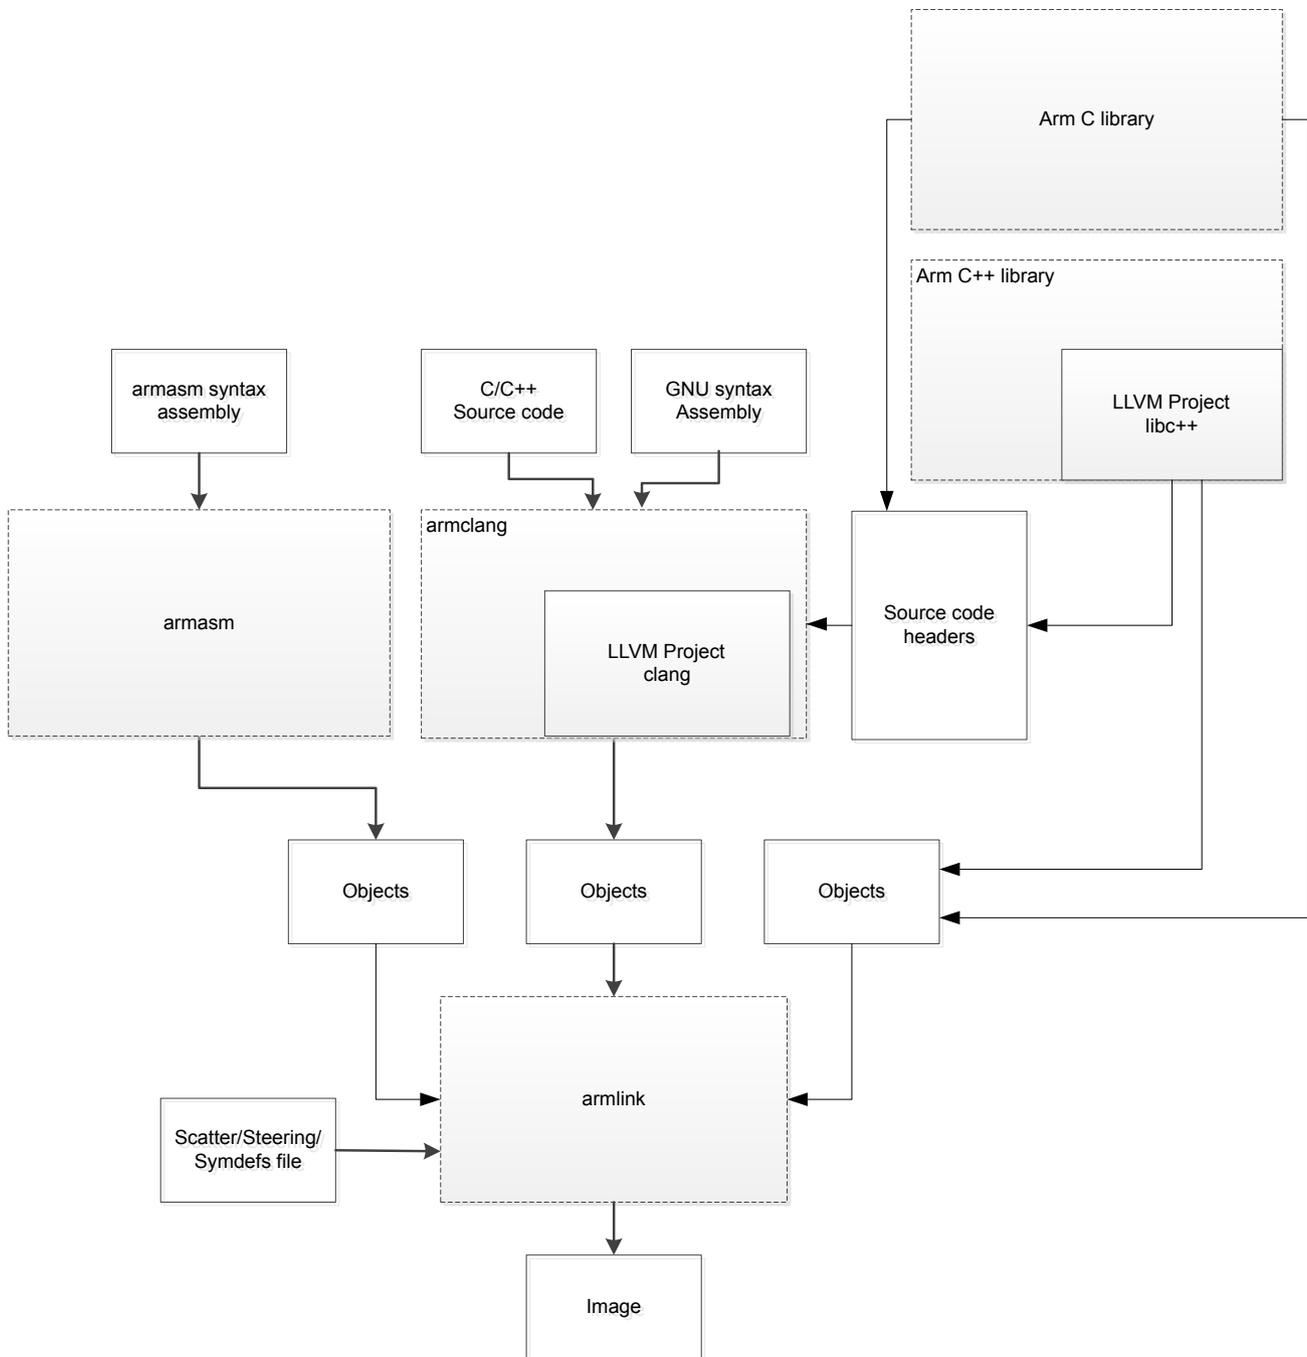


Figure 1-1 Integration boundaries in Arm Compiler 6.

The dashed boxes are toolchain components, and any interaction between these components is an integration boundary. Community features that span an integration boundary might have significant limitations in functionality. The exception to this is if the interaction is codified in one of the standards supported by Arm Compiler 6. See [Application Binary Interface \(ABI\) for the Arm® Architecture](#). Community features that do not span integration boundaries are more likely to work as expected.

- Features primarily used when targeting hosted environments such as Linux or BSD might have significant limitations, or might not be applicable, when targeting bare-metal environments.
- The Clang implementations of compiler features, particularly those that have been present for a long time in other toolchains, are likely to be mature. The functionality of new features, such as support

for new language features, is likely to be less mature and therefore more likely to have limited functionality.

Unsupported features

With both the product and community feature categories, specific features and use-cases are known not to function correctly, or are not intended for use with Arm Compiler 6.

Limitations of product features are stated in the documentation. Arm cannot provide an exhaustive list of unsupported features or use-cases for community features. The known limitations on community features are listed in [Community features on page 1-12](#).

List of known unsupported features

The following is an incomplete list of unsupported features, and might change over time:

- The Clang option `-stdlib=libstdc++` is not supported.
- C++ static initialization of local variables is not thread-safe when linked against the standard C++ libraries. For thread-safety, you must provide your own implementation of thread-safe functions as described in [Standard C++ library implementation definition](#).

————— **Note** —————

This restriction does not apply to the [ALPHA]-supported multi-threaded C++ libraries.

- Use of C11 library features is unsupported.
- Any community feature that exclusively pertains to non-Arm architectures is not supported.
- Compilation for targets that implement architectures older than Armv7 or Armv6-M is not supported.
- The **long double** data type is not supported for AArch64 state because of limitations in the current Arm C library.
- Complex numbers are not supported because of limitations in the current Arm C library.

1.2 Compiler configuration information

Summarizes the locales and FlexNet versions supported by the Arm compilation tools.

FlexNet versions in the compilation tools

Different versions of Arm Compiler support different versions of FlexNet.

The FlexNet versions in the compilation tools are:

Table 1-1 FlexNet versions

Compilation tools version	Windows	Linux
Arm Compiler 6.01 and later	11.12.1.0	11.12.1.0
Arm Compiler 6.00	11.10.1.0	11.10.1.0

Locale support in the compilation tools

Arm Compiler only supports the English locale.

Related information

Arm DS-5 License Management Guide

Chapter 2

Migrating from Arm[®] Compiler 5 to Arm[®] Compiler 6

Provides an overview of the differences between Arm Compiler 5 and Arm Compiler 6.

It contains the following sections:

- [2.1 Migration overview](#) on page 2-18.
- [2.2 Toolchain differences](#) on page 2-19.
- [2.3 Default differences](#) on page 2-20.
- [2.4 Optimization differences](#) on page 2-22.
- [2.5 Diagnostic messages](#) on page 2-24.
- [2.6 Migration example](#) on page 2-26.

2.1 Migration overview

Migrating from Arm Compiler 5 to Arm Compiler 6 requires the use of new command-line options and might also require changes to existing source files.

Arm Compiler 6 is based on the modern LLVM compiler framework. Arm Compiler 5 is not based on the LLVM compiler framework. Therefore migrating your project and source files from Arm Compiler 5 to Arm Compiler 6 requires you to be aware of:

- Differences in the command-line options when invoking the compiler.
- Differences in the adherence to language standards.
- Differences in compiler specific keywords, attributes, and pragmas.
- Differences in optimization and diagnostic behavior of the compiler.

Even though these differences exist between Arm Compiler 5 and Arm Compiler 6, it is possible to migrate your projects from Arm Compiler 5 to Arm Compiler 6 by modifying your command-line arguments and by changing your source code if required.

Arm Compiler 5 does not support processors based on Armv8 and later architectures. Migrating to Arm Compiler 6 enables you to generate highly efficient code for processors based on Armv8 and later architectures.

Related information

[Migrating projects from Arm Compiler 5 to Arm Compiler 6](#)

2.2 Toolchain differences

Arm Compiler 5 and Arm Compiler 6 share many of the same compilation tools. However, the main difference between the two toolchains is the compiler tool `armclang`, which is based on Clang and LLVM.

The table lists the individual compilation tools and the toolchain they apply to.

Table 2-1 List of compilation tools

Arm Compiler 5	Arm Compiler 6	Function
<code>armcc</code>	<code>armclang</code>	Compiles C and C++ language source files, including inline assembly.
<code>armcc</code>	<code>armclang</code>	Preprocessor.
<code>armasm</code>	<code>armasm</code>	Assembles assembly language source files written in <code>armasm</code> syntax.
Not available	<code>armclang</code> . This is also called the <code>armclang</code> integrated assembler.	Assembles assembly language source files written in GNU assembly syntax.
<code>fromelf</code>	<code>fromelf</code>	Converts Arm ELF images to binary formats and can also generate textual information about the input image, such as its disassembly and its code and data size.
<code>armlink</code>	<code>armlink</code>	Combines the contents of one or more object files with selected parts of one or more object libraries to produce an executable program.
<code>armar</code>	<code>armar</code>	Enables sets of ELF object files to be collected together and maintained in archives or libraries.

Arm Compiler 6 uses the compiler tool `armclang` instead of `armcc`. The command-line options for `armclang` are different to the command-line options for `armcc`. These differences are described in [3.1 Migration of compiler command-line options from Arm® Compiler 5 to Arm® Compiler 6 on page 3-29](#).

Arm Compiler 6 provides `armasm`, which you can use to assemble your existing assembly language source files that are written in `armasm` syntax. Arm recommends that you write new assembly code using the GNU assembly syntax, which you can assemble using the `armclang` integrated assembler. You can also migrate existing assembly language source files from `armasm` syntax to GNU syntax, and then assemble them using the `armclang` integrated assembler. For more information see [Chapter 5 Migrating from `armasm` to the `armclang` Integrated Assembler on page 5-64](#).

Related information

[Migrating projects from Arm Compiler 5 to Arm Compiler 6](#)

2.3 Default differences

Some compiler and assembler options are different between Arm Compiler 5 and Arm Compiler 6, or have different default values.

The following table lists these differences.

Table 2-2 Differences in defaults

Arm Compiler 5	Arm Compiler 6	Notes	Further information
--apcs=/hardfp or --apcs=/softfp	-mfloat-abi=softfp	The default floating-point linkage in Arm Compiler 5 depends on the specified processor. If the processor has floating-point hardware, then Arm Compiler 5 uses hardware floating-point linkage. If the processor does not have floating-point hardware, then Arm Compiler 5 uses software floating-point linkage. In Arm Compiler 6, the default is always software floating-point linkage for AArch32 state. The -mfloat-abi option also controls the type of floating-point instructions that the compiler uses. -mfloat-abi=softfp uses hardware floating-point instructions. Use -mfloat-abi=soft to use software floating-point linkage and software library functions for floating-point operations.	--apcs for Arm® Compiler 5. -mfloat-abi for Arm® Compiler 6.
__image.axf	a.out	Default name for the executable image if none of -o, -c, -E, or -S are specified on the command-line.	-o for Arm® Compiler 5. -o for Arm® Compiler 6.
--enum_is_int is disabled by default	-fno-short-enums	--enum_is_int is disabled by default in Arm Compiler 5, so the smallest data type that can hold the enumerator values is used. -fno-short-enums is the default in Arm Compiler 6, so the size of the enumeration type is at least 32 bits.	--enum_is_int for Arm® Compiler 5. -fno-short-enums for Arm® Compiler 6.
-O2	-O0	Arm Compiler 5 uses high optimization (-O2) by default. Arm Compiler 6 uses minimum optimization (-O0) by default.	-O for Arm® Compiler 5. -O for Arm® Compiler 6. Optimization differences on page 2-22.
C++03	C++98	In Arm Compiler 5, the default C++ source language mode is C++03. In Arm Compiler 6, the default source language mode is C++98. You can override the default source language with -std in Arm Compiler 6.	--cpp for Arm® Compiler 5. -std for Arm® Compiler 6.
C90	C11	In Arm Compiler 5, the default C source language mode C90. In Arm Compiler 6, the default C source language mode C11. You can override the default source language with -std in Arm Compiler 6.	--c90 for Arm® Compiler 5. -std for Arm® Compiler 6.

Table 2-2 Differences in defaults (continued)

Arm Compiler 5	Arm Compiler 6	Notes	Further information
<code>--no_exceptions</code>	<code>-fexceptions</code> or <code>-fno-exceptions</code>	In Arm Compiler 5, C++ exceptions are disabled by default (<code>--no_exceptions</code>). In Arm Compiler 6, C++ exceptions are enabled by default (<code>-fexceptions</code>) for C++ sources, or disabled by default (<code>-fno-exceptions</code>) for C sources.	<i>--no_exceptions for Arm® Compiler 5.</i> <i>-fexceptions for Arm® Compiler 6.</i>
<code>--wchar16</code>	<code>-fno-short-wchar</code>	In Arm Compiler 5, the size of <code>wchar_t</code> is 2 bytes by default (<code>--wchar16</code>). In Arm Compiler 6, the size of <code>wchar_t</code> is 4 bytes by default (<code>-fno-short-wchar</code>).	<i>--wchar16 for Arm® Compiler 5.</i> <i>-fno-short-wchar for Arm® Compiler 6.</i>
<code>--split_sections</code> is disabled by default	<code>-ffunction-sections</code>	In Arm Compiler 5, functions are not put into separate ELF sections by default (<code>--split_sections</code> is disabled). In Arm Compiler 6, each function is put into a separate ELF section by default (<code>-ffunction-sections</code>).	<i>--split_sections for Arm® Compiler 5.</i> <i>-ffunction-sections for Arm® Compiler 6.</i>

2.4 Optimization differences

Arm Compiler 6 provides more performance optimization settings than are present in Arm Compiler 5. However, the optimizations that are performed at each optimization level might differ between the two toolchains.

The table compares the optimization settings and functions in Arm Compiler 5 and Arm Compiler 6.

Table 2-3 Optimization settings

Description	Arm Compiler 5	Arm Compiler 6
Optimization levels for performance.	<ul style="list-style-type: none"> • -Otime -O0 • -Otime -O1 • -Otime -O2 • -Otime -O3 <p style="text-align: center;">————— Note —————</p> <p>The Arm Compiler 5 -O0 option is more similar to the Arm Compiler 6 -O1 option than the Arm Compiler 6 -O0 option.</p>	<ul style="list-style-type: none"> • -O0 • -O1 • -O2 • -O3 • -Ofast • -Omax
Optimization levels for code size.	<ul style="list-style-type: none"> • -Ospace -O0 • -Ospace -O1 • -Ospace -O2 • -Ospace -O3 <p style="text-align: center;">————— Note —————</p> <p>The Arm Compiler 5 -O0 option is more similar to the Arm Compiler 6 -O1 option than the Arm Compiler 6 -O0 option.</p>	<ul style="list-style-type: none"> • -Os • -Oz
Default	-Ospace -O2	-O0
Best trade-off between image size, performance, and debug.	-Ospace -O2	-O1
Highest optimization for performance	-Otime -O3	-Omax
Highest optimization for code size	-Ospace -O3	-Oz

Arm Compiler 6 provides an aggressive optimization setting, -Omax, which automatically enables a feature called Link Time Optimization. For more information, see [-fno](#).

When using -Omax, armclang can perform link time optimizations that were not possible in Arm Compiler 5. These link time optimizations can expose latent bugs in the final image. Therefore, an image built with Arm Compiler 5 might have a different behavior to the image built with Arm Compiler 6.

For example, unused variables without the `volatile` keyword might be removed when using -Omax in Arm Compiler 6. If the unused variable is actually a volatile variable that requires the `volatile` keyword, then the removal of the variable can cause the generated image to behave unexpectedly. Since Arm Compiler 5 does not have this aggressive optimization setting, it might not have removed the

unused variable, and the resulting image might behave as expected, and therefore the error in the code would be more difficult to detect.

————— **Note** —————

If the `main()` function has no arguments (no `argc` and `argv`), then Arm Compiler 5 applies a particular optimization at all optimization levels including `-O0`. Arm Compiler 6 applies this optimization only for optimization levels other than `-O0`.

When `main()` is compiled with Arm Compiler 6 at any optimization level except `-O0`, the compiler defines the symbol `__ARM_use_no_argv` if `main()` does not have input arguments. This symbol enables the linker to select an optimized library that does not include code to handle input arguments to `main()`.

When `main()` is compiled with Arm Compiler 6 at `-O0`, the compiler does not define the symbol `__ARM_use_no_argv`. Therefore, the linker selects a default library that includes code to handle input arguments to `main()`. This library contains semihosting code.

If your `main()` function does not have arguments and you are compiling at `-O0` with Arm Compiler 6, you can select the optimized library by manually defining the symbol `__ARM_use_no_argv` using inline assembly:

```
__asm(".global __ARM_use_no_argv\n\t" "__ARM_use_no_argv:\n\t");
```

Also note that:

- Microlib does not support the symbol `__ARM_use_no_argv`. Only define this symbol when using the standard C library.
- Semihosting code can cause a HardFault on systems that are unable to handle semihosting code. To avoid this HardFault, you must define one or both of:
 - `__use_no_semihosting`
 - `__ARM_use_no_argv`
- If you define `__use_no_semihosting` without `__ARM_use_no_argv`, then the library code to handle `argc` and `argv` requires you to retarget the following functions:
 - `_ttywrch()`
 - `_sys_exit()`
 - `_sys_command_string()`

Related information

-fno-armclang option

-O armclang option

Effect of the volatile keyword on compiler optimization

Optimizing across modules with link time optimization

2.5 Diagnostic messages

In general, `armclang` provides more precise and detailed diagnostic messages compared to `armcc`. Therefore you can expect to see more information about your code when using Arm Compiler 6, which can help you understand and fix your source more quickly.

`armclang` and `armcc` differ in the quality of diagnostic information they provide about your code. The following sections demonstrate some of the differences.

Assignment in condition

The following code is an example of `armclang` providing more precise information about your code. The error in this example is that the assignment operator, `=`, must be changed to the equality operator, `==`.

```
main.cpp:
#include <stdio.h>

int main()
{
    int a = 0, b = 0;
    if (a = b)
    {
        printf("Right\n");
    }
    else
    {
        printf("Wrong\n");
    }
    return 0;
}
```

Compiling this example with Arm Compiler 5 gives the message:

```
"main.cpp", line 6: Warning: #1293-D: assignment in condition
if (a = b)
   ^
```

Compiling this example with Arm Compiler 6 gives the message:

```
main.cpp:6:7: warning: using the result of an assignment as a condition without parentheses[-
Wparentheses]
    if (a = b)
        ~^~

main.cpp:6:7: note: place parentheses around the assignment to silence this warning
    if (a = b)
        ^
        ( )

main.cpp:6:7: note: use '==' to turn this assignment into an equality comparison
    if (a = b)
        ^
        ==
```

`armclang` highlights the error in the code, and also suggests two different ways to resolve the error. The warning messages highlight the specific part which requires attention from the user.

Note

When using `armclang`, it is possible to enable or disable specific warning messages. In the example above, you can enable this warning message using the `-Wparentheses` option, or disable it using the `-Wno-parentheses` option.

Automatic macro expansion

Another very useful feature of diagnostic messages in Arm Compiler 6, is the inclusion of notes about macro expansion. These notes provide useful context to help you understand diagnostic messages resulting from automatic macro expansion.

Consider the following code:

```
main.cpp:
#include <stdio.h>

#define LOG(PREFIX, MESSAGE) fprintf(stderr, "%s: %s", PREFIX, MESSAGE)
#define LOG_WARNING(MESSAGE) LOG("Warning", MESSAGE)

int main(void)
{
    LOG_WARNING(123);
}
```

The macro `LOG_WARNING` has been called with an integer argument. However, expanding the two macros, you can see that the `fprintf` function expects a string. When the macros are close together in the code it is easy to spot these errors. These errors are not easy to spot if they are defined in different part of the source code, or in other external libraries.

Compiling this example with Arm Compiler 5 `armcc main.cpp` gives the message:

```
main.cpp", line 8: Warning: #181-D: argument is incompatible with corresponding format
string conversion
    LOG_WARNING(123);
    ^
```

Compiling this example with Arm Compiler 6 `armclang --target=arm-arm-none-eabi -march=armv8-a` gives the message:

```
main.cpp:8:14: warning: format specifies type 'char *' but the argument has type 'int' [-Wformat]
    LOG_WARNING(123);
    ~~~~~^~

main.cpp:4:45: note: expanded from macro 'LOG_WARNING'
#define LOG_WARNING(MESSAGE) LOG("Warning", MESSAGE)
    ~~~~~^~~~~

main.cpp:3:64: note: expanded from macro 'LOG'
#define LOG(PREFIX, MESSAGE) fprintf(stderr, "%s: %s", PREFIX, MESSAGE)
    ~~~~~^~~~~
```

For more information, see [4.5 Diagnostics for pragma compatibility on page 4-58](#).

————— Note —————

When starting the migration from Arm Compiler 5 to Arm Compiler 6, you can expect additional diagnostic messages because `armclang` does not recognize some of the pragmas, keywords, and attributes that were specific to `armcc`. When you replace the pragmas, keywords, and attributes from Arm Compiler 5 with their Arm Compiler 6 equivalents, the majority of these diagnostic messages disappear. You might require additional code changes if there is no direct equivalent for Arm Compiler 6. For more information see [Chapter 4 Compiler Source Code Compatibility on page 4-45](#).

2.6 Migration example

This topic shows you the process of migrating an example code from Arm Compiler 5 to Arm Compiler 6.

————— **Note** —————

This topic includes descriptions of [COMMUNITY] features. See [Support level definitions](#) on page 1-12.

Compiling with Arm® Compiler 5

For an example startup code that builds with Arm Compiler 5, see [Example startup code for Arm® Compiler 5 project](#) on page Appx-A-87.

To compile this example with Arm Compiler 5, enter:

```
armcc startup_ac5.c --cpu=7-A -c
```

This command generates a compiled object file for the Armv7-A architecture.

Compiling with Arm® Compiler 6

Try to compile the `startup_ac5.c` example with Arm Compiler 6. The first step in the migration is to use the new compiler tool, `armclang`, and use the correct command-line options for `armclang`.

To compile this example with Arm Compiler 6, enter:

```
armclang --target=arm-arm-none-eabi startup_ac5.c -march=armv7-a -c -O1 -std=c90
```

The following table shows the differences in the command-line options between Arm Compiler 5 and Arm Compiler 6:

Table 2-4 Command-line changes

Description	Arm Compiler 5	Arm Compiler 6
Tool	<code>armcc</code>	<code>armclang</code>
Specifying an architecture	<code>--cpu=7-A</code>	<ul style="list-style-type: none"> <code>-march=armv7-a</code> <code>--target</code> is a mandatory option for <code>armclang</code>.
Optimization	The default optimization is <code>-O2</code> .	The default optimization is <code>-O0</code> . To get similar optimizations as the Arm Compiler 5 default, use <code>-O1</code> .
Source language mode	The default source language mode for <code>.c</code> files is <code>c90</code> .	The default source language mode for <code>.c</code> files is <code>gnu11</code> [COMMUNITY]. To compile for <code>c90</code> in Arm Compiler 6, use <code>-std=c90</code> .

Arm Compiler 6 generates the following errors and warnings when trying to compile the example `startup_ac5.c` file in `c90` mode:

```
startup_ac5.c:39:22: error: 'main' must return 'int'
__declspec(noreturn) void main(void)
                        ^~~~
                        int
startup_ac5.c:45:9: error: '#pragma import' is an ARM Compiler 5 extension, and is not
supported by ARM Compiler 6 [-Warmcc-pragma-import]
#pragma import (__use_no_semihosting)
               ^
startup_ac5.c:60:7: error: expected '(' after 'asm'
__asm void Vectors(void) {
```

```

      ^
startup_ac5.c:60:6: error: expected ';' after top-level asm block
__asm void Vectors(void) {
      ^
      ;
startup_ac5.c:61:3: error: use of undeclared identifier 'IMPORT'
  IMPORT Undef_Handler
      ^
startup_ac5.c:80:7: error: expected '(' after 'asm'
__asm void Reset_Handler(void) {
      ^
startup_ac5.c:80:6: error: expected ';' after top-level asm block
__asm void Reset_Handler(void) {
      ^
      ;
startup_ac5.c:83:3: error: use of undeclared identifier 'CPSID'
  CPSID if
      ^
8 errors generated.

```

The following section describes how to modify the source file to fix these errors and warnings.

Modifying the source code for Arm® Compiler 6

You must make the following changes to the source code to compile with `armclang`.

- The return type of function `main` function cannot be `void` in standard C. Replace the following line:

```
__declspec(noreturn) void main(void)
```

With:

```
__declspec(noreturn) int main(void)
```

- The intrinsic `__enable_irq()` is not supported in Arm Compiler 6. You must replace the intrinsic with an inline assembler equivalent. Replace the following line:

```
__enable_irq();
```

With:

```
__asm("CPSIE i");
```

- The `#pragma import` is not supported in Arm Compiler 6. You must replace the pragma with an equivalent directive using inline assembler. Replace the following line:

```
#pragma import(__use_no_semihosting)
```

With:

```
__asm(".global __use_no_semihosting");
```

- In certain situations, `armclang` might remove infinite loops that do not have side-effects. You must use the `volatile` keyword to tell `armclang` not to remove such code. Replace the following line:

```
while(1);
```

With:

```
while(1) __asm volatile("");
```

Chapter 3

Migrating from armcc to armclang

Compares Arm Compiler 6 command-line options to older versions of Arm Compiler.

It contains the following sections:

- *3.1 Migration of compiler command-line options from Arm® Compiler 5 to Arm® Compiler 6 on page 3-29.*
- *3.2 Arm® Compiler 5 and Arm® Compiler 6 stack protection behavior on page 3-36.*
- *3.3 Command-line options for preprocessing assembly source code on page 3-38.*
- *3.4 Migrating architecture and processor names for command-line options on page 3-39.*

3.1 Migration of compiler command-line options from Arm® Compiler 5 to Arm® Compiler 6

Arm Compiler 6 provides many command-line options, including most Clang command-line options in addition to several Arm-specific options.

————— **Note** —————

This topic includes descriptions of [COMMUNITY] features. See [Support level definitions on page 1-12](#).

The following table describes the most common Arm Compiler 5 command-line options, and shows the equivalent options for Arm Compiler 6.

Additional information about command-line options is available:

- The *armclang Reference Guide* provides more detail about a number of command-line options.
- For a full list of Clang command-line options, see the Clang and LLVM documentation.

Table 3-1 Comparison of compiler command-line options in Arm Compiler 6 and Arm Compiler 5

Arm Compiler 5 option	Arm Compiler 6 option	Description
--allow_fpreg_for_nonfpdata, --no_allow_fpreg_for_nonfpdata	-mimplicit-float, -mno-implicit-float [COMMUNITY]	Enables or disables the use of VFP and SIMD registers and data transfer instructions for non-VFP and non-SIMD data.
--apcs=/nointerwork	No equivalent.	Disables interworking between A32 and T32 code. Interworking is always enabled in Arm Compiler 6.
--apcs=/ropi --apcs=/noropi	-fropi -fno-ropi	Enables or disables the generation of Read-Only Position-Independent (ROPI) code.
--apcs=/rwpi --apcs=/norwpi	-frwpi -fno-rwpi	Enables or disables the generation of Read/Write Position-Independent (RWPI) code.
--arm	-marm	Targets the A32 instruction set. The compiler is permitted to generate both A32 and T32 code, but recognizes that A32 code is preferred.
--arm_only	No equivalent.	Enforces A32 instructions only. The compiler does not generate T32 instructions.
--asm	-save-temps	Instructs the compiler to generate intermediate assembly files as well as object files.
-c	-c	Performs the compilation step, but not the link step.
--c90	-xc -std=c90	Enables the compilation of C90 source code. -xc is a positional argument and only affects subsequent input files on the command-line. It is also only required if the input files do not have the appropriate file extension.
--c99	-xc -std=c99	Enables the compilation of C99 source code. -xc is a positional argument and only affects subsequent input files on the command-line. It is also only required if the input files do not have the appropriate file extension.

Table 3-1 Comparison of compiler command-line options in Arm Compiler 6 and Arm Compiler 5 (continued)

Arm Compiler 5 option	Arm Compiler 6 option	Description
--cpp	-xc++ -std=c++03	Enables the compilation of C++03 source code. -xc++ is a positional argument and only affects subsequent input files on the command-line. It is also only required if the input files do not have the appropriate file extension. The default C++ language standard is different between Arm Compiler 5 and Arm Compiler 6.
--cpp11	-xc++ -std=c++11	Enables the compilation of C++11 source code. -xc++ is a positional argument and only affects subsequent input files on the command-line. The default C++ language standard is different between Arm Compiler 5 and Arm Compiler 6.
--cpp_compat	No equivalent.	Compiles C++ code to maximize binary compatibility.
--cpu 8-A.32	--target=arm-arm-none-eabi -march=armv8-a	Targets Armv8-A, AArch32 state.
--cpu 8-A.64	--target=aarch64-arm-none-eabi	Targets Armv8-A AArch64 state. (Implies -march=armv8-a if -mcpu is not specified.)
--cpu 7-A	--target=arm-arm-none-eabi -march=armv7-a	Targets the Armv7-A architecture.
--cpu=Cortex-M4	--target=arm-arm-none-eabi -mcpu=cortex-m4	Targets the Cortex®-M4 processor.
--cpu=Cortex-A15	--target=arm-arm-none-eabi -mcpu=cortex-a15	Targets the Cortex-A15 processor.
-D	-D	Defines a preprocessing macro.
--depend	-MF	Specifies a filename for the makefile dependency rules.
--depend_dir	No equivalent. Use -MF to specify each dependency file individually.	Specifies the directory for dependency output files.
--depend_format=unix_escaped		Dependency file entries use UNIX-style path separators and escapes spaces with \. This is the default in Arm Compiler 6.
--depend_target	-MT	Changes the target name for the makefile dependency rule.
--diag_error	-Werror	Turn warnings into errors.
--diag_suppress=foo	-Wno-foo	Suppress warning message <i>foo</i> . The error or warning codes might be different between Arm Compiler 5 and Arm Compiler 6.
-E	-E	Executes only the preprocessor step.

Table 3-1 Comparison of compiler command-line options in Arm Compiler 6 and Arm Compiler 5 (continued)

Arm Compiler 5 option	Arm Compiler 6 option	Description
<code>--enum_is_int</code>	<code>-fno-short-enums, -fshort-enums</code>	Sets the minimum size of an enumeration type. By default Arm Compiler 5 does not set a minimum size. By default Arm Compiler 6 uses <code>-fno-short-enums</code> to set the minimum size to 32-bit.
<code>--forceline</code>	No equivalent.	Forces aggressive inlining of functions. Arm Compiler 6 automatically decides whether to inline functions depending on the optimization level.
<code>--fpmode=std</code>	<code>-ffp-mode=std</code>	Provides IEEE-compliant code with no IEEE exceptions, NaNs, and Infinities. Denormals are sign preserving. This is the default.
<code>--fpmode=fast</code>	<code>-ffp-mode=fast</code>	Similar to the default behavior, but also performs aggressive floating-point optimizations and therefore it is not IEEE-compliant.
<code>--fpmode=ieee_full</code>	<code>-ffp-mode=full</code>	Provides full IEEE support, including exceptions.
<code>--fpmode=ieee_fixed</code> <code>--fpmode=ieee_no_fenv</code>	There are no supported equivalent options.	There might be community features that provide these IEEE floating-point modes.
<code>--fpu</code> For example <code>--fpu=fpv5_d16</code>	<code>-mfpu</code> For example <code>-mfpu=fpv5-d16</code>	Specifies the target FPU architecture. ————— Note ————— <code>--fpu=none</code> checks the source code for floating-point operations, and if any are found it produces an error. <code>-mfpu=none</code> prevents the compiler from using hardware-based floating-point functions. If the compiler encounters floating-point types in the source code, it uses software-based floating-point library functions. ————— The option values might be different. For example <code>fpv5_d16</code> in Arm Compiler 5 is equivalent to <code>fpv5-d16</code> in Arm Compiler 6, and targets the Fpv5-D16 floating-point extension.
<code>-I</code>	<code>-I</code>	Adds the specified directories to the list of places that are searched to find included files.
<code>--ignore_missing_headers</code>	<code>-MG</code>	Prints dependency lines for header files even if the header files are missing.
<code>--inline</code>	Default at <code>-O2</code> and <code>-O3</code> .	There is no equivalent of the <code>--inline</code> option. Arm Compiler 6 automatically decides whether to inline functions at optimization levels <code>-O2</code> and <code>-O3</code> .
<code>-J</code>	<code>-isystem</code>	Adds the specified directories to the list of places that are searched to find included system header files.
<code>-L</code>	<code>-Xlinker</code>	Specifies command-line options to pass to the linker when a link step is being performed after compilation.
<code>--library_interface=armcc</code>	This is the default.	Arm Compiler 6 by default uses the Arm standard C library.

Table 3-1 Comparison of compiler command-line options in Arm Compiler 6 and Arm Compiler 5 (continued)

Arm Compiler 5 option	Arm Compiler 6 option	Description
--library_interface=Lib Where <i>Lib</i> is one of: <ul style="list-style-type: none"> • aeabi_clib • aeabi_clib90 • aeabi_clib99 	-nostdlib -nostdlibinc -fno-builtin	Specifies that the compiler output works with any ISO C library compliant with the ARM Embedded Application Binary Interface (AEABI).
--library_interface=Lib Where <i>Lib</i> is not one of: <ul style="list-style-type: none"> • aeabi_clib • aeabi_clib90 • aeabi_clib99 • armcc 	No equivalent.	Arm Compiler 6 assumes the use of an AEABI compliant library.
--licretry	No equivalent.	There is no equivalent of the --licretry option. The Arm Compiler 6 tools automatically retry failed attempts to obtain a license.
--list_macros	-E -dM	List all the macros that are defined at the end of the translation unit, including the predefined macros.
--littleend	-mlittle-endian	Generates code for little-endian data.
--lower_ropi, --no_lower_ropi	-fropi-lowering, -fno-ropi-lowering	Enables or disables less restrictive C when generating Read-Only Position-Independent (ROPI) code. <p style="text-align: center;">————— Note —————</p> In Arm Compiler 5, when --acps=/ropi is specified, --lower_ropi is not switched on by default. In Arm Compiler 6, when -fropi is specified, -fropi-lowering is switched on by default.
--lower_rwpi, --no_lower_rwpi	-frwpi-lowering, -fno-rwpi-lowering	Enables or disables less restrictive C when generating Read-Write Position-Independent (RWPI) code.
-M	-M	Instructs the compiler to produce a list of makefile dependency lines suitable for use by a make utility.
--md	-MD	Creates makefile dependency files, including the system header files. In Arm Compiler 5, this is equivalent to --md --depend_system_headers .
--md --no_depend_system_headers	-MMD	Creates makefile dependency files, without the system header files.
--mm	-MM	Creates a single makefile dependency file, without the system header files. In Arm Compiler 5, this is equivalent to -M --no_depend_system_headers .
--no_exceptions	-fno-exceptions	Disables the generation of code needed to support C++ exceptions.
-o	-o	Specifies the name of the output file.

Table 3-1 Comparison of compiler command-line options in Arm Compiler 6 and Arm Compiler 5 (continued)

Arm Compiler 5 option	Arm Compiler 6 option	Description
<code>-Onum</code>	<code>-Onum</code>	Specifies the level of optimization to be used when compiling source files. The default for Arm Compiler 5 is <code>-O2</code> . The default for Arm Compiler 6 is <code>-O0</code> . For debug view in Arm Compiler 6, Arm recommends <code>-O1</code> rather than <code>-O0</code> for best trade-off between image size, performance, and debug.
<code>-Ospace</code>	<code>-Oz / -Os</code>	Performs optimizations to reduce image size at the expense of a possible increase in execution time.
<code>-Otime</code>	This is the default.	Performs optimizations to reduce execution time at the expense of a possible increase in image size. There is no equivalent of the <code>-Otime</code> option. Arm Compiler 6 optimizes for execution time by default, unless you specify the <code>-Os</code> or <code>-Oz</code> options.
<code>--phony_targets</code>	<code>-MP</code>	Emits dummy makefile rules.
<code>--preinclude</code>	<code>-include</code>	Include the source code of a specified file at the beginning of the compilation.
<code>--protect_stack</code>	<code>-fstack-protector,-fstack-protector-strong</code>	Enables stack protection on vulnerable functions. See 3.2 Arm® Compiler 5 and Arm® Compiler 6 stack protection behavior on page 3-36 for more information.
<code>--protect_stack_all</code>	<code>-fstack-protector-all</code>	Enables stack protection on all functions. See 3.2 Arm® Compiler 5 and Arm® Compiler 6 stack protection behavior on page 3-36 for more information.
<code>--relaxed_ref_def</code>	<code>-fcommon</code>	Places zero-initialized definitions in a common block.
<code>-S</code>	<code>-S</code>	Outputs the disassembly of the machine code generated by the compiler. The output from this option differs between releases. Older Arm Compiler versions produce output with <code>armasm</code> syntax while Arm Compiler 6 produces output with GNU syntax.
<code>--show_cmdline</code>	<code>-v</code>	Shows how the compiler processes the command-line. The commands are shown normalized, and the contents of any via files are expanded.
<code>--split_ldm</code>	<code>-fno-ldm-stm</code>	Disables the generation of LDM and STM instructions. Note that while the <code>armcc --split_ldm</code> option limits the size of generated LDM/STM instructions, the <code>armclang -fno-ldm-stm</code> option disables the generation of LDM and STM instructions altogether.

Table 3-1 Comparison of compiler command-line options in Arm Compiler 6 and Arm Compiler 5 (continued)

Arm Compiler 5 option	Arm Compiler 6 option	Description
--split_sections	-ffunction-sections	Generates one ELF section for each function in the source file. In Arm Compiler 6, -ffunction-sections is the default. Therefore, the merging of identical constants cannot be done by armclang. Instead, the merging is done by armlink.
--strict	-pedantic-errors	Generate errors if code violates strict ISO C and ISO C++.
--strict_warnings	-pedantic	Generate warnings if code violates strict ISO C and ISO C++.
--thumb	-mthumb	Targets the T32 instruction set.
--no_unaligned_access, --unaligned_access	-mno-unaligned-access, -munaligned-access	Enables or disables unaligned accesses to data on Arm processors.
--use_frame_pointer, --no_use_frame_pointer	-fno-omit-frame-pointer, -fomit-frame-pointer	Controls whether a register is used for storing stack frame pointers.
--vectorize --no_vectorize	-fvectorize -fno-vectorize	Enables or disables the generation of Advanced SIMD vector instructions directly from C or C++ code.
--via	@file	Reads an additional list of compiler options from a file.
--vla	No equivalent.	Support for variable length arrays. Arm Compiler 6 automatically supports variable length arrays in accordance to the language standard.
--vsn	--version	Displays version information and license details. In Arm Compiler 6 you can also use --vsn.
--wchar16, --wchar32	-fshort-wchar, -fno-short-wchar	Sets the size of wchar_t type. The default for Arm Compiler 5 is --wchar16. The default for Arm Compiler 6 is -fno-short-wchar.

Note

If the main() function has no arguments (no argc and argv), then Arm Compiler 5 applies a particular optimization at all optimization levels including -O0. Arm Compiler 6 applies this optimization only for optimization levels other than -O0.

When main() is compiled with Arm Compiler 6 at any optimization level except -O0, the compiler defines the symbol __ARM_use_no_argv if main() does not have input arguments. This symbol enables the linker to select an optimized library that does not include code to handle input arguments to main().

When main() is compiled with Arm Compiler 6 at -O0, the compiler does not define the symbol __ARM_use_no_argv. Therefore, the linker selects a default library that includes code to handle input arguments to main(). This library contains semihosting code.

If your main() function does not have arguments and you are compiling at -O0 with Arm Compiler 6, you can select the optimized library by manually defining the symbol __ARM_use_no_argv using inline assembly:

```
__asm(".global __ARM_use_no_argv\n\t");
```

Also note that:

- Semihosting code can cause a HardFault on systems that are unable to handle semihosting code. To avoid this HardFault, you must define one or both of:
 - `__use_no_semihosting`
 - `__ARM_use_no_argv`
- If you define `__use_no_semihosting` without `__ARM_use_no_argv`, then the library code to handle `argc` and `argv` requires you to retarget these functions:
 - `_ttywrch()`
 - `_sys_exit()`
 - `_sys_command_string()`

Related information

Arm Compiler 6 Command-line Options

Merging identical constants

The LLVM Compiler Infrastructure Project

3.2 Arm® Compiler 5 and Arm® Compiler 6 stack protection behavior

You can see which functions are protected and compare Arm Compiler 5 protection with Arm Compiler 6 protection after migration.

Note

This topic includes descriptions of [COMMUNITY] features. See [Support level definitions on page 1-12](#).

The behavior of `armclang -fstack-protector` and `armclang -fstack-protector-strong` is different from the behavior of the `armcc --protect_stack` option:

- With `armcc --protect_stack`, a function is considered vulnerable if it contains a `char` or `wchar_t` array of any size.
- With `armclang -fstack-protector`, a function is considered vulnerable if it contains at least one of the following:
 - A character array larger than 8 bytes.
 - An 8-bit integer array larger than 8 bytes.
 - A call to `alloca()` with either a variable size or a constant size bigger than 8 bytes.
- With `armclang -fstack-protector-strong`, a function is considered vulnerable if it contains:
 - An array of any size and type.
 - A call to `alloca()`.
 - A local variable that has its address taken.

Arm recommends the use of `-fstack-protector-strong`.

Note

When using Arm Compiler 5, the value of the variable `__stack_chk_guard` could change during the life of the program. With Arm Compiler 6, a suitable implementation might set this variable to a random value when the program is loaded, before the first protected function is entered. The value must then remain unchanged during the life of the program.

Example

1. Create the file `test.c` containing the following code:

```
// test.c
#include <stdio.h>
#include <stdlib.h>
#include <string.h>

void *__stack_chk_guard = (void *)0xdeadbeef;

void __stack_chk_fail(void) {
    printf("Stack smashing detected.\n");
    exit(1);
}

static void copy(const char *p) {
    char buf[8];
    strcpy(buf, p);
    printf("Copied: %s\n", buf);
}

int main(void) {
    const char *t = "Hello World!";
    copy(t);
    printf("%s\n", t);
}
```

```
    return 0;
}
```

- For Arm Compiler 5, search for branches to the `__stack_chk_fail()` function in the output from the `fromelf -c` command. The functions containing such branches are protected.

```
armcc -c --cpu=7-A --protect_stack test.c -o test.o
fromelf -c test.o
...
copy
0x00000010: e92d403e >@-. PUSH {r1-r5,lr}
0x00000014: e1a04000 .@.. MOV r4,r0
0x00000018: e59f0070 p... LDR r0,[pc,#112] ; [__stack_chk_guard =
0x90] = 0
0x0000001c: e5905000 .P.. LDR r5,[r0,#0]
0x00000020: e58d5008 .P.. STR r5,[sp,#8]
0x00000024: e1a01004 .... MOV r1,r4
0x00000028: e1a0000d .... MOV r0,sp
0x0000002c: ebfffffe .... BL strcpy
0x00000030: e1a0100d .... MOV r1,sp
0x00000034: e28f0058 X... ADR r0,{pc}+0x60 ; 0x94
0x00000038: ebfffffe .... BL __2printf
0x0000003c: e59d0008 .... LDR r0,[sp,#8]
0x00000040: e1500005 ..P. CMP r0,r5
0x00000044: 0a000000 .... BEQ {pc}+0x8 ; 0x4c
0x00000048: ebfffffe .... BL __stack_chk_fail ; 0x0 Section #1
0x0000004c: e8bd803e >... POP {r1-r5,pc}
...

```

- For Arm Compiler 6, use the `armclang [COMMUNITY] -Rpass` remark option.

```
armclang -c --target=arm-arm-none-eabi -march=armv8-a -O0 -Rpass=stack-protector test.c
test.c:14:13: remark: Stack protection applied to function copy due to a stack allocated
buffer or struct containing a
    buffer [-Rpass=stack-protector]
static void copy(const char *p) {
    ^

```

————— **Note** —————

You can also use the `fromelf -c` command and search the output for functions containing branches to the `__stack_chk_fail()` function.

3.3 Command-line options for preprocessing assembly source code

The functionality of the `--cpreproc` and `--cpreproc_opts` command-line options in the version of `armasm` supplied with Arm Compiler 6 is different from the options used in earlier versions of `armasm` to preprocess assembly source code.

If you are using `armasm` to assemble source code that requires the use of the preprocessor, you must use both the `--cpreproc` and `--cpreproc_opts` options together. Also:

- As a minimum, you must include the `armclang` options `--target` and either `-mcpu` or `-march` in `--cpreproc_opts`.
- The input assembly source must have an upper-case extension `.S`.

If you have existing source files, which require preprocessing, and that have the lower-case extension `.s`, then to avoid having to rename the files:

1. Perform the pre-processing step manually using the `armclang -x assembler-with-cpp` option.
2. Assemble the preprocessed file without using the `--cpreproc` and `--cpreproc_opts` options.

Example using `armclang -x`

This example shows the use of the `armclang -x` option.

```
armclang --target=aarch64-arm-none-eabi -march=armv8-a -x assembler-with-cpp -E test.s -o test_preproc.s
armasm --cpu=8-A.64 test_preproc.s
```

Example using `armasm --cpreproc_opts`

The options to the preprocessor in this example are `--cpreproc_opts=--target=arm-arm-none-eabi, -mcpu=cortex-a9, -D,DEF1, -D,DEF2`.

```
armasm --cpu=cortex-a9 --cpreproc --cpreproc_opts=--target=arm-arm-none-eabi, -mcpu=cortex-a9, -D,DEF1, -D,DEF2 -I /path/to/includes1 -I /path/to/includes2 input.S
```

Note

Ensure that you specify compatible architectures in the `armclang` options `--target`, `-mcpu` or `-march`, and the `armasm --cpu` option.

Related information

[--cpreproc assembler option](#)

[--cpreproc_opts assembler option](#)

[Specifying a target architecture, processor, and instruction set](#)

[-march armclang option](#)

[-mcpu armclang option](#)

[--target armclang option](#)

[-x armclang option](#)

[Preprocessing assembly code](#)

3.4 Migrating architecture and processor names for command-line options

There are minor differences between the architecture and processor names that Arm Compiler 6 recognizes, and the names that Arm Compiler 5 recognizes. Within Arm Compiler 6, there are differences in the architecture and processor names that armclang recognizes and the names that armasm, armlink, and fromelf recognize. This topic shows the differences in the architecture and processor names for the different tools in Arm Compiler 5 and Arm Compiler 6.

The tables show the documented --cpu options in Arm Compiler 5 and their corresponding options for migrating your Arm Compiler 5 command-line options to Arm Compiler 6.

Note

The tables assume the default floating-point unit derived from the --cpu option in Arm Compiler 5. However, in Arm Compiler 6, armclang selects different defaults for floating-point unit (VFP) and Advanced SIMD. Therefore, the tables also show how to use the armclang -mfloat-abi and -mfpu options to be compatible with the default floating-point unit in Arm Compiler 5. The tables do not provide an exhaustive list.

Table 3-2 Architecture selection in Arm Compiler 5 and Arm Compiler 6

armcc, armlink, armasm, and fromelf option in Arm Compiler 5	armclang option in Arm Compiler 6	armlink, armasm, and fromelf option in Arm Compiler 6	Architecture description
--cpu=4	Not supported	Not supported	Armv4
--cpu=4T	Not supported	Not supported	Armv4T
--cpu=5T	Not supported	Not supported	Armv5T
--cpu=5TE	Not supported	Not supported	Armv5TE
--cpu=5TEJ	Not supported	Not supported	Armv5TEJ
--cpu=6	Not supported	Not supported	Generic Armv6
--cpu=6-K	Not supported	Not supported	Armv6-K
--cpu=6-Z	Not supported	Not supported	Armv6-Z
--cpu=6T2	Not supported	Not supported	Armv6T2
--cpu=6-M	--target=arm-arm-none-eabi -march=armv6-m	--cpu=6S-M	Armv6-M
--cpu=6S-M	--target=arm-arm-none-eabi -march=armv6s-m	--cpu=6S-M	Armv6S-M

Table 3-2 Architecture selection in Arm Compiler 5 and Arm Compiler 6 (continued)

armcc, armlink, armasm, and fromelf option in Arm Compiler 5	armclang option in Arm Compiler 6	armlink, armasm, and fromelf option in Arm Compiler 6	Architecture description
--cpu=7-A --cpu=7-A.security	--target=arm-arm-none-eabi -march=armv7-a -mfloat-abi=soft	--cpu=7-A.security	Armv7-A without VFP and Advanced SIMD. In Arm Compiler 5, security extension is not enabled with --cpu=7-A but is enabled with --cpu=7-A.security. In Arm Compiler 6, armclang always enables the Armv7-A TrustZone security extension with -march=armv7-a. However, armclang does not generate an SMC instruction unless you specify it with an intrinsic or inline assembly.
--cpu=7-R	--target=arm-arm-none-eabi -march=armv7-r -mfloat-abi=soft	--cpu=7-R	Armv7-R without VFP and Advanced SIMD
--cpu=7-M	--target=arm-arm-none-eabi -march=armv7-m	--cpu=7-M	Armv7-M
--cpu=7E-M	--target=arm-arm-none-eabi -march=armv7e-m -mfloat-abi=soft	--cpu=7E-M	Armv7E-M

Table 3-3 Processor selection in Arm Compiler 5 and Arm Compiler 6

armcc, armlink, armasm, and fromelf option in Arm Compiler 5	armclang option in Arm Compiler 6	armlink, armasm, and fromelf option in Arm Compiler 6	Description
--cpu=Cortex-A5	--target=arm-arm-none-eabi -mcpu=cortex-a5 -mfloat-abi=soft	--cpu=Cortex-A5.no_neon.no_vfp	Cortex-A5 without Advanced SIMD and VFP
--cpu=Cortex-A5.neon	--target=arm-arm-none-eabi -mcpu=cortex-a5 -mfloat-abi=hard	--cpu=Cortex-A5	Cortex-A5 with Advanced SIMD and VFP
--cpu=Cortex-A5.vfp	--target=arm-arm-none-eabi -mcpu=cortex-a5 -mfloat-abi=hard -mfpu=vfpv4-d16	--cpu=Cortex-A5.no_neon	Cortex-A5 with VFP, without Advanced SIMD
--cpu=Cortex-A7	--target=arm-arm-none-eabi -mcpu=cortex-a7 -mfloat-abi=hard	--cpu=Cortex-A7	Cortex-A7 with Advanced SIMD and VFP
--cpu=Cortex-A7.no_neon.no_vfp	--target=arm-arm-none-eabi -mcpu=cortex-a7 -mfloat-abi=soft	--cpu=Cortex-A7.no_neon.no_vfp	Cortex-A7 without Advanced SIMD and VFP

Table 3-3 Processor selection in Arm Compiler 5 and Arm Compiler 6 (continued)

armcc, armlink, armasm, and fromelf option in Arm Compiler 5	armclang option in Arm Compiler 6	armlink, armasm, and fromelf option in Arm Compiler 6	Description
--cpu=Cortex-A7.no_neon	--target=arm-arm-none-eabi -mcpu=cortex-a7 -mfloat-abi=hard -mfpv=vfpv4-d16	--cpu=Cortex-A7.no_neon	Cortex-A7 with VFP, without Advanced SIMD
--cpu=Cortex-A8	--target=arm-arm-none-eabi -mcpu=cortex-a8 -mfloat-abi=hard	--cpu=Cortex-A8	Cortex-A8 with VFP and Advanced SIMD
--cpu=Cortex-A8.no_neon	--target=arm-arm-none-eabi -mcpu=cortex-a8 -mfloat-abi=soft	--cpu=Cortex-A8.no_neon	Cortex-A8 without Advanced SIMD and VFP
--cpu=Cortex-A9	--target=arm-arm-none-eabi -mcpu=cortex-a9 -mfloat-abi=hard	--cpu=Cortex-A9	Cortex-A9 with Advanced SIMD and VFP
--cpu=Cortex-A9.no_neon.no_vfp	--target=arm-arm-none-eabi -mcpu=cortex-a9 -mfloat-abi=soft	--cpu=Cortex-A9.no_neon.no_vfp	Cortex-A9 without Advanced SIMD and VFP
--cpu=Cortex-A9.no_neon	--target=arm-arm-none-eabi -mcpu=cortex-a9 -mfloat-abi=hard -mfpv=vfpv3-d16-fp16	--cpu=Cortex-A9.no_neon	Cortex-A9 with VFP but without Advanced SIMD
--cpu=Cortex-A12	--target=arm-arm-none-eabi -mcpu=cortex-a12 -mfloat-abi=hard	--cpu=Cortex-A12	Cortex-A12 with Advanced SIMD and VFP
--cpu=Cortex-A12.no_neon.no_vfp	--target=arm-arm-none-eabi -mcpu=cortex-a12 -mfloat-abi=soft	--cpu=Cortex-A12.no_neon.no_vfp	Cortex-A12 without Advanced SIMD and VFP
--cpu=Cortex-A15	--target=arm-arm-none-eabi -mcpu=cortex-a15 -mfloat-abi=hard	--cpu=Cortex-A15	Cortex-A15 with Advanced SIMD and VFP
--cpu=Cortex-A15.no_neon	--target=arm-arm-none-eabi -mcpu=cortex-a15 -mfloat-abi=hard -mfpv=vfpv4-d16	--cpu=Cortex-A15.no_neon	Cortex-A15 with VFP, without Advanced SIMD
--cpu=Cortex-A15.no_neon.no_vfp	--target=arm-arm-none-eabi -mcpu=cortex-a15 -mfloat-abi=soft	--cpu=Cortex-A15.no_neon.no_vfp	Cortex-A15 without Advanced SIMD and VFP
--cpu=Cortex-A17	--target=arm-arm-none-eabi -mcpu=cortex-a17 -mfloat-abi=hard	--cpu=Cortex-A17	Cortex-A17 with Advanced SIMD and VFP
--cpu=Cortex-A17.no_neon.no_vfp	--target=arm-arm-none-eabi -mcpu=cortex-a17 -mfloat-abi=soft	--cpu=Cortex-A17.no_neon.no_vfp	Cortex-A17 without Advanced SIMD and VFP

Table 3-3 Processor selection in Arm Compiler 5 and Arm Compiler 6 (continued)

armcc, armlink, armasm, and fromelf option in Arm Compiler 5	armclang option in Arm Compiler 6	armlink, armasm, and fromelf option in Arm Compiler 6	Description
--cpu=Cortex-R4	--target=arm-arm-none-eabi -mcpu=cortex-r4	--cpu=Cortex-R4	Cortex-R4 without VFP
--cpu=Cortex-R4F	--target=arm-arm-none-eabi -mcpu=cortex-r4f -mfloat-abi=hard	--cpu=Cortex-R4F	Cortex-R4 with VFP
--cpu=Cortex-R5	--target=arm-arm-none-eabi -mcpu=cortex-r5 -mfloat-abi=soft	--cpu=Cortex-R5.no_vfp	Cortex-R5 without VFP
--cpu=Cortex-R5F	--target=arm-arm-none-eabi -mcpu=cortex-r5 -mfloat-abi=hard	--cpu=Cortex-R5	Cortex-R5 with double precision VFP
--cpu=Cortex-R5F-rev1.sp	--target=arm-arm-none-eabi -mcpu=cortex-r5 -mfloat-abi=hard -mfpv3xd	--cpu=Cortex-R5.sp	Cortex-R5 with single precision VFP
--cpu=Cortex-R7	--target=arm-arm-none-eabi -mcpu=cortex-r7 -mfloat-abi=hard	--cpu=Cortex-R7	Cortex-R7 with VFP
--cpu=Cortex-R7.no_vfp	--target=arm-arm-none-eabi -mcpu=cortex-r7 -mfloat-abi=soft	--cpu=Cortex-R7.no_vfp	Cortex-R7 without VFP
--cpu=Cortex-R8	--target=arm-arm-none-eabi -mcpu=cortex-r8 -mfloat-abi=hard	--cpu=Cortex-R8	Cortex-R8 with VFP
--cpu=Cortex-R8.no_vfp	--target=arm-arm-none-eabi -mcpu=cortex-r8 -mfloat-abi=soft	--cpu=Cortex-R8.no_vfp	Cortex-R8 without VFP
--cpu=Cortex-M0	--target=arm-arm-none-eabi -mcpu=cortex-m0	--cpu=Cortex-M0	Cortex-M0
--cpu=Cortex-M0plus	--target=arm-arm-none-eabi -mcpu=cortex-m0plus	--cpu=Cortex-M0plus	Cortex-M0+
--cpu=Cortex-M1	--target=arm-arm-none-eabi -mcpu=cortex-m1	--cpu=Cortex-M1	Cortex-M1
--cpu=Cortex-M3	--target=arm-arm-none-eabi -mcpu=cortex-m3	--cpu=Cortex-M3	Cortex-M3
--cpu=Cortex-M4	--target=arm-arm-none-eabi -mcpu=cortex-m4 -mfloat-abi=soft	--cpu=Cortex-M4.no_fp	Cortex-M4 without VFP
--cpu=Cortex-M4.fp	--target=arm-arm-none-eabi -mcpu=cortex-m4 -mfloat-abi=hard	--cpu=Cortex-M4	Cortex-M4 with VFP

Table 3-3 Processor selection in Arm Compiler 5 and Arm Compiler 6 (continued)

armcc, armlink, armasm, and fromelf option in Arm Compiler 5	armclang option in Arm Compiler 6	armlink, armasm, and fromelf option in Arm Compiler 6	Description
--cpu=Cortex-M7	--target=arm-arm-none-eabi -mcpu=cortex-m7 -mfloat-abi=soft	--cpu=Cortex-M7.no_fp	Cortex-M7 without VFP
--cpu=Cortex-M7.fp.dp	--target=arm-arm-none-eabi -mcpu=cortex-m7 -mfloat-abi=hard	--cpu=Cortex-M7	Cortex-M7 with double precision VFP
--cpu=Cortex-M7.fp.sp	--target=arm-arm-none-eabi -mcpu=cortex-m7 -mfloat-abi=hard -mfpv5-sp-d16	--cpu=Cortex-M7.fp.sp	Cortex-M7 with single precision VFP

Enabling or disabling architectural features in Arm® Compiler 6

Arm Compiler 6, by default, automatically enables or disables certain architectural features such as the floating-point unit, Advanced SIMD, and Cryptographic extensions depending on the specified architecture or processor. For a list of architectural features, see `-mcpu` in the *armclang Reference Guide*. You can override the defaults using other options.

For `armclang`:

- For AArch64 targets, you must use either `-march` or `-mcpu` to specify the architecture or processor and the required architectural features. You can use `+ [no]feature` with `-march` or `-mcpu` to override any architectural feature.
- For AArch32 targets, you must use either `-march` or `-mcpu` to specify the architecture or processor and the required architectural features. You can use `-mfloat-abi` to override floating-point linkage. You can use `-mfpv5` to override floating-point unit, Advanced SIMD, and Cryptographic extensions. You can use `+ [no]feature` with `-march` or `-mcpu` to override certain other architectural features.

For `armasm`, `armlink`, and `fromelf`, you must use the `--cpu` option to specify the architecture or processor and the required architectural features. You can use `--fpu` to override the floating-point unit and floating-point linkage. The `--cpu` option is not mandatory for `armlink` and `fromelf`, but is mandatory for `armasm`.

Note

- In Arm Compiler 5, if you use the `armcc --fpu=none` option, the compiler generates an error if it detects floating-point code. This behavior is different in Arm Compiler 6. If you use the `armclang -mfpv5=none` option, the compiler automatically uses software floating-point libraries if it detects any floating-point code. You cannot use the `armlink --fpu=none` option to link object files created using `armclang`.
- To link object files created using the `armclang -mfpv5=none` option, you must set `armlink --fpu` to an option that supports software floating-point linkage, for example `--fpu=SoftVFP`, rather than using `--fpu=none`.

Related information

[armclang -mcpu option](#)

[armclang -march option](#)

[armclang -mfloat-abi option](#)

[armclang --mfpv5 option](#)

[armclang --target option](#)

[armlink --cpu option](#)

armlink --fpu option
fromelf --cpu option
fromelf --fpu option
armasm --cpu option
armasm --fpu option

Chapter 4

Compiler Source Code Compatibility

Provides details of source code compatibility between Arm Compiler 6 and older armcc compiler versions.

It contains the following sections:

- [4.1 Language extension compatibility: keywords](#) on page 4-46.
- [4.2 Language extension compatibility: attributes](#) on page 4-49.
- [4.3 Language extension compatibility: pragmas](#) on page 4-51.
- [4.4 Language extension compatibility: intrinsics](#) on page 4-54.
- [4.5 Diagnostics for pragma compatibility](#) on page 4-58.
- [4.6 C and C++ implementation compatibility](#) on page 4-60.
- [4.7 Compatibility of C++ objects](#) on page 4-62.

4.1 Language extension compatibility: keywords

Arm Compiler 6 provides support for some keywords that are supported in Arm Compiler 5.

————— **Note** —————

This topic includes descriptions of [COMMUNITY] features. See [Support level definitions on page 1-12](#).

The following table lists some of the commonly used keywords that are supported by Arm Compiler 5 and shows whether Arm Compiler 6 supports them using `__attribute__`. Replace any instances of these keywords in your code with the recommended alternative where available or use inline assembly instructions.

————— **Note** —————

This is not an exhaustive list of all keywords.

Table 4-1 Keyword language extensions in Arm Compiler 5 and Arm Compiler 6

Keyword supported by Arm Compiler 5	Recommended Arm Compiler 6 keyword or alternative
<code>__align(x)</code>	<code>__attribute__((aligned(x)))</code>
<code>__alignof__</code>	<code>__alignof__</code>
<code>__ALIGNOF__</code>	<code>__alignof__</code>
Embedded assembly using <code>__asm</code>	Arm Compiler 6 does not support the <code>__asm</code> keyword on function definitions and declarations for embedded assembly. Instead, you can write embedded assembly using the <code>__attribute__((naked))</code> function attribute. See __attribute__((naked)) .
<code>__const</code>	<code>__attribute__((const))</code>
<code>__attribute__((const))</code>	<code>__attribute__((const))</code>
<code>__forceinline</code>	<code>__attribute__((always_inline))</code>
<code>__global_reg</code>	Use inline assembler instructions or equivalent routine.
<code>__inline(x)</code>	<code>__inline__</code> . The use of this depends on the language mode.
<code>__int64</code>	No equivalent. However, you can use <code>long long</code> . When you use <code>long long</code> in C90 mode, the compiler gives: <ul style="list-style-type: none"> • a warning. • an error, if you also use <code>-pedantic-errors</code>.
<code>__INTADDR</code>	None. There is community support for this as a Clang builtin.
<code>__irq</code>	<code>__attribute__((interrupt))</code> . This is not supported in AArch64.

Table 4-1 Keyword language extensions in Arm Compiler 5 and Arm Compiler 6 (continued)

Keyword supported by Arm Compiler 5	Recommended Arm Compiler 6 keyword or alternative
<code>__packed</code> for removing padding within structures.	<p><code>__attribute__((packed))</code>. This provides limited functionality compared to <code>__packed</code>:</p> <ul style="list-style-type: none"> The <code>__attribute__((packed))</code> variable attribute applies to members of a structure or union, but it does not apply to variables that are not members of a struct or union. <code>__attribute__((packed))</code> is not a type qualifier. Taking the address of a packed member can result in unaligned pointers, and in most cases the compiler generates a warning. Arm recommends upgrading this warning to an error when migrating code that uses <code>__packed</code>. To upgrade the warning to error, use the <code>armclang</code> option <code>-Werror=name</code>. <p>The placement of the attribute is different from the placement of <code>__packed</code>. If your legacy code contains <code>typedef __packed struct</code>, then replace it with:</p> <pre>typedef struct __attribute__((packed))</pre>
<code>__packed</code> as a type qualifier for unaligned access.	<p><code>__unaligned</code>. This provides limited functionality compared to the <code>__packed</code> type qualifier.</p> <p>The <code>__unaligned</code> type qualifier can be used over a structure only when using <code>typedef</code> or when declaring a structure variable. This limitation does not apply when using <code>__packed</code> in Arm Compiler 5. Therefore, there is currently no migration for legacy code that contains <code>__packed struct S{...};</code>.</p>
<code>__pure</code>	<code>__attribute__((const))</code>
<code>__smc</code>	Use inline assembler instructions or equivalent routine.
<code>__softfp</code>	<code>__attribute__((pcs("aapcs")))</code>
<code>__svc</code>	Use inline assembler instructions or equivalent routine.
<code>__svc_indirect</code>	Use inline assembler instructions or equivalent routine.
<code>__svc_indirect_r7</code>	Use inline assembler instructions or equivalent routine.
<code>__thread</code>	<code>__thread</code>
<code>__value_in_regs</code>	<code>__attribute__((value_in_regs))</code>
<code>__weak</code>	<code>__attribute__((weak))</code>
<code>__writeonly</code>	No equivalent.

————— **Note** —————

The `__const` keyword was supported by older versions of `armcc`. The equivalent for this keyword in Arm Compiler 5 and Arm Compiler 6 is `__attribute__((const))`.

Migrating the `__packed` keyword from Arm® Compiler 5 to Arm® Compiler 6

The `__packed` keyword in Arm Compiler 5 has the effect of:

- Removing the padding within structures.
- Qualifying the variable for unaligned access.

Arm Compiler 6 does not support `__packed`, but supports `__attribute__((packed))` and `__unaligned` keyword. Depending on the use, you might need to replace `__packed` with both `__attribute__((packed))` and `__unaligned`. The following table shows the migration paths for various uses of `__packed`.

Table 4-2 Migrating the `__packed` keyword

Arm Compiler 5	Arm Compiler 6
<code>__packed int x;</code>	<code>__unaligned int x;</code>
<code>__packed int *x;</code>	<code>__unaligned int *x;</code>
<code>int * __packed x;</code>	<code>int * __unaligned x;</code>
<code>__unaligned int * __packed x;</code>	<code>__unaligned int * __unaligned x;</code>
<code>typedef __packed struct S{...} s;</code>	<code>typedef __unaligned struct __attribute__((packed)) S{...} s;</code>
<code>__packed struct S{...};</code>	There is currently no migration. Use a typedef instead.
<code>__packed struct S{...} s;</code>	<code>__unaligned struct __attribute__((packed)) S{...} s;</code> Subsequent declarations of variables of type struct S must use <code>__unaligned</code> , for example <code>__unaligned struct S s2</code> .
<code>struct S{__packed int a;}</code>	<code>struct S {__attribute__((packed)) __unaligned int a;}</code>

Related references

[4.6 C and C++ implementation compatibility on page 4-60](#)

[4.2 Language extension compatibility: attributes on page 4-49](#)

[4.3 Language extension compatibility: pragmas on page 4-51](#)

Related information

[__unaligned keyword](#)

4.2 Language extension compatibility: attributes

Arm Compiler 6 provides support for some function, variable, and type attributes that were supported in Arm Compiler 5. Other attributes are not supported, or have an alternate implementation.

The following attributes are supported by Arm Compiler 5 and Arm Compiler 6. These attributes do not require modification in your code:

- `__attribute__((aligned(x)))`
- `__attribute__((always_inline))`
- `__attribute__((const))`
- `__attribute__((deprecated))`
- `__attribute__((noinline))`
- `__declspec(noinline)`
- `__attribute__((nonnull))`
- `__attribute__((noreturn))`
- `__declspec(noreturn)`
- `__attribute__((nothrow))`
- `__declspec(nothrow)`
- `__attribute__((pcs("calling convention")))`
- `__attribute__((pure))`
- `__attribute__((unused))`
- `__attribute__((used))`

————— **Note** —————

In Arm Compiler 6, functions marked with `__attribute__((used))` can still be removed by linker unused section removal. To prevent the linker from removing these sections, you can use either the `--keep=symbol` or the `--no_remove armlink` options. In Arm Compiler 5, functions marked with `__attribute__((used))` are not removed by the linker.

- `__attribute__((visibility))`
- `__attribute__((weak))`
- `__attribute__((weakref))`

Though Arm Compiler 6 supports certain `__declspec` attributes, Arm recommends using `__attribute__` where available.

Table 4-3 Support for `__declspec` attributes

declspec supported by Arm Compiler 5	Recommended Arm Compiler 6 alternative
<code>__declspec(dllimport)</code>	None. There is no support for BPABI linking models.
<code>__declspec(dllexport)</code>	None. There is no support for BPABI linking models.
<code>__declspec(noinline)</code>	<code>__attribute__((noinline))</code>
<code>__declspec(noreturn)</code>	<code>__attribute__((noreturn))</code>
<code>__declspec(nothrow)</code>	<code>__attribute__((nothrow))</code>
<code>__declspec(notshared)</code>	None. There is no support for BPABI linking models.
<code>__declspec(thread)</code>	<code>__thread</code>

Section

`__attribute__((section("name")))` is supported by Arm Compiler 5 and Arm Compiler 6. However, this attribute might require modification in your code.

When using Arm Compiler 5, section names do not need to be unique. Therefore, you could use the same section name to create different section types.

Arm Compiler 6 supports multiple sections with the same section name only if you specify a *unique ID*. You must ensure that different section types either:

- Have a unique section name.
- Have a unique ID, if they have the same section name.

If you use the same section name, for another section or symbol, without a unique ID, then `armclang` integrated assembler merges the sections and gives the merged section the flags of the first section with that name.

Migrating `__attribute__((at(address)))` and zero-initialized `__attribute__((section("name")))` from Arm® Compiler 5 to Arm® Compiler 6

Arm Compiler 5 supports the following attributes, which Arm Compiler 6 does not support:

- `__attribute__((at(address)))` to specify the absolute address of a function or variable.
- `__attribute__((at(address), zero_init))` to specify the absolute address of a zero-initialized variable.
- `__attribute__((section(name), zero_init))` to place a zero-initialized variable in a zero-initialized section with the given *name*.
- `__attribute__((zero_init))` to generate an error if the variable has an initializer.

The following table shows migration paths for these features using Arm Compiler 6 supported features:

Table 4-4 Migrating `__attribute__((at(address)))` and zero-initialized `__attribute__((section("name")))`

Arm Compiler 5 attribute	Arm Compiler 6 attribute	Description
<code>__attribute__((at(address)))</code>	<code>__attribute__((section(".ARM.__at_address")))</code>	<code>armlink</code> in Arm Compiler 6 still supports the placement of sections in the form of <code>.ARM.__at_address</code>
<code>__attribute__((at(address), zero_init))</code>	<code>__attribute__((section(".bss.ARM.__at_address")))</code>	<code>armlink</code> in Arm Compiler 6 supports the placement of zero-initialized sections in the form of <code>.bss.ARM.__at_address</code> . The <code>.bss</code> prefix is case sensitive and must be all lowercase.
<code>__attribute__((section(name), zero_init))</code>	<code>__attribute__((section(".bss.name")))</code>	<i>name</i> is a name of your choice. The <code>.bss</code> prefix is case sensitive and must be all lowercase.
<code>__attribute__((zero_init))</code>	Arm Compiler 6 by default places zero-initialized variables in a <code>.bss</code> section. However, there is no equivalent to generate an error when you specify an initializer.	Arm Compiler 5 generates an error if the variable has an initializer. Otherwise, it places the zero-initialized variable in a <code>.bss</code> section.

Related references

[4.6 C and C++ implementation compatibility on page 4-60](#)

[4.1 Language extension compatibility: keywords on page 4-46](#)

[4.3 Language extension compatibility: pragmas on page 4-51](#)

Related information

[armlink User Guide: Placing functions and data in a named section](#)

[armlink User Guide: Placing `__at` sections at a specific address](#)

4.3 Language extension compatibility: pragmas

Arm Compiler 6 provides support for some pragmas that are supported in Arm Compiler 5. Other pragmas are not supported, or must be replaced with alternatives.

The following table lists some of the commonly used pragmas that are supported by Arm Compiler 5 but are not supported by Arm Compiler 6. Replace any instances of these pragmas in your code with the recommended alternative.

Table 4-5 Pragma language extensions that must be replaced

Pragma supported by Arm Compiler 5	Recommended Arm Compiler 6 alternative
#pragma import (<i>symbol</i>)	<code>__asm(".global <i>symbol</i>\n\t");</code>
#pragma anon_unions #pragma no_anon_unions	<p>In C, anonymous structs and unions are a C11 extension which is enabled by default in <code>armclang</code>. If you specify the <code>-pedantic</code> option, the compiler emits warnings about extensions do not match the specified language standard. For example:</p> <pre>armclang --target=aarch64-arm-none-eabi -c -pedantic --std=c90 test.c test.c:3:5: warning: anonymous structs are a C11 extension [-Wc11-extensions]</pre> <p>In C++, anonymous unions are part of the language standard, and are always enabled. However, anonymous structs and classes are an extension. If you specify the <code>-pedantic</code> option, the compiler emits warnings about anonymous structs and classes. For example:</p> <pre>armclang --target=aarch64-arm-none-eabi -c -pedantic -xc++ test.c test.c:3:5: warning: anonymous structs are a GNU extension [-Wgnu-anonymous-struct]</pre> <p>Introducing anonymous unions, struct and classes using a <code>typedef</code> is a separate extension in <code>armclang</code>, which must be enabled using the <code>-fms-extensions</code> option.</p>
#pragma arm #pragma thumb	<code>armclang</code> does not support switching instruction set in the middle of a file. You can use the command-line options <code>-marm</code> and <code>-mthumb</code> to specify the instruction set of the whole file.
#pragma arm section	<p>#pragma clang section</p> <p>In Arm Compiler 5, the section types you can use this pragma with are <code>rodata</code>, <code>rodata</code>, <code>zidata</code>, and <code>code</code>. In Arm Compiler 6, the equivalent section types are <code>rodata</code>, <code>data</code>, <code>bss</code>, and <code>text</code> respectively.</p>

Table 4-5 Pragma language extensions that must be replaced (continued)

Pragma supported by Arm Compiler 5	Recommended Arm Compiler 6 alternative
<pre>#pragma diag_default #pragma diag_suppress #pragma diag_remark #pragma diag_warning #pragma diag_error</pre>	<p>The following pragmas provide equivalent functionality for <code>diag_suppress</code>, <code>diag_warning</code>, and <code>diag_error</code>:</p> <ul style="list-style-type: none"> • <code>#pragma clang diagnostic ignored "-Wmultichar"</code> • <code>#pragma clang diagnostic warning "-Wmultichar"</code> • <code>#pragma clang diagnostic error "-Wmultichar"</code> <p>Note that these pragmas use <code>armclang</code> diagnostic groups, which do not have a precise mapping to <code>armcc</code> diagnostic tags.</p> <p><code>armclang</code> has no equivalent to <code>diag_default</code> or <code>diag_remark</code>. <code>diag_default</code> can be replaced by wrapping the change of diagnostic level with <code>#pragma clang diagnostic push</code> and <code>#pragma clang diagnostic pop</code>, or by manually returning the diagnostic to the default level.</p> <p>There is an additional diagnostic level supported in <code>armclang</code>, <code>fatal</code>, which causes compilation to fail without processing the rest of the file. You can set this as follows:</p> <pre>#pragma clang diagnostic fatal "-Wmultichar"</pre>
<pre>#pragma exceptions_unwind #pragma no_exceptions_unwind</pre>	<p><code>armclang</code> does not support these pragmas.</p> <p>Use the <code>__attribute__((nothrow))</code> function attribute instead.</p>
<pre>#pragma GCC system_header</pre>	<p>This pragma is supported by both <code>armcc</code> and <code>armclang</code>, but <code>#pragma clang system_header</code> is the preferred spelling in <code>armclang</code> for new code.</p>
<pre>#pragma hdrstop #pragma no_pch</pre>	<p><code>armclang</code> does not support these pragmas.</p>
<pre>#pragma import(__use_no_semihosting) #pragma import(__use_no_semihosting_swi)</pre>	<p><code>armclang</code> does not support these pragmas. However, in C code, you can replace these pragmas with:</p> <pre>__asm(".global __use_no_semihosting\n\t");</pre>
<pre>#pragma inline #pragma no_inline</pre>	<p><code>armclang</code> does not support these pragmas. However, inlining can be disabled on a per-function basis using the <code>__attribute__((noinline))</code> function attribute.</p> <p>The default behavior of both <code>armcc</code> and <code>armclang</code> is to inline functions when the compiler considers this worthwhile, and this is the behavior selected by using <code>#pragma inline</code> in <code>armcc</code>. To force a function to be inlined in <code>armclang</code>, use the <code>__attribute__((always_inline))</code> function attribute.</p>
<pre>#pragma Onum #pragma Ospace #pragma Otime</pre>	<p><code>armclang</code> does not support changing optimization options within a file. Instead these must be set on a per-file basis using command-line options.</p>

Table 4-5 Pragma language extensions that must be replaced (continued)

Pragma supported by Arm Compiler 5	Recommended Arm Compiler 6 alternative
#pragma pop #pragma push	<p>armclang does not support these pragmas. Therefore, you cannot push and pop the state of all supported pragmas.</p> <p>However, you can push and pop the state of the diagnostic pragmas and the state of the pack pragma.</p> <p>To control the state of the diagnostic pragmas, use #pragma clang diagnostic push and #pragma clang diagnostic pop.</p> <p>To control the state of the pack pragma, use #pragma pack(push) and #pragma pack(pop).</p>
#pragma softfp_linkage	<p>armclang does not support this pragma. Instead, use the <code>__attribute__((pcs("aapcs")))</code> function attribute to set the calling convention on a per-function basis, or use the <code>-mfloat-abi=soft</code> command-line option to set the calling convention on a per-file basis.</p>
#pragma no_softfp_linkage	<p>armclang does not support this pragma. Instead, use the <code>__attribute__((pcs("aapcs-vfp")))</code> function attribute to set the calling convention on a per-function basis, or use the <code>-mfloat-abi=hard</code> command-line option to set the calling convention on a per-file basis.</p>
#pragma unroll[(n)] #pragma unroll_completely	<p>armclang supports these pragmas.</p> <p>The default for #pragma unroll (that is, with no iteration count specified) differs between armclang and armcc:</p> <ul style="list-style-type: none"> • With armclang, the default is to fully unroll a loop. • With armcc, the default is #pragma unroll(4).

Related references

[4.6 C and C++ implementation compatibility](#) on page 4-60

[4.1 Language extension compatibility: keywords](#) on page 4-46

[4.2 Language extension compatibility: attributes](#) on page 4-49

[4.5 Diagnostics for pragma compatibility](#) on page 4-58

Related information

[armclang Reference Guide: #pragma GCC system_header](#)

[armclang Reference Guide: #pragma once](#)

[armclang Reference Guide: #pragma pack\(n\)](#)

[armclang Reference Guide: #pragma weak symbol, #pragma weak symbol1 = symbol2](#)

[armclang Reference Guide: #pragma unroll\[\(n\)\], #pragma unroll_completely](#)

4.4 Language extension compatibility: intrinsics

Arm Compiler 6 provides support for some intrinsics that are supported in Arm Compiler 5.

The following table lists some of the commonly used intrinsics that are supported by Arm Compiler 5 and shows whether Arm Compiler 6 supports them or provides an alternative. If there is no support in Arm Compiler 6, you must replace them with suitable inline assembly instructions or calls to the standard library. To use the intrinsic in Arm Compiler 6, you must include the appropriate header file. For more information on the ACLE intrinsics, see the *Arm® C Language Extensions*.

————— **Note** —————

- This is not an exhaustive list of all the intrinsics.
- The intrinsics provided in `<arm_compat.h>` are only supported for AArch32.

Table 4-6 Compiler intrinsic support in Arm Compiler 6

Intrinsic in Arm Compiler 5	Function	Support in Arm Compiler 6	Header file for Arm Compiler 6
<code>__breakpoint</code>	Inserts a BKPT instruction.	Yes	<code>arm_compat.h</code>
<code>__cdp</code>	Inserts a coprocessor instruction.	Yes. In Arm Compiler 6, the equivalent intrinsic is <code>__arm_cdp</code> .	<code>arm_acle.h</code>
<code>__clrex</code>	Inserts a CLREX instruction.	No	-
<code>__clz</code>	Inserts a CLZ instruction or equivalent routine.	Yes	<code>arm_acle.h</code>
<code>__current_pc</code>	Returns the program counter at this point.	Yes	<code>arm_compat.h</code>
<code>__current_sp</code>	Returns the stack pointer at this point.	Yes	<code>arm_compat.h</code>
<code>__isb</code>	Inserts ISB or equivalent.	Yes	<code>arm_acle.h</code>
<code>__disable_fiq</code>	Disables FIQ interrupts (Armv7 architecture only). Returns previous value of FIQ mask.	Yes	<code>arm_compat.h</code>
<code>__disable_irq</code>	Disable IRQ interrupts. Returns previous value of IRQ mask.	Yes	<code>arm_compat.h</code>
<code>__dmb</code>	Inserts a DMB instruction or equivalent.	Yes	<code>arm_acle.h</code>
<code>__dsb</code>	Inserts a DSB instruction or equivalent.	Yes	<code>arm_acle.h</code>
<code>__enable_fiq</code>	Enables fast interrupts.	Yes	<code>arm_compat.h</code>
<code>__enable_irq</code>	Enables IRQ interrupts.	Yes	<code>arm_compat.h</code>
<code>__fabs</code>	Inserts a VABS or equivalent code sequence.	No. Arm recommends using the standard C library function <code>fabs()</code> .	-
<code>__fabsf</code>	Single precision version of <code>__fabs</code> .	No. Arm recommends using the standard C library function <code>fabsf()</code> .	-

Table 4-6 Compiler intrinsic support in Arm Compiler 6 (continued)

Intrinsic in Arm Compiler 5	Function	Support in Arm Compiler 6	Header file for Arm Compiler 6
<code>__force_stores</code>	Flushes all external variables visible from this function, if they have been changed.	Yes	<code>arm_compat.h</code>
<code>__ldrex</code>	Inserts an appropriately sized Load Exclusive instruction.	No. This intrinsic is deprecated in ACLE 2.0.	-
<code>__ldrexld</code>	Inserts an LDREXD instruction.	No. This intrinsic is deprecated in ACLE 2.0.	-
<code>__ldrt</code>	Inserts an appropriately sized user-mode load instruction.	No	-
<code>__memory_changed</code>	Is similar to <code>__force_stores</code> , but also reloads the values from memory.	Yes	<code>arm_compat.h</code>
<code>__nop</code>	Inserts a NOP or equivalent instruction that will not be optimized away. It also inserts a sequence point, and scheduling barrier for side-effecting function calls.	Yes	<code>arm_acle.h</code>
<code>__pld</code>	Inserts a PLD instruction, if supported.	Yes	<code>arm_acle.h</code>
<code>__pldw</code>	Inserts a PLDW instruction, if supported (Armv7 architecture with MP).	No. Arm recommends using <code>__pldx</code> described in the ACLE document.	<code>arm_acle.h</code>
<code>__pli</code>	Inserts a PLI instruction, if supported.	Yes	<code>arm_acle.h</code>
<code>__promise</code>	Compiler assertion that the expression always has a nonzero value. If asserts are enabled then the promise is checked at runtime by evaluating <i>expr</i> using <code>assert(expr)</code> .	Yes. However, you must <code>#include <assert.h></code> to use <code>__promise</code> . <code>__promise</code> has the same behavior as <code>assert()</code> unless at least one of <code>NDEBUG</code> or <code>__DO_NOT_LINK_PROMISE_WITH_ASSERT</code> is defined.	<code>assert.h</code>
<code>__qadd</code>	Inserts a saturating add instruction, if supported.	Yes	<code>arm_acle.h</code>
<code>__qdbl</code>	Inserts instructions equivalent to <code>qadd(val, val)</code> , if supported.	Yes	<code>arm_acle.h</code>
<code>__qsub</code>	Inserts a saturating subtract, or equivalent routine, if supported.	Yes	<code>arm_acle.h</code>
<code>__rbit</code>	Inserts a bit reverse instruction.	Yes	<code>arm_acle.h</code>
<code>__rev</code>	Insert a REV, or endian swap instruction.	Yes	<code>arm_acle.h</code>
<code>__return_address</code>	Returns value of LR when returning from current function, without inhibiting optimizations like inlining or tailcalling.	No. Arm recommends using inline assembly instructions.	-

Table 4-6 Compiler intrinsic support in Arm Compiler 6 (continued)

Intrinsic in Arm Compiler 5	Function	Support in Arm Compiler 6	Header file for Arm Compiler 6
<code>__ror</code>	Insert an ROR instruction.	Yes	<code>arm_acle.h</code>
<code>__schedule_barrier</code>	Create a sequence point without effecting memory or inserting NOP instructions. Functions with side effects cannot move past the new sequence point.	Yes	<code>arm_compat.h</code>
<code>__semihost</code>	Inserts an SVC or BKPT instruction.	Yes	<code>arm_compat.h</code>
<code>__sev</code>	Insert a SEV instruction. Error if the SEV instruction is not supported.	Yes	<code>arm_acle.h</code>
<code>__sqrtd</code>	Inserts a VSQRT instruction on targets with a VFP coprocessor.	No	-
<code>__sqrtf</code>	single precision version of <code>__sqrtd</code> .	No	-
<code>__ssat</code>	Inserts an SSAT instruction. Error if the SSAT instruction is not supported.	Yes	<code>arm_acle.h</code>
<code>__strex</code>	Inserts an appropriately sized Store Exclusive instruction.	No. This intrinsic is deprecated in ACLE 2.0.	-
<code>__strex16</code>	Inserts a doubleword Store Exclusive instruction.	No. This intrinsic is deprecated in ACLE 2.0.	-
<code>__strtd</code>	Insert an appropriately sized STRT instruction.	No	-
<code>__swp</code>	Inserts an appropriately sized SWP instruction.	Yes. However, the SWP instruction is deprecated, and Arm does not recommend the use of <code>__swp</code> .	<code>arm_acle.h</code>
<code>__usat</code>	Inserts a USAT instruction. Error if the USAT instruction is not supported.	Yes	<code>arm_acle.h</code>
<code>__wfe</code>	Inserts a WFE instruction. Error if the WFE instruction is not supported.	Yes	<code>arm_acle.h</code>
<code>__wfi</code>	Inserts a WFI instruction. Error if the WFI instruction is not supported.	Yes	<code>arm_acle.h</code>
<code>__yield</code>	Inserts a YIELD instruction. Error if the YIELD instruction is not supported.	Yes	<code>arm_acle.h</code>
ARMv6 SIMD intrinsics	Inserts an Armv6 SIMD instruction.	No	-

Table 4-6 Compiler intrinsic support in Arm Compiler 6 (continued)

Intrinsic in Arm Compiler 5	Function	Support in Arm Compiler 6	Header file for Arm Compiler 6
ETSI intrinsics	35 intrinsic functions and 2 global variable flags specified in ETSI G729 used for speech encoding. These are provided in the Arm headers in <code>dspfn.h</code> .	No	-
C55x intrinsics	Emulation of selected TI C55x compiler intrinsics.	No	-
<code>__vfp_status</code>	Reads the FPSCR.	Yes	<code>arm_compat.h</code>
FMA intrinsics	Intrinsics for fused-multiply-add on the Cortex-M4 or Cortex-A5 processor in c99 mode.	No	-
Named register variables	Allows direct manipulation of a system register as if it were a C variable.	No. To access FPSCR, use the <code>__vfp_status</code> intrinsic or inline assembly instructions.	-

4.5 Diagnostics for pragma compatibility

Older armcc compiler versions supported many pragmas which are not supported by armclang, but which could change the semantics of code. When armclang encounters these pragmas, it generates diagnostic messages.

The following table shows which diagnostics are generated for each pragma type, and the diagnostic group to which that diagnostic belongs. armclang generates diagnostics as follows:

- Errors indicate use of an armcc pragma which could change the semantics of code.
- Warnings indicate use of any other armcc pragma which is ignored by armclang.
- Pragmas other than those listed are silently ignored.

Table 4-7 Pragma diagnostics

Pragma supported by older compiler versions	Default diagnostic type	Diagnostic group
#pragma anon_unions	Warning	armcc-pragma-anon-unions
#pragma no_anon_unions	Warning	armcc-pragma-anon-unions
#pragma arm	Error	armcc-pragma-arm
#pragma arm section [section_type_list]	Error	armcc-pragma-arm
#pragma diag_default tag[,tag,...]	Error	armcc-pragma-dia
#pragma diag_error tag[,tag,...]	Error	armcc-pragma-dia
#pragma diag_remark tag[,tag,...]	Warning	armcc-pragma-dia
#pragma diag_suppress tag[,tag,...]	Warning	armcc-pragma-dia
#pragma diag_warning tag[,tag,...]	Warning	armcc-pragma-dia
#pragma exceptions_unwind	Error	armcc-pragma-exceptions-unwind
#pragma no_exceptions_unwind	Error	armcc-pragma-exceptions-unwind
#pragma GCC system_header	None	-
#pragma hdrstop	Warning	armcc-pragma-hdrstop
#pragma import symbol_name	Error	armcc-pragma-import
#pragma inline	Warning	armcc-pragma-inline
#pragma no_inline	Warning	armcc-pragma-inline
#pragma no_pch	Warning	armcc-pragma-no-pch
#pragma Onum	Warning	armcc-pragma-optimization
#pragma once	None	-
#pragma Ospace	Warning	armcc-pragma-optimization
#pragma Otime	Warning	armcc-pragma-optimization
#pragma pack	None	-
#pragma pop	Error	armcc-pragma-push-pop
#pragma push	Error	armcc-pragma-push-pop
#pragma softfp_linkage	Error	armcc-pragma-softfp-linkage
#pragma no_softfp_linkage	Error	armcc-pragma-softfp-linkage
#pragma thumb	Error	armcc-pragma-thumb

Table 4-7 Pragma diagnostics (continued)

Pragma supported by older compiler versions	Default diagnostic type	Diagnostic group
#pragma weak <i>symbol</i>	None	-
#pragma weak <i>symbol1</i> = <i>symbol2</i>	None	-

In addition to the above diagnostic groups, there are the following additional diagnostic groups:

armcc-pragmas

Contains all of the above diagnostic groups.

unknown-pragmas

Contains diagnostics about pragmas which are not known to armclang, and are not in the above table.

pragmas

Contains all pragma-related diagnostics, including armcc-pragma and unknown-pragma.

Any non-fatal armclang diagnostic group can be ignored, upgraded, or downgraded using the following command-line options:

Suppress a group of diagnostics:

-Wno-diag-group

Upgrade a group of diagnostics to warnings:

-Wdiag-group

Upgrade a group of diagnostics to errors:

-Werror=diag-group

Downgrade a group of diagnostics to warnings:

-Wno-error=diag-group

Related references

[4.3 Language extension compatibility: pragmas on page 4-51](#)

4.6 C and C++ implementation compatibility

Arm Compiler 6 C and C++ implementation details differ from previous compiler versions.

The following table describes the C and C++ implementation detail differences.

Table 4-8 C and C++ implementation detail differences

Feature	Older versions of Arm Compiler	Arm Compiler 6
<i>Integer operations</i>		
Shifts	<pre>int shifts > 0 && < 127 int left_shifts > 31 == 0 int right_shifts > 31 == 0</pre> <p>(for unsigned or positive)</p> <pre>int right_shifts > 31 == -1</pre> <p>(for negative)</p> <pre>long long shifts > 0 && < 63</pre>	<p>Warns when shift amount > width of type.</p> <p>You can use the <code>-wshift-count-overflow</code> option to suppress this warning.</p>
Integer division	Checks that the sign of the remainder matches the sign of the numerator.	The sign of the remainder is not necessarily the same as the sign of the numerator.
<i>Floating-point operations</i>		
Default standard	IEEE 754 standard, rounding to nearest representable value, exceptions disabled by default.	<p>All facilities, operations, and representations guaranteed by the IEEE standard are available in single and double-precision. Modes of operation can be selected dynamically at runtime.</p> <p>This is equivalent to the <code>--fpmode=ieee_full</code> option in older versions of Arm Compiler.</p>
<code>#pragma STDC FP_CONTRACT</code>	<code>#pragma STDC FP_CONTRACT</code>	Might affect code generation.
<i>Unions, enums and structs</i>		
Enum packing	Enums are implemented in the smallest integral type of the correct sign to hold the range of the enum values, except for when compiling in C++ mode with <code>--enum_is_int</code> .	By default enums are implemented as int , with long long used when required.
Allocation of bit-fields in containers	Allocation of bit-fields in containers.	A container is an object, aligned as the declared type. Its size is sufficient to contain the bit-field, but might be smaller or larger than the bit-field declared type.
Signedness of plain bit-fields	Unsigned. Plain bit-fields declared without either the signed or unsigned qualifiers default to unsigned . The <code>--signed_bitfields</code> option treats plain bit-fields as signed .	Signed. Plain bit-fields declared without either the signed or unsigned qualifiers default to signed . There is no equivalent to either the <code>--signed_bitfields</code> or <code>--no_signed_bitfields</code> options.
<i>Arrays and pointers</i>		

Table 4-8 C and C++ implementation detail differences (continued)

Feature	Older versions of Arm Compiler	Arm Compiler 6
Casting between integers and pointers	No change of representation	Converting a signed integer to a pointer type with greater bit width sign-extends the integer. Converting an unsigned integer to a pointer type with greater bit width zero-extends the integer.
<i>Misc C</i>		
<code>sizeof(wchar_t)</code>	2 bytes	4 bytes
<code>size_t</code>	Defined as unsigned int , 32-bit.	Defined as unsigned int in 32-bit architectures, and <code><sign><type></code> 64-bit in 64-bit architectures.
<code>ptrdiff_t</code>	Defined as signed int , 32-bit.	Defined as unsigned int in 32-bit architectures, and <code><sign><type></code> 64-bit in 64-bit architectures.
<i>Misc C++</i>		
C++ library	Rogue Wave Standard C++ Library	LLVM libc++ Library ————— Note ————— • When the C++ library is used in source code, there is limited compatibility between object code created with Arm Compiler 6 and object code created with Arm Compiler 5. This also applies to indirect use of the C++ library, for example memory allocation or exception handling. —————
Implicit inclusion	If compilation requires a template definition from a template declared in a header file <code>xyz.h</code> , the compiler implicitly includes the file <code>xyz.cc</code> or <code>xyz.CC</code> .	Not supported.
Alternative template lookup algorithms	When performing referencing context lookups, name lookup matches against names from the instantiation context as well as from the template definition context.	Not supported.
Exceptions	Off by default, function unwinding on with <code>--exceptions</code> by default.	On by default in C++ mode.
<i>Translation</i>		
Diagnostics messages format	<code>source-file, line-number : severity : error-code : explanation</code>	<code>source-file:line-number:char-number: description [diagnostic-flag]</code>
<i>Environment</i>		
Physical source file bytes interpretation	Current system locale dependent or set using the <code>--locale</code> command-line option.	UTF-8

Related references

- [4.1 Language extension compatibility: keywords on page 4-46](#)
- [4.2 Language extension compatibility: attributes on page 4-49](#)
- [4.3 Language extension compatibility: pragmas on page 4-51](#)
- [4.7 Compatibility of C++ objects on page 4-62](#)

4.7 Compatibility of C++ objects

The compatibility of C++ objects compiled with Arm Compiler 5 depends on the C++ libraries used.

Compatibility with objects compiled using Rogue Wave standard library headers

Arm Compiler 6 does not support binary compatibility with objects compiled using the Rogue Wave standard library include files.

There are warnings at link time when objects are mixed. L6869W is reported if an object requests the Rogue Wave standard library. L6870W is reported when using an object that is compiled with Arm Compiler 5 with exceptions support.

The impact of mixing objects that have been compiled against different C++ standard library headers might include:

- Undefined symbol errors.
- Increased code size.
- Possible runtime errors.

If you have Arm Compiler 6 objects that have been compiled with the legacy `-stdlib=legacy_cpplib` option then these objects use the Rogue Wave standard library and therefore might be incompatible with objects created using Arm Compiler 6.4 or later. To resolve these issues, you must recompile all object files with Arm Compiler 6.4 or later.

Compatibility with C++ objects compiled using Arm® Compiler 5

The choice of C++ libraries at link time must match the choice of C++ include files at compile time for all input objects. Arm Compiler 5 objects that use the Rogue Wave C++ libraries are not compatible with Arm Compiler 6 objects. Arm Compiler 5 objects that use C++ but do not make use of the Rogue Wave header files can be compatible with Arm Compiler 6 objects that use `libc++` but this is not guaranteed.

Arm recommends using Arm Compiler 6 for building the object files.

Compatibility of arrays of objects compiled using Arm® Compiler 5

Arm Compiler 6 is not compatible with objects from Arm Compiler 5 that use `operator new[]` and `delete[]`. Undefined symbol errors result at link time because Arm Compiler 6 does not provide the helper functions that Arm Compiler 5 depends on. For example:

```
construct.cpp:
class Foo
{
public:
    Foo() : x_(new int) { *x_ = 0; }
    void setX(int x) { *x_ = x; }
    ~Foo() { delete x_; }
private:
    int* x_;
};

void func(void)
{
    Foo* array;
    array = new Foo [10];
    array[0].setX(1);
    delete[] array;
}
```

If you build this example with Arm Compiler 5 compiler, `armcc`, and linking with the Arm Compiler 6 linker, `armlink`, using:

```
armcc -c construct.cpp -Ospace -O1 --cpu=cortex-a9
armlink construct.o -o construct.axf
```

the linker reports:

```
Error: L6218E: Undefined symbol __aeabi_vec_delete (referred from construct.o).  
Error: L6218E: Undefined symbol __aeabi_vec_new_cookie_nodtor (referred from construct.o).
```

To resolve these linker errors, you must use the Arm Compiler 6 compiler, `armclang`, to compile all C++ files that use the `new[]` and `delete[]` operators.

————— **Note** —————

You do not have to specify `--stdlib=libc++` for `armlink`, because this is the default and only option in Arm Compiler 6.4, and later.

————— **Related information** —————

armlink User Guide: `--stdlib`

Chapter 5

Migrating from `armasm` to the `armclang` Integrated Assembler

Describes how to migrate assembly code from `armasm` syntax to GNU syntax (used by `armclang`).

It contains the following sections:

- [5.1 Overview of differences between `armasm` and GNU syntax assembly code](#) on page 5-65.
- [5.2 Comments](#) on page 5-67.
- [5.3 Labels](#) on page 5-68.
- [5.4 Numeric local labels](#) on page 5-69.
- [5.5 Functions](#) on page 5-71.
- [5.6 Sections](#) on page 5-72.
- [5.7 Symbol naming rules](#) on page 5-74.
- [5.8 Numeric literals](#) on page 5-75.
- [5.9 Operators](#) on page 5-76.
- [5.10 Alignment](#) on page 5-77.
- [5.11 PC-relative addressing](#) on page 5-78.
- [5.12 Conditional directives](#) on page 5-79.
- [5.13 Data definition directives](#) on page 5-80.
- [5.14 Instruction set directives](#) on page 5-82.
- [5.15 Miscellaneous directives](#) on page 5-83.
- [5.16 Symbol definition directives](#) on page 5-84.

5.1 Overview of differences between *armasm* and GNU syntax assembly code

armasm (for assembling legacy assembly code) uses *armasm* syntax assembly code.

armclang aims to be compatible with GNU syntax assembly code (that is, the assembly code syntax supported by the GNU assembler, *as*).

If you have legacy assembly code that you want to assemble with *armclang*, you must convert that assembly code from *armasm* syntax to GNU syntax.

The specific instructions and order of operands in your UAL syntax assembly code do not change during this migration process.

However, you need to make changes to the syntax of your assembly code. These changes include:

- The directives in your code.
- The format of labels, comments, and some types of literals.
- Some symbol names.
- The operators in your code.

The following examples show simple, equivalent, assembly code in both *armasm* and GNU syntax.

armasm syntax

```
; Simple armasm syntax example
;
; Iterate round a loop 10 times, adding 1 to a register each time.

        AREA ||.text||, CODE, READONLY, ALIGN=2

main PROC
    MOV     w5,#0x64      ; W5 = 100
    MOV     w4,#0        ; W4 = 0
    B       test_loop    ; branch to test_loop
loop
    ADD     w5,w5,#1     ; Add 1 to W5
    ADD     w4,w4,#1     ; Add 1 to W4
test_loop
    CMP     w4,#0xa      ; if W4 < 10, branch back to loop
    BLT    loop
    ENDP

        END
```

GNU syntax

```
// Simple GNU syntax example 5.2 Comments on page 5-67//
// Iterate round a loop 10 times, adding 1 to a register each time.

        .section .text,"x"      // 5.6 Sections on page 5-72          .balign
4

main:
    MOV     w5,#0x64           // 5.3 Labels on page 5-68
    MOV     w4,#0              // W5 = 100 5.8 Numeric Literals on page 5-75
    B       test_loop         // branch to test_loop
loop:
    ADD     w5,w5,#1           // Add 1 to W5
    ADD     w4,w4,#1           // Add 1 to W4
test_loop:
    CMP     w4,#0xa           // if W4 < 10, branch back to loop
    BLT    loop
    .end                       // 5.15 Miscellaneous directives on page 5-83
```

Related references

[5.2 Comments on page 5-67](#)

[5.3 Labels on page 5-68](#)

[5.4 Numeric local labels on page 5-69](#)

[5.5 Functions on page 5-71](#)

[5.6 Sections on page 5-72](#)

[5.7 Symbol naming rules on page 5-74](#)

5.8 Numeric literals on page 5-75

5.9 Operators on page 5-76

5.10 Alignment on page 5-77

5.11 PC-relative addressing on page 5-78

5.12 Conditional directives on page 5-79

5.13 Data definition directives on page 5-80

5.14 Instruction set directives on page 5-82

5.15 Miscellaneous directives on page 5-83

5.16 Symbol definition directives on page 5-84

Related information

About the Unified Assembler Language

5.2 Comments

A comment identifies text that the assembler ignores.

armasm syntax

A comment is the final part of a source line. The first semicolon on a line marks the beginning of a comment except where the semicolon appears inside a string literal.

The end of the line is the end of the comment. A comment alone is a valid line.

For example:

```
; This whole line is a comment
; As is this line

myProc: PROC
    MOV     r1, #16     ; Load R0 with 16
```

GNU syntax

GNU syntax assembly code provides two different methods for marking comments:

- The `/*` and `*/` markers identify multiline comments:

```
/* This is a comment
   that spans multiple
   lines */
```

- The `//` marker identifies the remainder of a line as a comment:

```
MOV R0,#16    // Load R0 with 16
```

Related information

GNU Binutils - Using as: Comments

armasm User Guide: Syntax of source lines in assembly language

5.3 Labels

Labels are symbolic representations of addresses. You can use labels to mark specific addresses that you want to refer to from other parts of the code.

armasm syntax

A label is written as a symbol beginning in the first column. A label can appear either in a line on its own, or in a line with an instruction or directive. Whitespace separates the label from any following instruction or directive:

```
MOV R0,#16
loop SUB R0,R0,#1 ; "loop" is a label
CMP R0,#0
BGT loop
```

GNU syntax

A label is written as a symbol that either begins in the first column, or has nothing but whitespace between the first column and the label. A label can appear either in a line on its own, or in a line with an instruction or directive. A colon ":" follows the label (whitespace is allowed between the label and the colon):

```
MOV R0,#16
loop: // "loop" label on its own line
SUB R0,R0,#1
CMP R0,#0
BGT loop

MOV R0,#16
loop: SUB R0,R0,#1 // "loop" label in a line with an instruction
CMP R0,#0
BGT loop
```

Related references

[5.4 Numeric local labels on page 5-69](#)

Related information

[GNU Binutils - Using as: Labels](#)

5.4 Numeric local labels

Numeric local labels are a type of label that you refer to by a number rather than by name. Unlike other labels, the same numeric local label can be used multiple times and the same number can be used for more than one numeric local label.

armasm syntax

A numeric local label is a number in the range 0-99, optionally followed by a scope name corresponding to a ROUT directive.

Numeric local labels follow the same syntax as all other labels.

Refer to numeric local labels using the following syntax:

```
 %[F|B][A|T]n[rouname]
```

Where:

- F and B instruct the assembler to search forwards and backwards respectively. By default, the assembler searches backwards first, then forwards.
- A and T instruct the assembler to search all macro levels or only the current macro level respectively. By default, the assembler searches all macros from the current level to the top level, but does not search lower level macros.
- n is the number of the numeric local label in the range 0-99.
- *rouname* is an optional scope label corresponding to a ROUT directive. If *rouname* is specified in either a label or a reference to a label, the assembler checks it against the name of the nearest preceding ROUT directive. If it does not match, the assembler generates an error message and the assembly fails.

For example, the following code implements an incrementing loop:

```

1      MOV     r4,#1      ; r4=1
      ADD     r4,r4,#1   ; Local label
      CMP     r4,#0x5    ; Increment r4
      BLT    %b1        ; if r4 < 5...
                        ; ..branch backwards to local label "1"
```

Here is the same example using a ROUT directive to restrict the scope of the local label:

```

routA  ROUT
1routA MOV     r4,#1      ; Start of "routA" scope
      ADD     r4,r4,#1   ; r4=1
      CMP     r4,#0x9    ; Local label
      BLT    %b1routA   ; Increment r4
                        ; if r4 < 9...
routB  ROUT            ; ..branch backwards to local label "1routA"
                        ; Start of "routB" scope (and therefore end of "routA" scope)
```

GNU syntax

A numeric local label is a number in the range 0-99.

Numeric local labels follow the same syntax as all other labels.

Refer to numeric local labels using the following syntax:

```
 n{f|b}
```

Where:

- n is the number of the numeric local label in the range 0-99.
- f and b instruct the assembler to search forwards and backwards respectively. There is no default. You must specify one of f or b.

For example, the following code implements an incrementing loop:

```

1:     MOV     r4,#1      // r4=1
      ADD     r4,r4,#1   // Local label
                        // Increment r4
```

```
CMP    r4,#0x5    // if r4 < 5...  
BLT    1b        // ...branch backwards to local label "1"
```

Note

GNU syntax assembly code does not provide mechanisms for restricting the scope of local labels.

Related references

5.3 Labels on page 5-68

Related information

GNU Binutils - Using as: Labels

GNU Binutils - Using as: Local labels

armasm User Guide: Labels

armasm User Guide: Numeric local labels

armasm User Guide: Syntax of numeric local labels

armasm User Guide: ROUT

5.5 Functions

Assemblers can identify the start of a function when producing DWARF call frame information for ELF.

armasm syntax

The `FUNCTION` directive marks the start of a function. `PROC` is a synonym for `FUNCTION`.

The `ENDFUNC` directive marks the end of a function. `ENDP` is a synonym for `ENDFUNC`.

For example:

```
myproc PROC
; Procedure body
ENDP
```

GNU syntax

Use the `.type` directive to identify symbols as functions. For example:

```
.type myproc, "function"
myproc:
// Procedure body
```

GNU syntax assembly code provides the `.func` and `.endfunc` directives. However, these are not supported by `armclang`. `armclang` uses the `.size` directive to set the symbol size:

```
.type myproc, "function"
myproc:
// Procedure body
.Lmyproc_end0:
.size myproc, .Lmyproc_end0-myproc
```

Note

Functions must be typed to link properly.

Related information

GNU Binutils - Using as: .type

armasm User Guide: FUNCTION or PROC

armasm User Guide: ENDFUNC or ENDP

5.6 Sections

Sections are independent, named, indivisible chunks of code or data that are manipulated by the linker.

armasm syntax

The `AREA` directive instructs the assembler to assemble a new code or data section.

Section attributes within the `AREA` directive provide information about the section. Available section attributes include the following:

- `CODE` specifies that the section contains machine instructions.
- `READONLY` specifies that the section must not be written to.
- `ALIGN=n` specifies that the section is aligned on a 2^n byte boundary

For example:

```
AREA mysection, CODE, READONLY, ALIGN=3
```

————— Note —————

The `ALIGN` attribute does not take the same values as the `ALIGN` directive. `ALIGN=n` (the `AREA` attribute) aligns on a 2^n byte boundary. `ALIGN n` (the `ALIGN` directive) aligns on an n -byte boundary.

GNU syntax

The `.section` directive instructs the assembler to assemble a new code or data section.

Flags provide information about the section. Available section flags include the following:

- `a` specifies that the section is allocatable.
- `x` specifies that the section is executable.
- `w` specifies that the section is writable.
- `S` specifies that the section contains null-terminated strings.

For example:

```
.section mysection,"ax"
```

Not all *armasm* syntax `AREA` attributes map onto GNU syntax `.section` flags. For example, the *armasm* syntax `ALIGN` attribute corresponds to the GNU syntax `.balign` directive, rather than a `.section` flag:

```
.section mysection,"ax"
.balign 8
```

————— Note —————

When using Arm Compiler 5, section names do not need to be unique. Therefore, you could use the same section name to create different section types.

Arm Compiler 6 supports multiple sections with the same section name only if you specify a *unique ID*. You must ensure that different section types either:

- Have a unique section name.
- Have a unique ID, if they have the same section name.

If you use the same section name, for another section or symbol, without a unique ID, then *armclang* integrated assembler merges the sections and gives the merged section the flags of the first section with that name.

```
// stores both the code and data in one section
// uses the flags from the first section
.section "sectionX", "ax"
mov r0, r0
.section "sectionX", "a", %progbits
.word 0xdeadbeef
```

```
// stores both the code and data in one section
// uses the flags from the first section
.section "sectionY", "a", %progbits
.word 0xdeadbeef
.section "sectionY", "ax"
mov r0, r0
```

When you assemble the above example code with:

```
armclang --target=arm-arm-none-eabi -c -march=armv8-m.main example_sections.s
```

The *armclang* integrated assembler:

- merges the two sections named `sectionX` into one section with the flags "ax".
- merges the two sections named `sectionY` into one section with the flags "a", %progbits.

Related information

GNU Binutils - Using as: .section

GNU Binutils - Using as: .align

armasm User Guide: AREA

5.7 Symbol naming rules

armasm syntax assembly code and GNU syntax assembly code use similar, but different naming rules for symbols.

Symbol naming rules which are common to both *armasm* syntax and GNU syntax include:

- Symbol names must be unique within their scope.
- Symbol names are case-sensitive, and all characters in the symbol name are significant.
- Symbols must not use the same name as built-in variable names or predefined symbol names.

Symbol naming rules which differ between *armasm* syntax and GNU syntax include:

- *armasm* syntax symbols must start with a letter or the underscore character "_".
GNU syntax symbols must start with a letter, the underscore character "_", or a period ".".
- *armasm* syntax symbols use double bars to delimit symbol names containing non-alphanumeric characters (except for the underscore):

```
IMPORT ||Image$$ARM_LIB_STACKHEAP$$ZI$$Limit||
```

GNU syntax symbols do not require double bars:

```
.global Image$$ARM_LIB_STACKHEAP$$ZI$$Limit
```

Related information

GNU Binutils - Using as: Symbol Names

armasm User Guide: Symbol naming rules

5.8 Numeric literals

armasm syntax assembly and GNU syntax assembly provide different methods for specifying some types of numeric literal.

Implicit shift operations

armasm syntax assembly allows immediate values with an implicit shift operation. For example, the `MOVK` instruction takes a 16-bit operand with an optional left shift. *armasm* accepts the instruction `MOVK x1, #0x40000`, converting the operand automatically to `MOVK x1, #0x4, LSL #16`.

GNU syntax assembly expects immediate values to be presented as encoded. The instruction `MOVK x1, #0x40000` results in the following message: `error: immediate must be an integer in range [0, 65535]`.

Hexadecimal literals

armasm syntax assembly provides two methods for specifying hexadecimal literals, the prefixes `"&"` and `"0x"`.

For example, the following are equivalent:

```
ADD    r1, #0xAF
ADD    r1, #&AF
```

GNU syntax assembly only supports the `"0x"` prefix for specifying hexadecimal literals. Convert any `"&"` prefixes to `"0x"`.

`n_base-n-digits` format

armasm syntax assembly lets you specify numeric literals using the following format:

`n_base-n-digits`

For example:

- `2_1101` is the binary literal 1101 (13 in decimal).
- `8_27` is the octal literal 27 (23 in decimal).

GNU syntax assembly does not support the `n_base-n-digits` format. Convert all instances to a supported numeric literal form.

For example, you could convert:

```
ADD    r1, #2_1101
```

to:

```
ADD    r1, #13
```

or:

```
ADD    r1, #0xD
```

Related information

GNU Binutils - Using as: Integers

armasm User Guide: Syntax of numeric literals

5.9 Operators

armasm syntax assembly and GNU syntax assembly provide different methods for specifying some operators.

The following table shows how to translate *armasm* syntax operators to GNU syntax operators.

Table 5-1 Operator translation

armasm syntax operator	GNU syntax operator
:OR:	
:EOR:	^
:AND:	&
:NOT:	~
:SHL:	<<
:SHR:	>>
:LOR:	
:LAND:	&&
:ROL:	No GNU equivalent
:ROR:	No GNU equivalent

Related information

GNU Binutils - Using as: Infix Operators

armasm User Guide: Unary operators

armasm User Guide: Shift operators

armasm User Guide: Addition, subtraction, and logical operators

5.10 Alignment

Data and code must be aligned to appropriate boundaries.

For example, The T32 pseudo-instruction ADR can only load addresses that are word aligned, but a label within T32 code might not be word aligned. You must use an alignment directive to ensure four-byte alignment of an address within T32 code.

An alignment directive aligns the current location to a specified boundary by padding with zeros or NOP instructions.

armasm syntax

armasm syntax assembly provides the ALIGN *n* directive, where *n* specifies the alignment boundary in bytes. For example, the directive ALIGN 128 aligns addresses to 128-byte boundaries.

armasm syntax assembly also provides the PRESERVE8 directive. The PRESERVE8 directive specifies that the current file preserves eight-byte alignment of the stack.

GNU syntax

GNU syntax assembly provides the .balign *n* directive, which uses the same format as ALIGN.

Convert all instances of ALIGN *n* to .balign *n*.

————— **Note** —————

GNU syntax assembly also provides the .align *n* directive. However, the format of *n* varies from system to system. The .balign directive provides the same alignment functionality as .align with a consistent behavior across all architectures.

Convert all instances of PRESERVE8 to .eabi_attribute Tag_ABI_align_preserved, 1.

Related information

GNU Binutils - Using as: ARM Machine Directives

GNU Binutils - Using as: .align

GNU Binutils - Using as: .balign

armasm User Guide: REQUIRE8 and PRESERVE8

armasm User Guide: ALIGN

5.11 PC-relative addressing

armasm syntax assembly and GNU syntax assembly provide different methods for performing PC-relative addressing.

armasm syntax

armasm syntax assembly provides the symbol `{pc}` to let you specify an address relative to the current instruction.

For example:

```
ADRP x0, {pc}
```

GNU syntax

GNU syntax assembly does not support the `{pc}` symbol. Instead, it uses the special dot "." character, as follows:

```
ADRP x0, .
```

Related information

GNU Binutils - Using as: The Special Dot Symbol

armasm User Guide: Register-relative and PC-relative expressions

5.12 Conditional directives

Conditional directives specify conditions that control whether or not to assemble a sequence of assembly code.

The following table shows how to translate *armasm* syntax conditional directives to GNU syntax directives:

Table 5-2 Conditional directive translation

armasm syntax directive	GNU syntax directive
IF	.if family of directives
IF :DEF:	.ifdef
IF :LNOT::DEF:	.ifndef
ELSE	.else
ELSEIF	.elseif
ENDIF	.endif

In addition to the change in directives shown, the following syntax differences apply:

- In *armasm* syntax, the conditional directives can use forward references. This is possible as *armasm* is a two-pass assembler. In GNU syntax, forward references are not supported, as the *armclang* integrated assembler only performs one pass over the main text.

If a forward reference is used with the `.ifdef` directive, the condition will always fail implicitly. Similarly, if a forward reference is used with the `.ifndef` directive, the condition will always pass implicitly.

- In *armasm* syntax, the maximum total nesting depth for directive structures such as `IF...ELSE...ENDIF` is 256. In GNU syntax, this limit is not applicable.

Related information

GNU Binutils - Using as: .if

GNU Binutils - Using as: .else

GNU Binutils - Using as: .elseif

GNU Binutils - Using as: .endif

armasm User Guide: IF, ELSE, ENDIF, and ELIF

5.13 Data definition directives

Data definition directives allocate memory, define data structures, and set initial contents of memory.

The following table shows how to translate *armasm* syntax data definition directives to GNU syntax directives:

————— **Note** —————

This list only contains examples of common data definition assembly directives. It is not exhaustive.

Table 5-3 Data definition directives translation

armasm syntax directive	GNU syntax directive	Description
DCB	.byte	Allocate one-byte blocks of memory, and specify the initial contents.
DCW	.hword	Allocate two-byte blocks of memory, and specify the initial contents.
DCD	.word	Allocate four-byte blocks of memory, and specify the initial contents.
DCI	.inst	Allocate a block of memory in the code, and specify the opcode. In A32 code, this is a four-byte block. In T32 code, this can be a two-byte or four-byte block. <code>.inst.n</code> allocates a two-byte block and <code>.inst.w</code> allocates a four-byte block.
DCQ	.quad	Allocate eight-byte blocks of memory, and specify the initial contents.
SPACE	.org	<p>Allocate a zeroed block of memory.</p> <p>The <i>armasm</i> syntax <code>SPACE</code> directive allocates a zeroed block of memory with the specified size. The GNU assembly <code>.org</code> directive zeroes the memory up to the given address. The address must be greater than the address at which the directive is placed.</p> <p>The following example shows the <i>armasm</i> syntax and GNU syntax methods of creating a 100-byte zeroed block of memory using these directives:</p> <pre style="background-color: #f0f0f0; padding: 10px;">; armasm syntax implementation start_address SPACE 0x100 // GNU syntax implementation start_address: .org start_address + 0x100</pre> <p>————— Note —————</p> <p>If label arithmetic is not required, the GNU assembly <code>.space</code> directive can be used instead of the <code>.org</code> directive. However, Arm recommends using the <code>.org</code> directive wherever possible.</p>

The following examples show how to rewrite a vector table in both *armasm* and GNU syntax.

armasm syntax	GNU syntax
<pre> Vectors LDR PC, Reset_Addr LDR PC, Undefined_Addr LDR PC, SVC_Addr LDR PC, Prefetch_Addr LDR PC, Abort_Addr B . ; Reserved vector LDR PC, IRQ_Addr LDR PC, FIQ_Addr Reset_Addr DCD Reset_Handler Undefined_Addr DCD Undefined_Handler SVC_Addr DCD SVC_Handler Prefetch_Addr DCD Prefetch_Handler Abort_Addr DCD Abort_Handler IRQ_Addr DCD IRQ_Handler FIQ_Addr DCD FIQ_Handler </pre>	<pre> Vectors: ldr pc, Reset_Addr ldr pc, Undefined_Addr ldr pc, SVC_Addr ldr pc, Prefetch_Addr ldr pc, Abort_Addr b . // Reserved vector ldr pc, IRQ_Addr ldr pc, FIQ_Addr .balign 4 Reset_Addr: .word Reset_Handler Undefined_Addr: .word Undefined_Handler SVC_Addr: .word SVC_Handler Prefetch_Addr: .word Prefetch_Handler Abort_Addr: .word Abort_Handler IRQ_Addr: .word IRQ_Handler FIQ_Addr: .word FIQ_Handler </pre>

Related information

- [GNU Binutils - Using as: .byte](#)
- [GNU Binutils - Using as: .word](#)
- [GNU Binutils - Using as: .hword](#)
- [GNU Binutils - Using as: .quad](#)
- [GNU Binutils - Using as: .space](#)

5.14 Instruction set directives

Instruction set directives instruct the assembler to interpret subsequent instructions as either A32 or T32 instructions.

The following table shows how to translate *armasm* syntax instruction set directives to GNU syntax directives:

Table 5-4 Instruction set directives translation

armasm syntax directive	GNU syntax directive	Description
ARM or CODE32	.arm or .code 32	Interpret subsequent instructions as A32 instructions.
THUMB or CODE16	.thumb or .code 16	Interpret subsequent instructions as T32 instructions.

Related information

GNU Binutils - Using as: ARM Machine Directives

armasm User Guide: ARM or CODE32 directive

armasm User Guide: CODE16 directive

armasm User Guide: THUMB directive

5.15 Miscellaneous directives

Miscellaneous directives perform a range of different functions.

The following table shows how to translate *armasm* syntax miscellaneous directives to GNU syntax directives:

Table 5-5 Miscellaneous directives translation

armasm syntax directive	GNU syntax directive	Description
foo EQU 0x1C	.equ foo, 0x1C	Assigns a value to a symbol. Note the rearrangement of operands.
EXPORT StartHere GLOBAL StartHere	.global StartHere .type StartHere, @function	Declares a symbol that can be used by the linker (that is, a symbol that is visible to the linker). <i>armasm</i> automatically determines the types of exported symbols. However, <i>armclang</i> requires that you explicitly specify the types of exported symbols using the <code>.type</code> directive. If the <code>.type</code> directive is not specified, the linker outputs warnings of the form: Warning: L6437W: Relocation #RELA:1 in test.o(.text) with respect to <i>symbol</i> ... Warning: L6318W: test.o(.text) contains branch to a non-code symbol <i>symbol</i> .
GET file INCLUDE file	.include file	Includes a file within the file being assembled.
IMPORT foo	.global foo	Provides the assembler with a name that is not defined in the current assembly.
INCBIN	.incbin	Partial support, <i>armclang</i> does not fully support <code>.incbin</code> .
INFO <i>n</i> , "string"	.warning "string"	The <code>INFO</code> directive supports diagnostic generation on either pass of the assembly (specified by <i>n</i>). The <code>.warning</code> directive does not let you specify a particular pass, because the <i>armclang</i> integrated assembler only performs one pass.
ENTRY	armlink -- entry= <i>location</i>	The <code>ENTRY</code> directive declares an entry point to a program. <i>armclang</i> does not provide an equivalent directive. Use <code>armlink --entry=<i>location</i></code> to specify the entry point directly to the linker, rather than defining it in the assembly code.
END	.end	Marks the end of the assembly file.

Related information

GNU Binutils - Using as: .type

GNU Binutils - Using as: .warning

GNU Binutils - Using as: .equ

GNU Binutils - Using as: .global

GNU Binutils - Using as: .include

GNU Binutils - Using as: .incbin

armasm User Guide: ENTRY

armasm User Guide: END

armasm User Guide: INFO

armasm User Guide: EXPORT or GLOBAL

armlink User Guide: --entry

5.16 Symbol definition directives

Symbol definition directives declare and set arithmetic, logical, or string variables.

The following table shows how to translate *armasm* syntax symbol definition directives to GNU syntax directives:

————— **Note** —————

This list only contains examples of common symbol definition directives. It is not exhaustive.

Table 5-6 Symbol definition directives translation

armasm syntax directive	GNU syntax directive	Description
LCLA var	No GNU equivalent	Declare a local arithmetic variable, and initialize its value to 0.
LCLL var	No GNU equivalent	Declare a local logical variable, and initialize its value to FALSE.
LCLS var	No GNU equivalent	Declare a local string variable, and initialize its value to a null string.
No <i>armasm</i> equivalent	.set var, 0	Declare a static arithmetic variable, and initialize its value to 0.
No <i>armasm</i> equivalent	.set var, FALSE	Declare a static logical variable, and initialize its value to FALSE.
No <i>armasm</i> equivalent	.set var, ""	Declare a static string variable, and initialize its value to a null string.
GBLA var	.global var .set var, 0	Declare a global arithmetic variable, and initialize its value to 0.
GBLL var	.global var .set var, FALSE	Declare a global logical variable, and initialize its value to FALSE.
GBLS var	.global var .set var, ""	Declare a global string variable, and initialize its value to a null string.
var SETA expr	.set var, expr	Set the value of an arithmetic variable.
var SETL expr	.set var, expr	Set the value of a logical variable.
var SETS expr	.set var, expr	Set the value of a string variable.
foo RN 11	foo .req r11	Define an alias foo for register R11.

Table 5-6 Symbol definition directives translation (continued)

armasm syntax directive	GNU syntax directive	Description
foo QN q5.I32 VADD foo, foo, foo	foo .req q5 VADD.I32 foo, foo, foo	Define an I32-typed alias <code>foo</code> for the quad-precision register Q5. When using the <i>armasm</i> syntax, you can specify a typed alias for quad-precision registers. The example defines an I32-typed alias <code>foo</code> for the quad-precision register Q5. When using GNU syntax, you must specify the type on the instruction rather than on the register. The example specifies the I32 type on the VADD instruction.
foo DN d2.I32 VADD foo, foo, foo	foo .req d2 VADD.I32 foo, foo, foo	Define an I32-typed alias <code>foo</code> for the double-precision register D2. When using the <i>armasm</i> syntax, you can specify a typed alias for double-precision registers. The example defines an I32-typed alias <code>foo</code> for the double-precision register D2. When using GNU syntax, you must specify the type on the instruction rather than on the register. The example specifies the I32 type on the VADD instruction.

Related information

GNU Binutils - Using as: ARM Machine Directives

GNU Binutils - Using as: .global

GNU Binutils - Using as: .set

Appendix A

Code Examples

Provides source code examples for Arm Compiler 5 and Arm Compiler 6.

It contains the following sections:

- [A.1 Example startup code for Arm® Compiler 5 project on page Appx-A-87.](#)
- [A.2 Example startup code for Arm® Compiler 6 project on page Appx-A-89.](#)

A.1 Example startup code for Arm® Compiler 5 project

This is an example startup code that compiles without errors using Arm Compiler 5.

This code has been modified to demonstrate migration from Arm Compiler 5 to Arm Compiler 6. This code requires other modifications for use in a real application.

startup_ac5.c:

```

/*
 * Copyright (c) 2009-2017 ARM Limited. All rights reserved.
 *
 * SPDX-License-Identifier: Apache-2.0
 *
 * Licensed under the Apache License, Version 2.0 (the License); you may
 * not use this file except in compliance with the License.
 * You may obtain a copy of the License at
 *
 * www.apache.org/licenses/LICENSE-2.0
 *
 * Unless required by applicable law or agreed to in writing, software
 * distributed under the License is distributed on an AS IS BASIS, WITHOUT
 * WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied.
 * See the license for the specific language governing permissions and
 * limitations under the License.
 */

/*-----
  Definitions
  -----*/
#define USR_MODE 0x10           // User mode
#define FIQ_MODE 0x11          // Fast Interrupt Request mode
#define IRQ_MODE 0x12          // Interrupt Request mode
#define SVC_MODE 0x13          // Supervisor mode
#define ABT_MODE 0x17          // Abort mode
#define UND_MODE 0x1B          // Undefined Instruction mode
#define SYS_MODE 0x1F          // System mode

/*-----
  Internal References
  -----*/
void Vectors      (void) __attribute__((section("RESET")));
void Reset_Handler(void);
extern int printf(const char *format, ...);

__declspec(noreturn) void main (void)
{
    __enable_irq();
    printf("Starting main\n");
    while(1);
}
#pragma import (__use_no_semihosting)

/*-----
  Exception / Interrupt Handler
  -----*/
void Undef_Handler (void) __attribute__((weak, alias("Default_Handler")));
void SVC_Handler   (void) __attribute__((weak, alias("Default_Handler")));
void PAbt_Handler  (void) __attribute__((weak, alias("Default_Handler")));
void DAbt_Handler  (void) __attribute__((weak, alias("Default_Handler")));
void IRQ_Handler   (void) __attribute__((weak, alias("Default_Handler")));
void FIQ_Handler   (void) __attribute__((weak, alias("Default_Handler")));

/*-----
  Exception / Interrupt Vector Table
  -----*/
__asm void Vectors(void) {
    IMPORT Undef_Handler
    IMPORT SVC_Handler
    IMPORT PAbt_Handler
    IMPORT DAbt_Handler
    IMPORT IRQ_Handler
    IMPORT FIQ_Handler
    LDR    PC, =Reset_Handler
    LDR    PC, =Undef_Handler
    LDR    PC, =SVC_Handler
    LDR    PC, =PAbt_Handler
    LDR    PC, =DAbt_Handler
    NOP
    LDR    PC, =IRQ_Handler

```

```

LDR    PC, =FIQ_Handler
}

/*-----
Reset Handler called on controller reset
*-----*/
__asm void Reset_Handler(void) {

// Mask interrupts
CPSID  if

// Put any cores other than 0 to sleep
MRC    p15, 0, R0, c0, c0, 5    // Read MPIDR
ANDS   R0, R0, #3
goToSleep
WFINE
BNE    goToSleep

// Reset SCTL Settings
MRC    p15, 0, R0, c1, c0, 0    // Read CP15 System Control register
BIC    R0, R0, #(0x1 << 12)    // Clear I bit 12 to disable I Cache
BIC    R0, R0, #(0x1 << 2)     // Clear C bit 2 to disable D Cache
BIC    R0, R0, #0x1            // Clear M bit 0 to disable MMU
BIC    R0, R0, #(0x1 << 11)    // Clear Z bit 11 to disable branch prediction
BIC    R0, R0, #(0x1 << 13)    // Clear V bit 13 to disable hivecs
MCR    p15, 0, R0, c1, c0, 0    // Write value back to CP15 System Control register
ISB

// Configure ACTLR
MRC    p15, 0, r0, c1, c0, 1    // Read CP15 Auxiliary Control Register
ORR    r0, r0, #(1 << 1)       // Enable L2 prefetch hint (UNK/WI since r4p1)
MCR    p15, 0, r0, c1, c0, 1    // Write CP15 Auxiliary Control Register

// Set Vector Base Address Register (VBAR) to point to this application's vector table
LDR    R0, =Vectors
MCR    p15, 0, R0, c12, c0, 0

// Setup Stack for each exceptional mode
IMPORT |Image$$FIQ_STACK$$ZI$$Limit|
IMPORT |Image$$IRQ_STACK$$ZI$$Limit|
IMPORT |Image$$SVC_STACK$$ZI$$Limit|
IMPORT |Image$$ABT_STACK$$ZI$$Limit|
IMPORT |Image$$UND_STACK$$ZI$$Limit|
IMPORT |Image$$ARM_LIB_STACK$$ZI$$Limit|
CPS    #0x11
LDR    SP, =|Image$$FIQ_STACK$$ZI$$Limit|
CPS    #0x12
LDR    SP, =|Image$$IRQ_STACK$$ZI$$Limit|
CPS    #0x13
LDR    SP, =|Image$$SVC_STACK$$ZI$$Limit|
CPS    #0x17
LDR    SP, =|Image$$ABT_STACK$$ZI$$Limit|
CPS    #0x1B
LDR    SP, =|Image$$UND_STACK$$ZI$$Limit|
CPS    #0x1F
LDR    SP, =|Image$$ARM_LIB_STACK$$ZI$$Limit|

// Call SystemInit
IMPORT SystemInit
BL     SystemInit

// Unmask interrupts
CPSIE  if

// Call main
IMPORT main
BL     main

}

/*-----
Default Handler for Exceptions / Interrupts
*-----*/
void Default_Handler(void) {
    while(1);
}

```

A.2 Example startup code for Arm® Compiler 6 project

This is an example startup code that compiles without errors using Arm Compiler 6.

This code has been modified to demonstrate migration from Arm Compiler 5 to Arm Compiler 6. This code requires other modifications for use in a real application.

startup_ac6.c:

```

/*
 * Copyright (c) 2009-2017 ARM Limited. All rights reserved.
 *
 * SPDX-License-Identifier: Apache-2.0
 *
 * Licensed under the Apache License, Version 2.0 (the License); you may
 * not use this file except in compliance with the License.
 * You may obtain a copy of the License at
 *
 * www.apache.org/licenses/LICENSE-2.0
 *
 * Unless required by applicable law or agreed to in writing, software
 * distributed under the License is distributed on an AS IS BASIS, WITHOUT
 * WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied.
 * See the license for the specific language governing permissions and
 * limitations under the License.
 */

/*-----
 * Definitions
 *-----*/
#define USR_MODE 0x10          // User mode
#define FIQ_MODE 0x11         // Fast Interrupt Request mode
#define IRQ_MODE 0x12         // Interrupt Request mode
#define SVC_MODE 0x13         // Supervisor mode
#define ABT_MODE 0x17         // Abort mode
#define UND_MODE 0x1B         // Undefined Instruction mode
#define SYS_MODE 0x1F         // System mode

/*-----
 * Internal References
 *-----*/
void Vectors (void) __attribute__((naked, section("RESET")));
void Reset_Handler (void) __attribute__((naked));
extern int printf(const char *format, ...);

__declspec(noreturn) int main (void)
{
    __asm("CPSIE i");
    printf("Starting main\n");
    while(1) __asm volatile("");
}
__asm(".global __use_no_semihosting");

/*-----
 * Exception / Interrupt Handler
 *-----*/
void Undef_Handler (void) __attribute__((weak, alias("Default_Handler")));
void SVC_Handler (void) __attribute__((weak, alias("Default_Handler")));
void PAbt_Handler (void) __attribute__((weak, alias("Default_Handler")));
void DAbt_Handler (void) __attribute__((weak, alias("Default_Handler")));
void IRQ_Handler (void) __attribute__((weak, alias("Default_Handler")));
void FIQ_Handler (void) __attribute__((weak, alias("Default_Handler")));

/*-----
 * Exception / Interrupt Vector Table
 *-----*/
void Vectors(void) {
    __asm volatile(
        "LDR    PC, =Reset_Handler          \n"
        "LDR    PC, =Undef_Handler          \n"
        "LDR    PC, =SVC_Handler            \n"
        "LDR    PC, =PAbt_Handler           \n"
        "LDR    PC, =DAbt_Handler           \n"
        "NOP                                     \n"
        "LDR    PC, =IRQ_Handler             \n"
        "LDR    PC, =FIQ_Handler            \n"
    );
}

/*-----
 * Reset Handler called on controller reset
 */

```

```

*-----*/
void Reset_Handler(void) {
    __asm volatile(

        // Mask interrupts
        "CPSID  if                                \n"

        // Put any cores other than 0 to sleep
        "MRC    p15, 0, R0, c0, c0, 5           \n" // Read MPIDR
        "ANDS   R0, R0, #3                       \n"
        "goToSleep:
        "WFINE  \n"
        "BNE    goToSleep                       \n"

        // Reset SCTLR Settings
        "MRC    p15, 0, R0, c1, c0, 0           \n" // Read CP15 System Control register
        "BIC    R0, R0, #(0x1 << 12)          \n" // Clear I bit 12 to disable I Cache
        "BIC    R0, R0, #(0x1 << 2)            \n" // Clear C bit 2 to disable D Cache
        "BIC    R0, R0, #0x1                    \n" // Clear M bit 0 to disable MMU
        "BIC    R0, R0, #(0x1 << 11)          \n" // Clear Z bit 11 to disable branch
        prediction
        "BIC    R0, R0, #(0x1 << 13)          \n" // Clear V bit 13 to disable hivescs
        "MCR    p15, 0, R0, c1, c0, 0           \n" // Write value back to CP15 System
        Control register
        "ISB                                     \n"

        // Configure ACTLR
        "MRC    p15, 0, r0, c1, c0, 1           \n" // Read CP15 Auxiliary Control
        Register
        "ORR    r0, r0, #(1 << 1)              \n" // Enable L2 prefetch hint (UNK/WI
        since r4p1)
        "MCR    p15, 0, r0, c1, c0, 1           \n" // Write CP15 Auxiliary Control
        Register

        // Set Vector Base Address Register (VBAR) to point to this application's vector table
        "LDR    R0, =Vectors                      \n"
        "MCR    p15, 0, R0, c12, c0, 0           \n"

        // Setup Stack for each exceptional mode
        "CPS    #0x11                             \n"
        "LDR    SP, =Image$$FIQ_STACK$$ZI$Limit  \n"
        "CPS    #0x12                             \n"
        "LDR    SP, =Image$$IRQ_STACK$$ZI$Limit  \n"
        "CPS    #0x13                             \n"
        "LDR    SP, =Image$$SVC_STACK$$ZI$Limit  \n"
        "CPS    #0x17                             \n"
        "LDR    SP, =Image$$ABT_STACK$$ZI$Limit  \n"
        "CPS    #0x1B                             \n"
        "LDR    SP, =Image$$UND_STACK$$ZI$Limit  \n"
        "CPS    #0x1F                             \n"
        "LDR    SP, =Image$$ARM_LIB_STACK$$ZI$Limit \n"

        // Call SystemInit
        "BL    SystemInit                        \n"

        // Unmask interrupts
        "CPSIE  if                                \n"

        // Call main
        "BL    main                               \n"
    );
}

/*-----*/
Default_Handler for Exceptions / Interrupts
*-----*/
void Default_Handler(void) {
    while(1);
}

```

Appendix B

Licenses

Describes the Apache license.

It contains the following section:

- [B.1 Apache License on page Appx-B-92.](#)

B.1 Apache License

Version 2.0, January 2004

<http://www.apache.org/licenses/>

TERMS AND CONDITIONS FOR USE, REPRODUCTION, AND DISTRIBUTION

1. Definitions.

"License" shall mean the terms and conditions for use, reproduction, and distribution as defined by Sections 1 through 9 of this document.

"Licensor" shall mean the copyright owner or entity authorized by the copyright owner that is granting the License.

"Legal Entity" shall mean the union of the acting entity and all other entities that control, are controlled by, or are under common control with that entity. For the purposes of this definition, "control" means (i) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (ii) ownership of fifty percent (50%) or more of the outstanding shares, or (iii) beneficial ownership of such entity.

"You" (or "Your") shall mean an individual or Legal Entity exercising permissions granted by this License.

"Source" form shall mean the preferred form for making modifications, including but not limited to software source code, documentation source, and configuration files.

"Object" form shall mean any form resulting from mechanical transformation or translation of a Source form, including but not limited to compiled object code, generated documentation, and conversions to other media types.

"Work" shall mean the work of authorship, whether in Source or Object form, made available under the License, as indicated by a copyright notice that is included in or attached to the work (an example is provided in the Appendix below).

"Derivative Works" shall mean any work, whether in Source or Object form, that is based on (or derived from) the Work and for which the editorial revisions, annotations, elaborations, or other modifications represent, as a whole, an original work of authorship. For the purposes of this License, Derivative Works shall not include works that remain separable from, or merely link (or bind by name) to the interfaces of, the Work and Derivative Works thereof.

"Contribution" shall mean any work of authorship, including the original version of the Work and any modifications or additions to that Work or Derivative Works thereof, that is intentionally submitted to Licensor for inclusion in the Work by the copyright owner or by an individual or Legal Entity authorized to submit on behalf of the copyright owner. For the purposes of this definition, "submitted" means any form of electronic, verbal, or written communication sent to the Licensor or its representatives, including but not limited to communication on electronic mailing lists, source code control systems, and issue tracking systems that are managed by, or on behalf of, the Licensor for the purpose of discussing and improving the Work, but excluding communication that is conspicuously marked or otherwise designated in writing by the copyright owner as "Not a Contribution."

"Contributor" shall mean Licensor and any individual or Legal Entity on behalf of whom a Contribution has been received by Licensor and subsequently incorporated within the Work.

2. Grant of Copyright License.

Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable copyright license to reproduce, prepare Derivative Works of, publicly display, publicly perform, sublicense, and distribute the Work and such Derivative Works in Source or Object form.

3. Grant of Patent License.

Subject to the terms and conditions of this License, each Contributor hereby grants to You a perpetual, worldwide, non-exclusive, no-charge, royalty-free, irrevocable (except as stated in this section) patent license to make, have made, use, offer to sell, sell, import, and otherwise transfer the Work, where such license applies only to those patent claims licensable by such Contributor that are necessarily infringed by their Contribution(s) alone or by combination of their Contribution(s) with the Work to which such Contribution(s) was submitted. If You institute patent litigation against any entity (including a cross-claim or counterclaim in a lawsuit) alleging that the Work or a Contribution incorporated within the Work constitutes direct or contributory patent infringement, then any patent licenses granted to You under this License for that Work shall terminate as of the date such litigation is filed.

4. Redistribution.

You may reproduce and distribute copies of the Work or Derivative Works thereof in any medium, with or without modifications, and in Source or Object form, provided that You meet the following conditions:

- a. You must give any other recipients of the Work or Derivative Works a copy of this License; and
- b. You must cause any modified files to carry prominent notices stating that You changed the files; and
- c. You must retain, in the Source form of any Derivative Works that You distribute, all copyright, patent, trademark, and attribution notices from the Source form of the Work, excluding those notices that do not pertain to any part of the Derivative Works; and
- d. If the Work includes a "NOTICE" text file as part of its distribution, then any Derivative Works that You distribute must include a readable copy of the attribution notices contained within such NOTICE file, excluding those notices that do not pertain to any part of the Derivative Works, in at least one of the following places: within a NOTICE text file distributed as part of the Derivative Works; within the Source form or documentation, if provided along with the Derivative Works; or, within a display generated by the Derivative Works, if and wherever such third-party notices normally appear. The contents of the NOTICE file are for informational purposes only and do not modify the License. You may add Your own attribution notices within Derivative Works that You distribute, alongside or as an addendum to the NOTICE text from the Work, provided that such additional attribution notices cannot be construed as modifying the License.

You may add Your own copyright statement to Your modifications and may provide additional or different license terms and conditions for use, reproduction, or distribution of Your modifications, or for any such Derivative Works as a whole, provided Your use, reproduction, and distribution of the Work otherwise complies with the conditions stated in this License.

5. Submission of Contributions.

Unless You explicitly state otherwise, any Contribution intentionally submitted for inclusion in the Work by You to the Licensor shall be under the terms and conditions of this License, without any additional terms or conditions. Notwithstanding the above, nothing herein shall supersede or modify the terms of any separate license agreement you may have executed with Licensor regarding such Contributions.

6. Trademarks.

This License does not grant permission to use the trade names, trademarks, service marks, or product names of the Licensor, except as required for reasonable and customary use in describing the origin of the Work and reproducing the content of the NOTICE file.

7. Disclaimer of Warranty.

Unless required by applicable law or agreed to in writing, Licensor provides the Work (and each Contributor provides its Contributions) on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied, including, without limitation, any warranties or conditions of TITLE, NON-INFRINGEMENT, MERCHANTABILITY, or FITNESS FOR A PARTICULAR PURPOSE. You are solely responsible for determining the appropriateness of using or redistributing the Work and assume any risks associated with Your exercise of permissions under this License.

8. Limitation of Liability.

In no event and under no legal theory, whether in tort (including negligence), contract, or otherwise, unless required by applicable law (such as deliberate and grossly negligent acts) or agreed to in writing, shall any Contributor be liable to You for damages, including any direct, indirect, special, incidental, or consequential damages of any character arising as a result of this License or out of the use or inability to use the Work (including but not limited to damages for loss of goodwill, work stoppage, computer failure or malfunction, or any and all other commercial damages or losses), even if such Contributor has been advised of the possibility of such damages.

9. Accepting Warranty or Additional Liability.

While redistributing the Work or Derivative Works thereof, You may choose to offer, and charge a fee for, acceptance of support, warranty, indemnity, or other liability obligations and/or rights consistent with this License. However, in accepting such obligations, You may act only on Your own behalf and on Your sole responsibility, not on behalf of any other Contributor, and only if You agree to indemnify, defend, and hold each Contributor harmless for any liability incurred by, or claims asserted against, such Contributor by reason of your accepting any such warranty or additional liability.

END OF TERMS AND CONDITIONS

APPENDIX: HOW TO APPLY THE APACHE LICENSE TO YOUR WORK

To apply the Apache License to your work, attach the following boilerplate notice, with the fields enclosed by brackets "[]" replaced with your own identifying information. (Don't include the brackets!) The text should be enclosed in the appropriate comment syntax for the file format. We also recommend that a file or class name and description of purpose be included on the same "printed page" as the copyright notice for easier identification within third-party archives.

```
Copyright [yyyy] [name of copyright owner]

Licensed under the Apache License, Version 2.0 (the "License");
you may not use this file except in compliance with the License.
You may obtain a copy of the License at

    http://www.apache.org/licenses/LICENSE-2.0

Unless required by applicable law or agreed to in writing, software
distributed under the license is distributed on an "AS IS" BASIS,
WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied.
See the License for the specific language governing permissions and
limitations under the License.
```