

ARM[®] Compiler

Version 6.4

armclang Reference Guide

ARM[®]

ARM® Compiler

armclang Reference Guide

Copyright © 2014-2016 ARM. All rights reserved.

Release Information

Document History

Issue	Date	Confidentiality	Change
A	14 March 2014	Non-Confidential	ARM Compiler v6.00 Release
B	15 December 2014	Non-Confidential	ARM Compiler v6.01 Release
C	30 June 2015	Non-Confidential	ARM Compiler v6.02 Release
D	18 November 2015	Non-Confidential	ARM Compiler v6.3 Release
E	24 February 2016	Non-Confidential	ARM Compiler v6.4 Release

Non-Confidential Proprietary Notice

This document is protected by copyright and other related rights and the practice or implementation of the information contained in this document may be protected by one or more patents or pending patent applications. No part of this document may be reproduced in any form by any means without the express prior written permission of ARM. **No license, express or implied, by estoppel or otherwise to any intellectual property rights is granted by this document unless specifically stated.**

Your access to the information in this document is conditional upon your acceptance that you will not use or permit others to use the information for the purposes of determining whether implementations infringe any third party patents.

THIS DOCUMENT IS PROVIDED “AS IS”. ARM PROVIDES NO REPRESENTATIONS AND NO WARRANTIES, EXPRESS, IMPLIED OR STATUTORY, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTORY QUALITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO THE DOCUMENT. For the avoidance of doubt, ARM makes no representation with respect to, and has undertaken no analysis to identify or understand the scope and content of, third party patents, copyrights, trade secrets, or other rights.

This document may include technical inaccuracies or typographical errors.

TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT WILL ARM BE LIABLE FOR ANY DAMAGES, INCLUDING WITHOUT LIMITATION ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED AND REGARDLESS OF THE THEORY OF LIABILITY, ARISING OUT OF ANY USE OF THIS DOCUMENT, EVEN IF ARM HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

This document consists solely of commercial items. You shall be responsible for ensuring that any use, duplication or disclosure of this document complies fully with any relevant export laws and regulations to assure that this document or any portion thereof is not exported, directly or indirectly, in violation of such export laws. Use of the word “partner” in reference to ARM’s customers is not intended to create or refer to any partnership relationship with any other company. ARM may make changes to this document at any time and without notice.

If any of the provisions contained in these terms conflict with any of the provisions of any signed written agreement covering this document with ARM, then the signed written agreement prevails over and supersedes the conflicting provisions of these terms. This document may be translated into other languages for convenience, and you agree that if there is any conflict between the English version of this document and any translation, the terms of the English version of the Agreement shall prevail.

Words and logos marked with ® or ™ are registered trademarks or trademarks of ARM Limited or its affiliates in the EU and/or elsewhere. All rights reserved. Other brands and names mentioned in this document may be the trademarks of their respective owners. Please follow ARM’s trademark usage guidelines at <http://www.arm.com/about/trademark-usage-guidelines.php>

Copyright © [2014-2016], ARM Limited or its affiliates. All rights reserved.

ARM Limited. Company 02557590 registered in England.

110 Fulbourn Road, Cambridge, England CB1 9NJ.

LES-PRE-20349

Additional Notices

Some material in this document is based on IEEE 754-1985 IEEE Standard for Binary Floating-Point Arithmetic. The IEEE disclaims any responsibility or liability resulting from the placement and use in the described manner.

Confidentiality Status

This document is Non-Confidential. The right to use, copy and disclose this document may be subject to license restrictions in accordance with the terms of the agreement entered into by ARM and the party that ARM delivered this document to.

Unrestricted Access is an ARM internal classification.

Product Status

The information in this document is Final, that is for a developed product.

Web Address

<http://www.arm.com>

Contents

ARM® Compiler armclang Reference Guide

Preface

About this book	10
-----------------------	----

Chapter 1

Compiler Command-line Options

1.1	Support level definitions	1-14
1.2	-c	1-17
1.3	-D	1-18
1.4	-E	1-19
1.5	-e	1-20
1.6	-fbare-metal-pie	1-21
1.7	-fcommon, -fno-common	1-22
1.8	-ffast-math	1-23
1.9	-ffunction-sections	1-24
1.10	@file	1-25
1.11	-fldm-stm, -fno-ldm-stm	1-26
1.12	-fno-inline-functions	1-27
1.13	-flto [ALPHA]	1-28
1.14	-fno-exceptions	1-29
1.15	-fropi, -fno-ropi [BETA]	1-30
1.16	-fropi-lowering, -fno-ropi-lowering [BETA]	1-31
1.17	-frwpi, -fno-rwpi [BETA]	1-32
1.18	-frwpi-lowering, -fno-rwpi-lowering [BETA]	1-33
1.19	-fshort-enums, -fno-short-enums	1-34

1.20	<code>-fshort-wchar, -fno-short-wchar</code>	1-36
1.21	<code>-fvectorize, -fno-vectorize</code>	1-37
1.22	<code>-g, -gdwarf-2, -gdwarf-3, -gdwarf-4,</code>	1-38
1.23	<code>-I</code>	1-39
1.24	<code>-include</code>	1-40
1.25	<code>-L</code>	1-41
1.26	<code>-I</code>	1-42
1.27	<code>-M, -MM</code>	1-43
1.28	<code>-MD, -MMD</code>	1-44
1.29	<code>-MF</code>	1-45
1.30	<code>-MG</code>	1-46
1.31	<code>-MP</code>	1-47
1.32	<code>-MT</code>	1-48
1.33	<code>-march</code>	1-49
1.34	<code>-marm</code>	1-51
1.35	<code>-mbig-endian</code>	1-52
1.36	<code>-mcmse</code>	1-53
1.37	<code>-mcpu</code>	1-54
1.38	<code>-mexecute-only</code>	1-56
1.39	<code>-mfloat-abi</code>	1-57
1.40	<code>-mfpu</code>	1-58
1.41	<code>-mlittle-endian</code>	1-60
1.42	<code>-munaligned-access, -mno-unaligned-access</code>	1-61
1.43	<code>-mthumb</code>	1-62
1.44	<code>-o</code>	1-63
1.45	<code>-O</code>	1-64
1.46	<code>-S</code>	1-65
1.47	<code>-std</code>	1-66
1.48	<code>--target</code>	1-67
1.49	<code>-U</code>	1-68
1.50	<code>-u</code>	1-69
1.51	<code>-v</code>	1-70
1.52	<code>--version</code>	1-71
1.53	<code>--version_number</code>	1-72
1.54	<code>--vsn</code>	1-73
1.55	<code>-W</code>	1-74
1.56	<code>-WI</code>	1-75
1.57	<code>-Xlinker</code>	1-76
1.58	<code>-x</code>	1-77
1.59	<code>###</code>	1-78

Chapter 2

Compiler-specific Keywords and Operators

2.1	Compiler-specific keywords and operators	2-80
2.2	<code>__alignof__</code>	2-81
2.3	<code>__asm</code>	2-83
2.4	<code>__declspec attributes</code>	2-84
2.5	<code>__declspec(noinline)</code>	2-85
2.6	<code>__declspec(noreturn)</code>	2-86
2.7	<code>__declspec(nothrow)</code>	2-87
2.8	<code>__inline</code>	2-88

Chapter 3

Compiler-specific Function, Variable, and Type Attributes

3.1	Function attributes	3-91
3.2	<code>__attribute__((always_inline))</code> function attribute	3-93
3.3	<code>__attribute__((cmse_nonsecure_call))</code> function attribute	3-94
3.4	<code>__attribute__((cmse_nonsecure_entry))</code> function attribute	3-95
3.5	<code>__attribute__((const))</code> function attribute	3-96
3.6	<code>__attribute__((constructor[[priority]]))</code> function attribute	3-97
3.7	<code>__attribute__((format_arg(string-index)))</code> function attribute	3-98
3.8	<code>__attribute__((malloc))</code> function attribute	3-99
3.9	<code>__attribute__((noinline))</code> function attribute	3-100
3.10	<code>__attribute__((nonnull))</code> function attribute	3-101
3.11	<code>__attribute__((noreturn))</code> function attribute	3-102
3.12	<code>__attribute__((nothrow))</code> function attribute	3-103
3.13	<code>__attribute__((pcs("calling_convention")))</code> function attribute	3-104
3.14	<code>__attribute__((pure))</code> function attribute	3-105
3.15	<code>__attribute__((section("name")))</code> function attribute	3-106
3.16	<code>__attribute__((used))</code> function attribute	3-107
3.17	<code>__attribute__((unused))</code> function attribute	3-108
3.18	<code>__attribute__((visibility("visibility_type")))</code> function attribute	3-109
3.19	<code>__attribute__((weak))</code> function attribute	3-110
3.20	<code>__attribute__((weakref("target")))</code> function attribute	3-111
3.21	Type attributes	3-112
3.22	<code>__attribute__((aligned))</code> type attribute	3-113
3.23	<code>__attribute__((packed))</code> type attribute	3-114
3.24	<code>__attribute__((transparent_union))</code> type attribute	3-115
3.25	Variable attributes	3-116
3.26	<code>__attribute__((alias))</code> variable attribute	3-117
3.27	<code>__attribute__((aligned))</code> variable attribute	3-118
3.28	<code>__attribute__((deprecated))</code> variable attribute	3-119
3.29	<code>__attribute__((packed))</code> variable attribute	3-120
3.30	<code>__attribute__((section("name")))</code> variable attribute	3-121
3.31	<code>__attribute__((used))</code> variable attribute	3-122
3.32	<code>__attribute__((unused))</code> variable attribute	3-123
3.33	<code>__attribute__((weak))</code> variable attribute	3-124
3.34	<code>__attribute__((weakref("target")))</code> variable attribute	3-125

Chapter 4

Compiler-specific Pragmas

4.1	<code>#pragma clang system_header</code>	4-127
4.2	<code>#pragma clang diagnostic</code>	4-128
4.3	<code>#pragma once</code>	4-130
4.4	<code>#pragma pack(n)</code>	4-131
4.5	<code>#pragma unroll[[n]]</code> , <code>#pragma unroll_completely</code>	4-133
4.6	<code>#pragma weak symbol</code> , <code>#pragma weak symbol1 = symbol2</code>	4-134

Chapter 5

Other Compiler-specific Features

5.1	Predefined macros	5-136
5.2	Inline functions	5-141
5.3	Half-precision floating-point number format	5-142
5.4	TT instruction intrinsics	5-143
5.5	Non-secure function pointer intrinsics	5-146

List of Figures

ARM® Compiler armclang Reference Guide

<i>Figure 1-1</i>	<i>Integration boundaries in ARM Compiler 6.</i>	<i>1-15</i>
<i>Figure 4-1</i>	<i>Nonpacked structure S 4-131</i>	<i>4-131</i>
<i>Figure 4-2</i>	<i>Packed structure SP 4-131</i>	<i>4-131</i>
<i>Figure 5-1</i>	<i>IEEE half-precision floating-point format 5-142</i>	<i>5-142</i>

List of Tables

ARM® Compiler armclang Reference Guide

<i>Table 1-1</i>	<i>Compiling without the -o option</i>	<i>1-63</i>
<i>Table 3-1</i>	<i>Function attributes that the compiler supports, and their equivalents</i>	<i>3-91</i>
<i>Table 5-1</i>	<i>Predefined macros</i>	<i>5-136</i>

Preface

This preface introduces the *ARM® Compiler armclang Reference Guide*.

It contains the following:

- [About this book on page 10](#).

About this book

The ARM® Compiler armclang Reference Guide provides user information for the ARM compiler, armclang. armclang is an optimizing C and C++ compiler that compiles Standard C and Standard C++ source code into machine code for ARM architecture-based processors.

Using this book

This book is organized into the following chapters:

Chapter 1 Compiler Command-line Options

This chapter summarizes the supported options used with armclang.

Chapter 2 Compiler-specific Keywords and Operators

Summarizes the compiler-specific keywords and operators that are extensions to the C and C++ Standards.

Chapter 3 Compiler-specific Function, Variable, and Type Attributes

Summarizes the compiler-specific function, variable, and type attributes that are extensions to the C and C++ Standards.

Chapter 4 Compiler-specific Pragmas

Summarizes the ARM compiler-specific pragmas that are extensions to the C and C++ Standards.

Chapter 5 Other Compiler-specific Features

Summarizes compiler-specific features that are extensions to the C and C++ Standards, such as predefined macros.

Glossary

The ARM Glossary is a list of terms used in ARM documentation, together with definitions for those terms. The ARM Glossary does not contain terms that are industry standard unless the ARM meaning differs from the generally accepted meaning.

See the [ARM Glossary](#) for more information.

Typographic conventions

italic

Introduces special terminology, denotes cross-references, and citations.

bold

Highlights interface elements, such as menu names. Denotes signal names. Also used for terms in descriptive lists, where appropriate.

monospace

Denotes text that you can enter at the keyboard, such as commands, file and program names, and source code.

monospace

Denotes a permitted abbreviation for a command or option. You can enter the underlined text instead of the full command or option name.

monospace italic

Denotes arguments to monospace text where the argument is to be replaced by a specific value.

monospace bold

Denotes language keywords when used outside example code.

<and>

Encloses replaceable terms for assembler syntax where they appear in code or code fragments. For example:

```
MRC p15, 0, <Rd>, <CRn>, <CRm>, <Opcode_2>
```

SMALL CAPITALS

Used in body text for a few terms that have specific technical meanings, that are defined in the *ARM glossary*. For example, IMPLEMENTATION DEFINED, IMPLEMENTATION SPECIFIC, UNKNOWN, and UNPREDICTABLE.

Feedback

Feedback on this product

If you have any comments or suggestions about this product, contact your supplier and give:

- The product name.
- The product revision or version.
- An explanation with as much information as you can provide. Include symptoms and diagnostic procedures if appropriate.

Feedback on content

If you have comments on content then send an e-mail to errata@arm.com. Give:

- The title *ARM® Compiler armclang Reference Guide*.
- The number ARM DUI0774E.
- If applicable, the page number(s) to which your comments refer.
- A concise explanation of your comments.

ARM also welcomes general suggestions for additions and improvements.

————— **Note** —————

ARM tests the PDF only in Adobe Acrobat and Acrobat Reader, and cannot guarantee the quality of the represented document when used with any other PDF reader.

Other information

- [ARM Information Center](#).
- [ARM Technical Support Knowledge Articles](#).
- [Support and Maintenance](#).
- [ARM Glossary](#).

Chapter 1

Compiler Command-line Options

This chapter summarizes the supported options used with `armclang`.

`armclang` provides many command-line options, including most Clang command-line options in addition to a number of ARM-specific options. Additional information about community feature command-line options is available in the Clang and LLVM documentation on the LLVM Compiler Infrastructure Project web site, <http://Llvm.org>.

Note

Be aware of the following:

- Generated code might be different between two ARM® Compiler releases.
 - For a feature release, there might be significant code generation differences.
-

It contains the following sections:

- [1.1 Support level definitions](#) on page 1-14.
- [1.2 -c](#) on page 1-17.
- [1.3 -D](#) on page 1-18.
- [1.4 -E](#) on page 1-19.
- [1.5 -e](#) on page 1-20.
- [1.6 -fbare-metal-pie](#) on page 1-21.
- [1.7 -fcommon, -fno-common](#) on page 1-22.
- [1.8 -ffast-math](#) on page 1-23.
- [1.9 -ffunction-sections](#) on page 1-24.
- [1.10 @file](#) on page 1-25.
- [1.11 -fldm-stm, -fno-ldm-stm](#) on page 1-26.
- [1.12 -fno-inline-functions](#) on page 1-27.
- [1.13 -flto \[ALPHA\]](#) on page 1-28.

- 1.14 *-fno-exceptions* on page 1-29.
- 1.15 *-fropi*, *-fno-ropi [BETA]* on page 1-30.
- 1.16 *-fropi-lowering*, *-fno-ropi-lowering [BETA]* on page 1-31.
- 1.17 *-frwpi*, *-fno-rwpi [BETA]* on page 1-32.
- 1.18 *-frwpi-lowering*, *-fno-rwpi-lowering [BETA]* on page 1-33.
- 1.19 *-fshort-enums*, *-fno-short-enums* on page 1-34.
- 1.20 *-fshort-wchar*, *-fno-short-wchar* on page 1-36.
- 1.21 *-fvectorize*, *-fno-vectorize* on page 1-37.
- 1.22 *-g*, *-gdwarf-2*, *-gdwarf-3*, *-gdwarf-4*, on page 1-38.
- 1.23 *-I* on page 1-39.
- 1.24 *-include* on page 1-40.
- 1.25 *-L* on page 1-41.
- 1.26 *-l* on page 1-42.
- 1.27 *-M*, *-MM* on page 1-43.
- 1.28 *-MD*, *-MMD* on page 1-44.
- 1.29 *-MF* on page 1-45.
- 1.30 *-MG* on page 1-46.
- 1.31 *-MP* on page 1-47.
- 1.32 *-MT* on page 1-48.
- 1.33 *-march* on page 1-49.
- 1.34 *-marm* on page 1-51.
- 1.35 *-mbig-endian* on page 1-52.
- 1.36 *-mcmse* on page 1-53.
- 1.37 *-mcpu* on page 1-54.
- 1.38 *-mexecute-only* on page 1-56.
- 1.39 *-mfloat-abi* on page 1-57.
- 1.40 *-mfpu* on page 1-58.
- 1.41 *-mlittle-endian* on page 1-60.
- 1.42 *-munaligned-access*, *-mno-unaligned-access* on page 1-61.
- 1.43 *-mthumb* on page 1-62.
- 1.44 *-o* on page 1-63.
- 1.45 *-O* on page 1-64.
- 1.46 *-S* on page 1-65.
- 1.47 *-std* on page 1-66.
- 1.48 *--target* on page 1-67.
- 1.49 *-U* on page 1-68.
- 1.50 *-u* on page 1-69.
- 1.51 *-v* on page 1-70.
- 1.52 *--version* on page 1-71.
- 1.53 *--version_number* on page 1-72.
- 1.54 *--vsn* on page 1-73.
- 1.55 *-W* on page 1-74.
- 1.56 *-Wl* on page 1-75.
- 1.57 *-Xlinker* on page 1-76.
- 1.58 *-x* on page 1-77.
- 1.59 *-###* on page 1-78.

1.1 Support level definitions

Describes the levels of support for various ARM Compiler features.

ARM Compiler 6 is built on Clang and LLVM technology and as such, has more functionality than the set of product features described in the documentation. The following definitions clarify the levels of support and guarantees on functionality that are expected from these features.

ARM welcomes feedback regarding the use of all ARM Compiler 6 features, and endeavors to support users to a level that is appropriate for that feature. You can contact support at <http://www.arm.com/support>.

Identification in the documentation

All features that are documented in the ARM Compiler 6 documentation are product features, except where explicitly stated. The limitations of non-product features are explicitly stated.

Product features

Product features are suitable for use in a production environment. The functionality is well-tested, and is expected to be stable across feature and update releases.

- ARM endeavors to give advance notice of significant functionality changes to product features.
- If you have a support and maintenance contract, ARM provides full support for use of all product features.
- ARM welcomes feedback on product features.
- Any issues with product features that ARM encounters or is made aware of are considered for fixing in future versions of ARM Compiler.

In addition to fully supported product features, some product features are only alpha or beta quality.

Beta product features

Beta product features are implementation complete, but have not been sufficiently tested to be regarded as suitable for use in production environments.

Beta product features are indicated with [BETA].

- ARM endeavors to document known limitations on beta product features.
- Beta product features are expected to eventually become product features in a future release of ARM Compiler 6.
- ARM encourages the use of beta product features, and welcomes feedback on them.
- Any issues with beta product features that ARM encounters or is made aware of are considered for fixing in future versions of ARM Compiler.

Alpha product features

Alpha product features are not implementation complete, and are subject to change in future releases, therefore the stability level is lower than in beta product features.

Alpha product features are indicated with [ALPHA].

- ARM endeavors to document known limitations of alpha product features.
- ARM encourages the use of alpha product features, and welcomes feedback on them.
- Any issues with alpha product features that ARM encounters or is made aware of are considered for fixing in future versions of ARM Compiler.

Community features

ARM Compiler 6 is built on LLVM technology and preserves the functionality of that technology where possible. This means that there are additional features available in ARM Compiler that are not listed in the documentation. These additional features are known as community features. For information on these community features, see the [documentation for the Clang/LLVM project](#).

Where community features are referenced in the documentation, they are indicated with [COMMUNITY].

- ARM makes no claims about the quality level or the degree of functionality of these features, except when explicitly stated in this documentation.
- Functionality might change significantly between feature releases.
- ARM makes no guarantees that community features are going to remain functional across update releases, although changes are expected to be unlikely.

Some community features might become product features in the future, but ARM provides no roadmap for this. ARM is interested in understanding your use of these features, and welcomes feedback on them. ARM supports customers using these features on a best-effort basis, unless the features are unsupported. ARM accepts defect reports on these features, but does not guarantee that these issues are going to be fixed in future releases.

Guidance on use of community features

There are several factors to consider when assessing the likelihood of a community feature being functional:

- The following figure shows the structure of the ARM Compiler 6 toolchain:

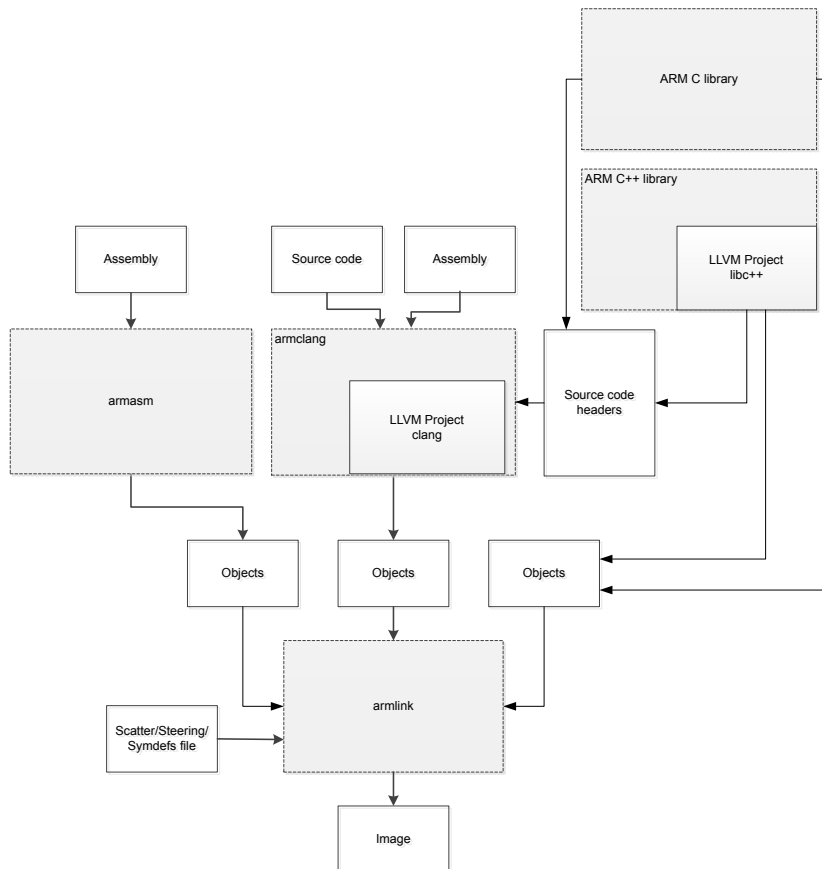


Figure 1-1 Integration boundaries in ARM Compiler 6.

The dashed boxes are toolchain components, and any interaction between these components is an integration boundary. Community features that span an integration boundary might have significant limitations in functionality. The exception to this is if the interaction is codified in one of the standards supported by ARM Compiler 6. See [Application Binary Interface \(ABI\) for the ARM®](#)

Architecture. Community features that do not span integration boundaries are more likely to work as expected.

- Features primarily used when targeting hosted environments such as Linux or BSD, might have significant limitations, or might not be applicable, when targeting bare-metal environments.
- The Clang implementations of compiler features, particularly those that have been present for a long time in other toolchains, are likely to be mature. The functionality of new features, such as support for new language features, is likely to be less mature and therefore more likely to have limited functionality.

Unsupported features

With both the product and community feature categories, specific features and use-cases are known not to function correctly, or are not intended for use with ARM Compiler 6.

Limitations of product features are stated in the documentation. ARM cannot provide an exhaustive list of unsupported features or use-cases for community features. The known limitations on community features are listed in [Community features on page 1-14](#).

List of known unsupported features

The following is an incomplete list of unsupported features, and might change over time:

- The Clang option `-stdlib=libstdc++` is not supported.
- The ARM Compiler 6 libc++ libraries do not support the Thread support library `<thread>`.
- Use of C11 library features is unsupported.
- Any community feature that exclusively pertains to non-ARM architectures is not supported by ARM Compiler 6.

1.2 -c

Instructs the compiler to perform the compilation step, but not the link step.

Usage

ARM recommends using the `-c` option in projects with more than one source file.

The compiler creates one object file for each source file, with a `.o` file extension replacing the file extension on the input source file. For example, the following creates object files `test1.o`, `test2.o`, and `test3.o`:

```
armclang --target=aarch64-arm-none-eabi -c test1.c test2.c test3.c
```

Note

If you specify multiple source files with the `-c` option, the `-o` option results in an error. For example:

```
armclang --target=aarch64-arm-none-eabi -c test1.c test2.c -o test.o  
armclang: error: cannot specify -o when generating multiple output files
```

1.3 -D

Defines a macro *name*.

Syntax

```
-Dname[(parm-list)] [=def]
```

Where:

name

Is the name of the macro to be defined.

parm-list

Is an optional list of comma-separated macro parameters. By appending a macro parameter list to the macro name, you can define function-style macros.

The parameter list must be enclosed in parentheses. When specifying multiple parameters, do not include spaces between commas and parameter names in the list.

————— **Note** —————

Parentheses might require escaping on UNIX systems.

=def

Is an optional macro definition.

If =def is omitted, the compiler defines *name* as the value 1.

To include characters recognized as tokens on the command line, enclose the macro definition in double quotes.

Usage

Specifying -D*name* has the same effect as placing the text #define *name* at the head of each source file.

Example

Specifying this option:

```
-DMAX(X,Y)="((X > Y) ? X : Y)"
```

is equivalent to defining the macro:

```
#define MAX(X, Y) ((X > Y) ? X : Y)
```

at the head of each source file.

Related references

[1.24 -include on page 1-40.](#)

[1.49 -U on page 1-68.](#)

1.4 -E

Executes the preprocessor step only.

By default, output from the preprocessor is sent to the standard output stream and can be redirected to a file using standard UNIX and MS-DOS notation.

You can also use the `-o` option to specify a file for the preprocessed output.

By default, comments are stripped from the output. Use the `-C` option to keep comments in the preprocessed output.

Examples

Use `-E -dD` to generate interleaved macro definitions and preprocessor output:

```
armclang --target=aarch64-arm-none-eabi -E -dD source.c > raw.c
```

Use `-E -dM` to list all the macros that are defined at the end of the translation unit, including the predefined macros:

```
armclang --target=arm-arm-none-eabi -E -dM source.c
```

Related references

[1.48 --target](#) on page 1-67.

1.5 -e

Specifies the unique initial entry point of the image.

If linking, `armclang` translates this option to `--entry` and passes it to `armlink`. If the link step is not being performed, this option is ignored.

See the *ARM® Compiler toolchain Linker Reference* for information about the `--entry` linker options.

Related information

[*ARM Compiler toolchain Linker Reference.*](#)

1.6 `-fbare-metal-pie`

Generates position independent code.

This option causes the compiler to invoke `armlink` with the `--bare_metal_pie` option when performing the link step.

————— **Note** —————

- This option is unsupported for AArch64 state.
- Bare-metal PIE support is deprecated in this release.

—————

Related references

[1.15 `-fropi`, `-fno-ropi` \[BETA\]](#) on page 1-30.

[1.17 `-frwpi`, `-fno-rwpi` \[BETA\]](#) on page 1-32.

Related information

[Bare-metal Position Independent Executables.](#)

[--fpic armlink option.](#)

[--pie armlink option.](#)

[--bare_metal_pie armlink option.](#)

[--ref_pre_init armlink option.](#)

1.7 -fcommon, -fno-common

Generates common zero-initialized values for tentative definitions.

Tentative definitions are declarations of variables with no storage class and no initializer.

The `-fcommon` option places the tentative definitions in a common block. This common definition is not associated with any particular section or object, so multiple definitions resolve to a single definition at link time.

The `-fno-common` option generates individual zero-initialized definitions for tentative definitions. These zero-initialized definitions are placed in a ZI section in the generated object. Multiple definitions of the same symbol in different files can cause a `L6200E: Symbol multiply defined` linker error, because the individual definitions clash with each other.

Default

The default is `-fno-common`.

1.8 -ffast-math

Setting this option tells the compiler to perform more aggressive floating-point optimizations.

It results in behavior that is not fully compliant with the ISO C or C++ standard. However, numerically robust floating-point programs are expected to behave correctly.

1.9 -ffunction-sections

Generates one ELF section for each function in the source file.

Output sections are named with the same name as the function that generates the section, but with a `.text.` prefix.

Note

If you want to place specific data items or structures in separate sections, mark them individually with `__attribute__((section("name")))`.

Restrictions

This option reduces the potential for sharing addresses, data, and string literals between functions. Consequently, it might increase code size slightly for some functions.

Example

```
int function1(int x)
{
    return x+1;
}

int function2(int x)
{
    return x+2;
}
```

Compiling this code with `-ffunction-sections` produces:

```
armclang --target=arm-arm-none-eabi -march=armv8-a -ffunction-sections -S -O3 -o- main.c

...
.section      .text.function1,"ax",%progbits
.globl       function1
.p2align    2
.type       function1,%function
function1:
    .fnstart
@ BB#0:
    add     r0, r0, #1
    bx     lr
.Lfunc_end0:
    .size   function1, .Lfunc_end0-function1
    .cantunwind
    .fnend

.section      .text.function2,"ax",%progbits
.globl       function2
.p2align    2
.type       function2,%function
function2:
    .fnstart
@ BB#0:
    add     r0, r0, #2
    bx     lr
.Lfunc_end1:
    .size   function2, .Lfunc_end1-function2
    .cantunwind
    .fnend
...
```

Related references

[3.15 `__attribute__\(\(section\("name"\)\)\)` function attribute](#) on page 3-106.

1.10 @file

Reads a list of compiler options from a file.

Syntax

@file

Where *file* is the name of a file containing `armclang` options to include on the command line.

Usage

The options in the specified file are inserted in place of the *@file* option.

Use whitespace or new lines to separate options in the file. Enclose strings in single or double quotes to treat them as a single word.

You can specify multiple *@file* options on the command line to include options from multiple files. Files can contain more *@file* options.

If any *@file* option specifies a non-existent file or circular dependency, `armclang` exits with an error.

Example

Consider a file `options.txt` with the following content:

```
"-I../my libs/"  
--target=aarch64-arm-none-eabi -mcpu=cortex-a57
```

Compile a source file `main.c` with the following command line:

```
armclang @options.txt main.c
```

This command is equivalent to the following:

```
armclang -I"../my libs/" --target=aarch64-arm-none-eabi -mcpu=cortex-a57 main.c
```

1.11 -fldm-stm, -fno-ldm-stm

Enable or disable the generation of LDM and STM instructions. AArch32 only.

Usage

The `-fno-ldm-stm` option can reduce interrupt latency on ARM systems that:

- Do not have a cache or a write buffer.
- Use zero-wait-state, 32-bit memory.

Note

Using `-fno-ldm-stm` might slightly increase code size and decrease performance.

Restrictions

Existing LDM and STM instructions (for example, in assembly code you are assembling with `armclang`) are not removed.

Default

The default is `-fldm-stm`. That is, by default `armclang` can generate LDM and STM instructions.

1.12 **-fno-inline-functions**

Disabling the inlining of functions can help to improve the debug experience.

The compiler attempts to automatically inline functions at optimization levels `-O2` and `-O3`. When these levels are used with `-fno-inline-functions`, automatic inlining is disabled.

When optimization levels `-O0` and `-O1` are used with `-fno-inline-functions`, no automatic inlining is attempted, and only functions that are tagged with `__attribute__((always_inline))` are inlined.

Related concepts

[5.2 *Inline functions* on page 5-141.](#)

Related references

[1.45 *-O* on page 1-64.](#)

1.13 -f1to [ALPHA]

Enables link time optimization, outputting bitcode files for link time optimization rather than ELF object files.

Note

This topic describes an [\[ALPHA\] on page 1-14](#) feature.

The primary use for bitcode files is for link time optimization. See [Optimizing across modules with link time optimization](#) in the *Software Development Guide* for more information about link time optimization.

Usage

The compiler creates one bitcode file for each source file, with a .o file extension replacing the file extension on the input source file.

The -f1to option passes the --lto option to armLink to enable link time optimization, unless the -c option is specified.

Related references

[1.2 -c on page 1-17](#).

Related information

[Optimizing across modules with link time optimization](#).

[--lto armLink option](#).

1.14 -fno-exceptions

Suppresses the generation of code needed to support C++ exceptions.

Usage

The `-fno-exceptions` option can be used with the ARM C++ library, with caution:

- ARM Compiler 6 does not contain variants of ARM C++ library that are built with `-fno-exceptions`. Therefore, exceptions might be thrown from pre-built `libc++` objects.
- The parts of `libc++` that are implemented in header files can be compiled with `-fno-exceptions`. When `-fno-exceptions` is used, undefined behavior results instead of throwing an exception. In most cases `libc++` will call the `assert` macro. However in a small number of cases it will call `abort()`, and in some cases it will do nothing at all.

————— **Note** —————

If the macro `NDEBUG` is defined these `assert` macros are removed.

—————

Use of `try`, `catch`, or `throw` results in an error message. If a C++ exception from another object propagates into code built with `-fno-exceptions`, then the program terminates.

Related information

[Standard C++ library implementation definition.](#)

1.15 -fropi, -fno-ropi [BETA]

Enables or disables the generation of Read-Only Position-Independent (ROPI) code.

Note

This topic describes a [\[BETA\] on page 1-14](#) feature.

Usage

When generating ROPI code, the compiler:

- Addresses read-only code and data PC-relative.
- Sets the Position Independent (PI) attribute on read-only output sections.

Note

- This option is independent from `-frwpi`, meaning that these two options can be used individually or together.
 - When using `-fropi`, `-fropi-lowering` is automatically enabled.
-

Default

The default is `-fno-ropi`.

Restrictions

The following restrictions apply:

- This option is not supported in AArch64 mode.
- This option cannot be used with C++ code.
- This option is not compatible with `-fpic`, `-fpie`, or `-fbare-metal-pie` options.

Related references

[1.17 -frwpi, -fno-rwpi \[BETA\] on page 1-32](#).

[1.18 -frwpi-lowering, -fno-rwpi-lowering \[BETA\] on page 1-33](#).

[1.16 -fropi-lowering, -fno-ropi-lowering \[BETA\] on page 1-31](#).

1.16 `-fropi-lowering`, `-fno-ropi-lowering` [BETA]

Enables and disables runtime static initialization when generating Read-Only Position-Independent (ROPI) code.

————— **Note** —————

This topic describes a [\[BETA\] on page 1-14](#) feature.

If you compile with `-fropi-lowering`, then the static initialization is done at runtime. It is done by the same mechanism that is used to call the constructors of static C++ objects that must run before `main()`. This enables these static initializations to work with ROPI code.

Default

The default is `-fno-ropi-lowering`. If `-fropi` is used, then the default is `-fropi-lowering`. If `-frwpi` is used without `-fropi`, then the default is `-fropi-lowering`.

1.17 -frwpi, -fno-rwpi [BETA]

Enables or disables the generation of Read/Write Position-Independent (RWPI) code.

Note

This topic describes a [\[BETA\] on page 1-14](#) feature.

Usage

When generating RWPI code, the compiler:

- Addresses the writable data using offsets from the static base register sb. This means that:
 - The base address of the RW data region can be fixed at runtime.
 - Data can have multiple instances.
 - Data can be, but does not have to be, position-independent.
- Sets the PI attribute on read/write output sections.

Note

- This option is independent from -fropi, meaning that these two options can be used individually or together.
 - When using -frwpi, -frwpi-lowering and -fropi-lowering are automatically enabled.
-

Restrictions

The following restrictions apply:

- This option is not supported in AArch64 mode.
- This option is not compatible with -fpic, -fpie, or -fbare-metal-pie options.

Default

The default is -fno-rwpi.

Related references

[1.15 -fropi, -fno-ropi \[BETA\] on page 1-30.](#)

[1.16 -fropi-lowering, -fno-ropi-lowering \[BETA\] on page 1-31.](#)

[1.18 -frwpi-lowering, -fno-rwpi-lowering \[BETA\] on page 1-33.](#)

1.18 `-frwpi-lowering`, `-fno-rwpi-lowering` [BETA]

Enables and disables runtime static initialization when generating Read-Write Position-Independent (RWPI) code.

————— **Note** —————

This topic describes a [\[BETA\] on page 1-14](#) feature.

If you compile with `-frwpi-lowering`, then the static initialization is done at runtime by the C++ constructor mechanism for both C and C++ code. This enables these static initializations to work with RWPI code.

Default

The default is `-fno-rwpi-lowering`. If `-frwpi` is used, then the default is `-frwpi-lowering`.

1.19 -fshort-enums, -fno-short-enums

Allows the compiler to set the size of an enumeration type to the smallest data type that can hold all enumerator values.

The `-fshort-enums` option can improve memory usage, but might reduce performance because narrow memory accesses can be less efficient than full register-width accesses.

Note

All linked objects, including libraries, must make the same choice. It is not possible to link an object file compiled with `-fshort-enums`, with another object file that is compiled without `-fshort-enums`.

Note

The `-fshort-enums` option is not supported for AArch64. The *Procedure Call Standard for the ARM® 64-bit Architecture* states that the size of enumeration types must be at least 32 bits.

Default

The default is `-fno-short-enums`. That is, the size of an enumeration type is at least 32 bits regardless of the size of the enumerator values.

Example

This example shows the size of four different enumeration types: 8-bit, 16-bit, 32-bit, and 64-bit integers.

```
#include <stdio.h>

// Largest value is 8-bit integer
enum int8Enum {int8Val1 =0x01, int8Val2 =0x02, int8Val3 =0xF1 };

// Largest value is 16-bit integer
enum int16Enum {int16Val1=0x01, int16Val2=0x02, int16Val3=0xFFFF1 };

// Largest value is 32-bit integer
enum int32Enum {int32Val1=0x01, int32Val2=0x02, int32Val3=0xFFFFFFFF1 };

// Largest value is 64-bit integer
enum int64Enum {int64Val1=0x01, int64Val2=0x02, int64Val3=0xFFFFFFFFFFFFFFFF1 };

int main(void)
{
    printf("size of int8Enum is %zd\n", sizeof (enum int8Enum));
    printf("size of int16Enum is %zd\n", sizeof (enum int16Enum));
    printf("size of int32Enum is %zd\n", sizeof (enum int32Enum));
    printf("size of int64Enum is %zd\n", sizeof (enum int64Enum));
}
```

When compiled without the `-fshort-enums` option, all enumeration types are 32 bits (4 bytes) except for `int64Enum` which requires 64 bits (8 bytes):

```
armclang --target=arm-arm-none-eabi -march=armv8-a enum_test.cpp

size of int8Enum is 4
size of int16Enum is 4
size of int32Enum is 4
size of int64Enum is 8
```

When compiled with the `-fshort-enums` option, each enumeration type has the smallest size possible to hold the largest enumerator value:

```
armclang -fshort-enums --target=arm-arm-none-eabi -march=armv8-a enum_test.cpp

size of int8Enum is 1
size of int16Enum is 2
size of int32Enum is 4
size of int64Enum is 8
```

Note

ISO C restricts enumerator values to the range of `int`. By default `armclang` does not issue warnings about enumerator values that are too large, but with `-Wpedantic` a warning is displayed.

Related information

[Procedure Call Standard for the ARM 64-bit Architecture \(AArch64\)](#)

1.20 -fshort-wchar, -fno-short-wchar

-fshort-wchar sets the size of wchar_t to 2 bytes.

The -fshort-wchar option can improve memory usage, but might reduce performance because narrow memory accesses can be less efficient than full register-width accesses.

————— **Note** —————

All linked objects must use the same wchar_t size, including libraries. It is not possible to link an object file compiled with -fshort-wchar, with another object file that is compiled without -fshort-wchar.

Default

The default is -fno-short-wchar. That is, the default size of wchar_t is 4 bytes.

Example

This example shows the size of the wchar_t type:

```
#include <stdio.h>
#include <wchar.h>

int main(void)
{
    printf("size of wchar_t is %zd\n", sizeof (wchar_t));
    return 0;
}
```

When compiled without the -fshort-wchar option, the size of wchar_t is 4 bytes:

```
armclang --target=aarch64-arm-none-eabi wchar_test.c
size of wchar_t is 4
```

When compiled with the -fshort-wchar option, the size of wchar_t is 2 bytes:

```
armclang -fshort-wchar --target=aarch64-arm-none-eabi wchar_test.c
size of wchar_t is 2
```

1.21 -fvectorize, -fno-vectorize

Enables and disables the generation of Advanced SIMD vector instructions directly from C or C++ code at optimization levels -O1 and higher.

Default

The default depends on the optimization level in use.

At optimization level -O0 (the default optimization level), `armclang` never performs automatic vectorization. The `-fvectorize` and `-fno-vectorize` options are ignored.

At optimization level -O1, the default is `-fno-vectorize`. Use `-fvectorize` to enable automatic vectorization.

At optimization level -O2 and above, the default is `-fvectorize`. Use `-fno-vectorize` to disable automatic vectorization.

Example

This example enables automatic vectorization with optimization level -O1:

```
armclang --target=arm-arm-none-eabi -march=armv8-a -fvectorize -O1 -c file.c
```

Related references

[1.2 -c on page 1-17.](#)

[1.45 -O on page 1-64.](#)

1.22 -g, -gdwarf-2, -gdwarf-3, -gdwarf-4,

Adds debug tables for source-level debugging.

Syntax

-g

-gdwarf-*version*

Where:

version

is the DWARF format to produce. Valid values are 2, 3, and 4.

The -g option is a synonym for -gdwarf-4.

Usage

The compiler produces debug information that is compatible with the specified DWARF standard.

Use a compatible debugger to load, run, and debug images. For example, ARM DS-5 Debugger is compatible with DWARF 4. Compile with the -g or -gdwarf-4 options to debug with ARM DS-5 Debugger.

Legacy and third-party tools might not support DWARF 4 debug information. In this case you can specify the level of DWARF conformance required using the -gdwarf-2 or -gdwarf-3 options.

Because the DWARF 4 specification supports language features that are not available in earlier versions of DWARF, the -gdwarf-2 and -gdwarf-3 options should only be used for backwards compatibility.

Default

By default, `armclang` does not produce debug information. When using -g, the default level is DWARF 4.

Examples

If you specify multiple options, the last option specified takes precedence. For example:

- -gdwarf-3 -gdwarf-2 produces DWARF 2 debug, because -gdwarf-2 overrides -gdwarf-3.
- -g -gdwarf-2 produces DWARF 2 debug, because -gdwarf-2 overrides the default DWARF level implied by -g.
- -gdwarf-2 -g produces DWARF 4 debug, because -g (a synonym for -gdwarf-4) overrides -gdwarf-2.

1.23 -I

Adds the specified directory to the list of places that are searched to find include files.

If you specify more than one directory, the directories are searched in the same order as the -I options specifying them.

Syntax

*-I**dir*

Where:

dir

is a directory to search for included files.

Use multiple -I options to specify multiple search directories.

1.24 -include

Includes the source code of the specified file at the beginning of the compilation.

Syntax

`-include filename`

Where *filename* is the name of the file whose source code is to be included.

————— **Note** —————

Any `-D`, `-I`, and `-U` options on the command line are always processed before `-include filename`.

Related references

[1.3 -D on page 1-18.](#)

[1.23 -I on page 1-39.](#)

[1.49 -U on page 1-68.](#)

1.25 -L

Specifies a list of paths that the linker searches for user libraries.

Syntax

`-L dir[,dir,...]`

Where:

`dir[,dir,...]`

is a comma-separated list of directories to be searched for user libraries.

At least one directory must be specified.

When specifying multiple directories, do not include spaces between commas and directory names in the list.

`armclang` translates this option to `--userlibpath` and passes it to `armlink`.

See the *ARM® Compiler toolchain Linker Reference* for information about the `--userlibpath` linker option.

Note

The `-L` option has no effect when used with the `-c` option, that is when not linking.

Related information

[ARM Compiler toolchain Linker Reference.](#)

1.26 -l

Add the specified library to the list of searched libraries.

Syntax

`-l name`

Where *name* is the name of the library.

`armclang` translates this option to `--library` and passes it to `armlink`.

See the *ARM® Compiler toolchain Linker Reference* for information about the `--library` linker option.

————— **Note** —————

The `-l` option has no effect when used with the `-c` option, that is when not linking.

Related information

[ARM Compiler toolchain Linker Reference.](#)

1.27 -M, -MM

Produces a list of makefile dependency rules suitable for use by a make utility.

The compiler executes only the preprocessor step of the compilation. By default, output is on the standard output stream.

If you specify multiple source files, a single dependency file is created.

-M lists both system header files and user header files.

-MM lists only user header files.

Note

The -MT option lets you override the target name in the dependency rules.

Note

To compile the source files and produce makefile dependency rules, use the -MD or -MMD option instead of the -M or -MM option respectively.

Example

You can redirect output to a file using standard UNIX and MS-DOS notation, the -o option, or the -MF option. For example:

```
armclang --target=arm-arm-none-eabi -march=armv8-a -M source.c > deps.mk  
armclang --target=arm-arm-none-eabi -march=armv8-a -M source.c -o deps.mk  
armclang --target=arm-arm-none-eabi -march=armv8-a -M source.c -MF deps.mk
```

Related references

[1.44 -o](#) on page 1-63.

[1.28 -MD, -MMD](#) on page 1-44.

[1.29 -MF](#) on page 1-45.

[1.32 -MT](#) on page 1-48.

1.28 -MD, -MMD

Compiles source files and produces a list of makefile dependency rules suitable for use by a make utility.

The compiler creates a makefile dependency file for each source file, using a `.d` suffix. Unlike `-M` and `-MM`, that cause compilation to stop after the preprocessing stage, `-MD` and `-MMD` allow for compilation to continue.

`-MD` lists both system header files and user header files.

`-MMD` lists only user header files.

Example

The following example creates makefile dependency lists `test1.d` and `test2.d` and compiles the source files to an image with the default name, `a.out`:

```
armclang --target=arm-arm-none-eabi -march=armv8-a -MD test1.c test2.c
```

Related references

[1.27 -M, -MM on page 1-43.](#)

[1.29 -MF on page 1-45.](#)

[1.32 -MT on page 1-48.](#)

1.29 -MF

Specifies a filename for the makefile dependency rules produced by the -M and -MD options.

Syntax

`-MF filename`

Where:

filename

Specifies the filename for the makefile dependency rules.

Note

The -MF option only has an effect when used in conjunction with one of the -M, -MM, -MD, or -MMD options.

The -MF option overrides the default behavior of sending dependency generation output to the standard output stream, and sends output to the specified filename instead.

`armclang -MD` sends output to a file with the same name as the source file by default, but with a `.d` suffix. The -MF option sends output to the specified filename instead. Only use a single source file with `armclang -MD -MF`.

Examples

This example sends makefile dependency rules to standard output, without compiling the source:

```
armclang --target=aarch64-arm-none-eabi -M source.c
```

This example saves makefile dependency rules to `deps.mk`, without compiling the source:

```
armclang --target=aarch64-arm-none-eabi -M source.c -MF deps.mk
```

This example compiles the source and saves makefile dependency rules to `source.d` (using the default file naming rules):

```
armclang --target=aarch64-arm-none-eabi -MD source.c
```

This example compiles the source and saves makefile dependency rules to `deps.mk`:

```
armclang --target=aarch64-arm-none-eabi -MD source.c -MF deps.mk
```

Related references

[1.27 -M, -MM on page 1-43.](#)

[1.28 -MD, -MMD on page 1-44.](#)

[1.32 -MT on page 1-48.](#)

1.30 -MG

Prints dependency lines for header files even if the header files are missing.

Warning and error messages on missing header files are suppressed, and compilation continues.

————— **Note** —————

The -MG option only has an effect when used with one of the following options: -M or -MM.

Example

source.c contains a reference to a missing header file header.h:

```
#include <stdio.h>
#include "header.h"

int main(void){
    puts("Hello world\n");
    return 0;
}
```

This first example is compiled without the -MG option, and results in an error:

```
armclang --target=aarch64-arm-none-eabi -M source.c
source.c:2:10: fatal error: 'header.h' file not found
#include "header.h"
         ^
1 error generated.
```

This second example is compiled with the -MG option, and the error is suppressed:

```
armclang --target=aarch64-arm-none-eabi -M -MG source.c
source.o: source.c \
  /include/stdio.h \
  header.h
```

1.31 -MP

Emits dummy dependency rules.

These rules work around make errors that are generated if you remove header files without a corresponding update to the makefile.

————— **Note** —————

The `-MP` option only has an effect when used in conjunction with the `-M`, `-MD`, `-MM`, or `-MMD` options.

Examples

This example sends dependency rules to standard output, without compiling the source.

`source.c` includes a header file:

```
#include <stdio.h>

int main(void){
    puts("Hello world\n");
    return 0;
}
```

This first example is compiled without the `-MP` option, and results in a dependency rule for `source.o`:

```
armclang --target=aarch64-arm-none-eabi -M source.c
source.o: source.c \
    /include/stdio.h
```

This second example is compiled with the `-MP` option, and results in a dependency rule for `source.o` and a dummy rule for the header file:

```
armclang --target=aarch64-arm-none-eabi -M -MP source.c
source.o: source.c \
    /include/stdio.h
/include/stdio.h:
```

1.32 -MT

Changes the target of the makefile dependency rule produced by dependency generating options.

————— **Note** —————

The -MT option only has an effect when used in conjunction with either the -M, -MM, -MD, or -MMD options.

By default, `armclang -M` creates makefile dependencies rules based on the source filename:

```
armclang --target=aarch64-arm-none-eabi -M test.c
test.o: test.c header.h
```

The -MT option renames the target of the makefile dependency rule:

```
armclang --target=aarch64-arm-none-eabi -M test.c -MT foo
foo: test.c header.h
```

The compiler executes only the preprocessor step of the compilation. By default, output is on the standard output stream.

If you specify multiple source files, the -MT option renames the target of all dependency rules:

```
armclang --target=aarch64-arm-none-eabi -M test1.c test2.c -MT foo
foo: test1.c header.h
foo: test2.c header.h
```

Specifying multiple -MT options creates multiple targets for each rule:

```
armclang --target=aarch64-arm-none-eabi -M test1.c test2.c -MT foo -MT bar
foo bar: test1.c header.h
foo bar: test2.c header.h
```

Related references

[1.27 -M, -MM on page 1-43.](#)

[1.28 -MD, -MMD on page 1-44.](#)

[1.29 -MF on page 1-45.](#)

1.33 -march

Targets an architecture profile, generating generic code that runs on any processor of that architecture.

Note

This topic includes descriptions of [\[ALPHA\]](#) on page 1-14 features.

Syntax

To specify a target architecture, use:

`-march=name`

`-march=name[+[no]feature+...]` (for architectures with optional extensions)

Where:

name

Specifies the architecture.

To view a list of all the supported architectures, use:

`-march=list`

The following are valid `-march` values:

`armv8-a`

ARMv8 application architecture profile. Valid with both `--target=aarch64-arm-none-eabi` and `--target=arm-arm-none-eabi`.

`armv8.1-a`

ARMv8.1 application architecture profile. Valid with both `--target=aarch64-arm-none-eabi` and `--target=arm-arm-none-eabi`.

ALPHA

`armv8.2-a`

ARMv8.2 application architecture profile. Valid with both `--target=aarch64-arm-none-eabi` and `--target=arm-arm-none-eabi`.

`armv8-r`

ARMv8 real-time architecture profile. Only valid with `--target=arm-arm-none-eabi`.

`armv8-m.base`

ARMv8 baseline microcontroller architecture profile. Derived from the ARMv6-M architecture. Only valid with `--target=arm-arm-none-eabi`.

`armv8-m.main`

ARMv8 mainline microcontroller architecture profile. Derived from the ARMv7-M architecture. Only valid with `--target=arm-arm-none-eabi`.

`armv7-a`

ARMv7 application architecture profile. Only valid with `--target=arm-arm-none-eabi`.

`armv7-r`

ARMv7 real-time architecture profile. Only valid with `--target=arm-arm-none-eabi`.

`armv7-m`

ARMv7 microcontroller architecture profile. Only valid with `--target=arm-arm-none-eabi`.

`armv7e-m`

ARMv7 microcontroller architecture profile with DSP extension. Only valid with `--target=arm-arm-none-eabi`.

`armv6-m`

ARMv6 microcontroller architecture profile. Only valid with `--target=arm-arm-none-eabi`.

feature

Enables or disables an optional architectural feature. See the documentation for -mcpu.

Default

For AArch64 targets (`--target=aarch64-arm-none-eabi`), unless you target a particular processor using -mcpu, the compiler defaults to -march=armv8-a, generating generic code for ARMv8-A in AArch64 state.

For AArch32 targets (`--target=arm-arm-none-eabi`), there is no default. You must specify either -march (to target an architecture) or -mcpu (to target a processor).

Related references

[1.37 -mcpu](#) on page 1-54.

[1.34 -marm](#) on page 1-51.

[1.43 -mthumb](#) on page 1-62.

[1.48 --target](#) on page 1-67.

1.34 -marm

Requests that the compiler targets the A32 or ARM instruction sets.

Most ARMv7-A (and earlier) processors support two instruction sets: the ARM instruction set, and the Thumb instruction set. ARMv8-A AArch32 continues to support these two instruction sets, but they are renamed as A32 and T32 respectively. ARMv8-A additionally introduces the A64 instruction set, used in the AArch64 execution state.

Different architectures support different instruction sets:

- ARMv8-A processors in AArch64 state execute A64 instructions.
- ARMv8-A processors in AArch32 state, as well as ARMv7 and earlier A- and R- profile processors execute A32 (formerly ARM) and T32 (formerly Thumb) instructions.
- M-profile processors execute T32 (formerly Thumb) instructions.

The `-marm` option targets the A32 (formerly ARM) instruction set.

Note

This option is only valid for targets that support the A32 or ARM instruction sets. For example, the `-marm` option is not valid with AArch64 targets. The compiler ignores the `-marm` option and generates a warning with AArch64 targets.

Default

The default for all targets that support ARM or A32 instructions is `-marm`.

Related references

[1.43 -mthumb](#) on page 1-62.

[1.48 --target](#) on page 1-67.

[1.37 -mcpu](#) on page 1-54.

Related information

[Specifying a target architecture, processor, and instruction set.](#)

1.35 -mbig-endian

Generates code suitable for an ARM processor using byte-invariant big-endian (BE-8) data.

Default

The default is `-mlittle-endian`.

Related references

[1.41 -mlittle-endian](#) on page 1-60.

1.36 -mcmse

Enables the generation of code for the Secure state of the ARMv8-M Security Extensions. This option is required when creating a Secure image.

Usage

Specifying `-mcmse` targets the Secure state of the ARMv8-M Security Extensions. The following are available:

- The Test Target, TT, instruction.
- TT instruction intrinsics.
- Non-secure function pointer intrinsics.
- `__attribute__((cmse_nonsecure_call))` and `__attribute__((cmse_nonsecure_entry))` function attributes.

Note

The value of the `__ARM_FEATURE_CMSE` predefined macro indicates what ARMv8-M Security Extension features are supported.

Example

This example shows how to create a Secure image using an input import library, `oldimportlib.o`, and a scatter file, `secure.scf`:

```
armclang -mfloat-abi=soft --target=arm-arm-none-eabi -march=armv8m.main -mcmse secure.c -o
secure.o
armlink secure.o -o secure.axf --import-cmse-lib-out importlib.o --import-cmse-lib-in
oldimportlib.o --scatter secure.scf
```

`armlink` also generates the Secure code import library, `importlib.o` that is required for a Non-secure image to call the Secure image.

Note

ARM Compiler 6 does not support hardware floating-point linkage when using the `-mcmse` option. Hence there is no support for the `armclang` option `-mfloat-abi=hard` when using the `-mcmse` option.

Related references

[1.33 -march](#) on page 1-49.

[1.40 -mfpv](#) on page 1-58.

[1.48 --target](#) on page 1-67.

[3.3 __attribute__\(\(cmse_nonsecure_call\)\) function attribute](#) on page 3-94.

[3.4 __attribute__\(\(cmse_nonsecure_entry\)\) function attribute](#) on page 3-95.

[5.1 Predefined macros](#) on page 5-136.

[5.4 TT instruction intrinsics](#) on page 5-143.

[5.5 Non-secure function pointer intrinsics](#) on page 5-146.

Related information

Building Secure and Non-secure Images Using ARMv8-M Security Extensions.

TT, TTT, TTA, TTAT instruction.

--fpu linker option.

--import_cmse_lib_in linker option.

--import_cmse_lib_out linker option.

--scatter linker option.

1.37 -mcpu

Enables code generation for a specific ARM processor.

Note

This topic includes descriptions of [\[ALPHA\] on page 1-14](#) features.

Syntax

To specify a target processor, use:

`-mcpu=name`

`-mcpu=name+[no]feature+...` (for architectures with optional extensions)

Where:

name

Specifies the processor.

To view a list of all supported processors for your target, use:

`-mcpu=list`

feature

Is an optional architectural feature that might be enabled or disabled by default depending on the architecture.

`+feature` enables the feature if it is disabled by default.

`+nofeature` disables the feature if it is enabled by default.

For AArch64 targets you can specify one or more of the following features if the architecture supports it:

- `crc` - CRC extension.
- `crypto` - Cryptographic extension.
- `fp` - Floating-point extension.
- `[ALPHA] fp16` - ARMv8.2-A half-precision floating-point extension.
- `[ALPHA] profile` - ARMv8.2-A statistical profiling extension.
- `simd` - Advanced SIMD extension.

For AArch32 targets, you can specify one or more of the following features if the architecture supports it:

- `crc` - CRC extension for architectures ARMv8 and above.
- `dsp` - DSP extension for the ARMv8-M.mainline architecture.
- `[ALPHA] fp16` - ARMv8.2-A half-precision floating-point extension.

Note

For AArch32 targets, you can use `-mfpu` to specify the support for floating-point, Advanced SIMD, and cryptographic extensions.

Usage

You can use `-mcpu` option to enable and disable specific architectural features.

To disable a feature, prefix with `no`, for example `cortex-a57+nocrypto`.

To enable or disable multiple features, chain multiple feature modifiers. For example, to enable CRC instructions and disable all other extensions:

```
armclang --target=aarch64-arm-none-eabi -mcpu=cortex-a57+nocrypto+nofp+nosimd+crc
```

If you specify conflicting feature modifiers with -mcpu, the rightmost feature is used. For example, the following command enables the floating-point extension:

```
armclang --target=aarch64-arm-none-eabi -mcpu=cortex-a57+nofp+fp
```

You can prevent the use of floating-point instructions or floating-point registers for AArch64 targets with the -mcpu=*name*+nofp+nosimd option. Subsequent use of floating-point data types in this mode is unsupported.

Default

For AArch64 targets (--target=aarch64-arm-none-eabi), the compiler generates generic code for the ARMv8-A architecture in AArch64 state by default.

For AArch32 targets (--target=arm-arm-none-eabi) there is no default. You must specify either -march (to target an architecture) or -mcpu (to target a processor).

Examples

To list the processors that target the AArch64 state:

```
armclang --target=aarch64-arm-none-eabi -mcpu=list
```

To target the AArch64 state of a Cortex®-A57 processor:

```
armclang --target=aarch64-arm-none-eabi -mcpu=cortex-a57 test.c
```

To target the AArch32 state of a Cortex-A53 processor, generating A32 instructions:

```
armclang --target=arm-arm-none-eabi -mcpu=cortex-a53 -marm test.c
```

Related references

[1.34 -marm](#) on page 1-51.

[1.43 -mthumb](#) on page 1-62.

[1.48 --target](#) on page 1-67.

[1.40 -mfpu](#) on page 1-58.

Related information

[Specifying a target architecture, processor, and instruction set.](#)

[Preventing the use of floating-point instructions and registers.](#)

1.38 -mexecute-only

Generates execute-only code, and prevents the compiler from generating any data accesses to code sections.

To keep code and data in separate sections, the compiler disables literal pools and branch tables when using the `-mexecute-only` option.

Restrictions

Execute-only code must be Thumb code.

Execute-only code is only supported for:

- Processors that support the ARMv8-M.baseline or ARMv8-M.mainline architecture.
- Processors that support the ARMv7-M architecture, such as the Cortex-M3.

If your application calls library functions, the library objects included in the image are not execute-only compliant. You must ensure these objects are not assigned to an execute-only memory region.

————— **Note** —————

ARM does not provide libraries that are built without literal pools. The libraries still use literal pools, even when you use the `-mexecute-only` option.

—————

Related information

[Building applications for execute-only memory.](#)

1.39 -mfloat-abi

Specifies whether to use hardware instructions or software library functions for floating-point operations, and which registers are used to pass floating-point parameters and return values.

Syntax

`-mfloat-abi=value`

Where *value* is one of:

`soft`

Software library functions for floating-point operations and software floating-point linkage.

`softfp`

Hardware floating-point instructions and software floating-point linkage.

`hard`

Hardware floating-point instructions and hardware floating-point linkage.

Note

The `-mfloat-abi` option is not valid with AArch64 targets. AArch64 targets use hardware floating-point instructions and hardware floating-point linkage. However, you can prevent the use of floating-point instructions or floating-point registers for AArch64 targets with the `-mcpu=name+nofp+nosimd` option. Subsequent use of floating-point data types in this mode is unsupported.

Default

The default for `--target=arm-arm-none-eabi` is `softfp`.

Related references

[1.40 -mfpu](#) on page 1-58.

1.40 -mfpu

Specifies the target FPU architecture, that is the floating-point hardware available on the target.

Syntax

To view a list of all the supported FPU architectures, use:

```
-mfpu=list
```

————— **Note** —————

`-mfpu=list` is rejected when targeting AArch64.

Alternatively, to specify a target FPU architecture, use:

```
-mfpu=name
```

Where *name* is one of the following:

`none`

Prevents the compiler from using hardware-based floating-point functions. If the compiler encounters floating-point types in the source code, it will use software-based floating-point library functions. This is similar to the `-mfloat-abi=soft` option.

————— **Note** —————

When using the ARMv8-M Security Extensions, use this option for compiling secure code to ensure that it does not link with any code that uses floating-point registers.

`vfpv3`

Enable the ARMv7 VFPv3 floating-point extension. Disable the Advanced SIMD extension.

`vfpv3-fp16`

Enable the ARMv7 VFPv3 floating-point extension, including the optional half-precision extensions. Disable the Advanced SIMD extension.

`vfpv3-d16-fp16`

Enable the ARMv7 VFPv3-D16 floating-point extension, including the optional half-precision extensions. Disable the Advanced SIMD extension.

`vfpv3xd`

Enable the ARMv7 VFPv3XD floating-point extension. Disable the Advanced SIMD extension.

`neon`

Enable the ARMv7 VFPv3 floating-point extension and the Advanced SIMD extension.

`neon-fp16`

Enable the ARMv7 VFPv3 floating-point extension, including the optional half-precision extensions, and the Advanced SIMD extension.

`vfpv4`

Enable the ARMv7 VFPv4 floating-point extension. Disable the Advanced SIMD extension.

`neon-vfpv4`

Enable the ARMv7 VFPv4 floating-point extension and the Advanced SIMD extension.

`fpv5-d16`

Enable the ARMv7 FPv5-D16 floating-point extension.

`fpv5-sp-d16`

Enable the ARMv7 FPv5-SP-D16 floating-point extension.

`fp-armv8`

Enable the ARMv8 floating-point extension. Disable the cryptographic extension and the Advanced SIMD extension.

`neon-fp-armv8`

Enable the ARMv8 floating-point extension and the Advanced SIMD extensions. Disable the cryptographic extension.

crypto-neon-fp-armv8

Enable the ARMv8 floating-point extension, the cryptographic extension, and the Advanced SIMD extension.

The `-mfp` option overrides the default FPU option implied by the target architecture.

Note

- The `-mfp` option is ignored with AArch64 targets, for example `aarch64-arm-none-eabi`. Use the `-mcpu` option to override the default FPU for `aarch64-arm-none-eabi` targets. For example, to prevent the use of floating-point instructions or floating-point registers for the `aarch64-arm-none-eabi` target use the `-mcpu=name+nofp+nosimd` option. Subsequent use of floating-point data types in this mode is unsupported.
 - In ARMv7, the Advanced SIMD extension was called the NEON Advanced SIMD extension.
-

Default

The default FPU option depends on the target processor.

Related references

[1.37 -mcpu](#) on page 1-54.

[1.39 -mfloat-abi](#) on page 1-57.

[1.48 --target](#) on page 1-67.

Related information

[Using the ARMv8-M Security Extensions.](#)

[Specifying a target architecture, processor, and instruction set.](#)

[Preventing the use of floating-point instructions and registers.](#)

1.41 -m`little-endian`

Generates code suitable for an ARM processor using little-endian data.

Default

The default is `-mlittle-endian`.

Related references

[1.35 -m`big-endian` on page 1-52.](#)

1.42 **-munaligned-access, -mno-unaligned-access**

Enables and disables unaligned accesses to data on ARM processors.

The compiler defines the `__ARM_FEATURE_UNALIGNED` macro when `-munaligned-access` is enabled.

The libraries include special versions of certain library functions designed to exploit unaligned accesses. When unaligned access support is enabled, using `-munaligned-access`, the compilation tools use these library functions to take advantage of unaligned accesses. When unaligned access support is disabled, using `-mno-unaligned-access`, these special versions are not used.

Default

`-munaligned-access` is the default for architectures that support unaligned accesses to data. This applies to all architectures supported by ARM Compiler 6, except ARMv6-M and ARMv8-M.baseline.

Usage

`-munaligned-access`

Use this option on processors that support unaligned accesses to data, to speed up accesses to packed structures.

————— **Note** —————

For ARMv6-M and ARMv8-M.baseline architectures, compiling with this option generates an error.

`-mno-unaligned-access`

If unaligned access is disabled, words in packed data structures are accessed one byte at a time.

Related references

[5.1 Predefined macros on page 5-136.](#)

Related information

[ARM C Language Extensions 2.0.](#)

1.43 -mthumb

Requests that the compiler targets the T32 or Thumb® instruction sets.

Most ARMv7-A (and earlier) processors support two instruction sets: the ARM instruction set, and the Thumb instruction set. ARMv8-A AArch32 continues to support these two instruction sets, but they are renamed as A32 and T32 respectively. ARMv8-A additionally introduces the A64 instruction set, used in the AArch64 execution state.

Different architectures support different instruction sets:

- ARMv8-A processors in AArch64 state execute A64 instructions.
- ARMv8-A processors in AArch32 state, in addition to ARMv7 and earlier A- and R- profile processors execute A32 (formerly ARM) and T32 (formerly Thumb) instructions.
- M-profile processors execute T32 (formerly Thumb) instructions.

The `-mthumb` option targets the T32 (formerly Thumb) instruction set.

Note

- The `-mthumb` option is not valid with AArch64 targets, for example `--target=aarch64-arm-none-eabi`. The compiler ignores the `-mthumb` option and generates a warning with AArch64 targets.
 - The `-mthumb` option is recognized when using `armclang` as a compiler, but not when using it as an assembler. To request `armclang` to assemble using the T32 or Thumb instruction set for your assembly source files, you must use the `.thumb` or `.code 16` directive in the assembly files.
-

Default

The default for all targets that support ARM or A32 instructions is `-marm`.

Example

```
armclang -c --target=arm-arm-none-eabi -march=armv8-a -mthumb test.c
```

Related references

[1.34 -marm](#) on page 1-51.

[1.48 --target](#) on page 1-67.

[1.37 -mcpu](#) on page 1-54.

Related information

[Specifying a target architecture, processor, and instruction set.](#)

[Assembling ARM and GNU syntax assembly code.](#)

1.44 -o

Specifies the name of the output file.

The option `-o filename` specifies the name of the output file produced by the compiler.

The option `-o-` redirects output to the standard output stream when used with the `-c` or `-S` options.

Default

If you do not specify a `-o` option, the compiler names the output file according to the conventions described by the following table.

Table 1-1 Compiling without the -o option

Compiler option	Action	Usage notes
<code>-c</code>	Produces an object file whose name defaults to the name of the input file with the filename extension <code>.o</code>	-
<code>-S</code>	Produces an output file whose name defaults to the name of the input file with the filename extension <code>.s</code>	-
<code>-E</code>	Writes output from the preprocessor to the standard output stream	-
(No option)	Produces temporary object files, then automatically calls the linker to produce an executable image with the default name of <code>a.out</code>	None of <code>-o</code> , <code>-c</code> , <code>-E</code> or <code>-S</code> is specified on the command line

1.45 -O

Specifies the level of optimization to use when compiling source files.

Syntax

`-O $Level$`

Where $Level$ is one of the following:

0

Minimum optimization for the performance of the compiled binary. Turns off most optimizations. When debugging is enabled, this option gives the best possible debug view because the structure of the generated code directly corresponds to the source code.

This is the default optimization level.

1

Restricted optimization. When debugging is enabled, this option gives a generally satisfactory debug view with good code density.

2

High optimization. When debugging is enabled, the debug view might be less satisfactory because the mapping of object code to source code is not always clear. The compiler might perform optimizations that cannot be described by debug information.

3

Maximum optimization. When debugging is enabled, this option typically gives a poor debug view. ARM recommends debugging at lower optimization levels.

fast

Enables all the optimizations from `-O3` along with other aggressive optimizations that might violate strict compliance with language standards, including `-ffast-math`.

s

Performs optimizations to reduce code size, balancing code size against code speed.

z

Performs optimizations to minimize image size.

Default

If you do not specify `-O $Level$` , the compiler assumes `-O0`.

1.46 -S

Outputs the disassembly of the machine code generated by the compiler.

Object modules are not generated. The name of the assembly output file defaults to *filEname.s* in the current directory, where *filEname* is the name of the source file stripped of any leading directory names. The default filename can be overridden with the `-o` option.

Related references

[1.44 `-o` on page 1-63.](#)

1.47 -std

Specifies the language standard to compile for.

Syntax

`-std=name`

Where:

name

Specifies the language mode. Valid values include:

c90

C as defined by the 1990 C standard.

gnu90

C as defined by the 1990 C standard, with additional GNU extensions.

c99

C as defined by the 1999 C standard.

gnu99

C as defined by the 1999 C standard, with additional GNU extensions.

c11

C as defined by the 2011 C standard.

gnu11

C as defined by the 2011 C standard, with additional GNU extensions.

c++98

C++ as defined by the 1998 standard.

gnu++98

C++ as defined by the 1998 standard, with additional GNU extensions.

c++11

C++ as defined by the 2011 standard.

gnu++11

C++ as defined by the 2011 standard, with additional GNU extensions.

For C++ code, the default is `gnu++98`. For more information about C++ support, see *C++ Status* on the Clang web site.

For C code, the default is `gnu11`. For more information about C support, see *Language Compatibility* on the Clang web site.

Related references

[1.58 -x on page 1-77.](#)

Related information

[Language Compatibility.](#)

[C++ Status.](#)

[Language Support Levels.](#)

1.48 --target

Generate code for the specified target triple.

Syntax

`--target=triple`

Where:

triple

has the form *architecture-vendor-OS-abi*.

Supported targets are as follows:

`aarch64-arm-none-eabi`

Generates A64 instructions for AArch64 state. Implies `-march=armv8-a` unless `-mcpu` or `-march` is specified.

`arm-arm-none-eabi`

Generates A32/T32 instructions for AArch32 state. Must be used in conjunction with `-march` (to target an architecture) or `-mcpu` (to target a processor).

Note

- The targets are case-sensitive.
 - The `--target` option is an `armclang` option. For all of the other tools, such as `armasm` and `armlink`, use the `--cpu` and `--fpu` options to specify target processors and architectures.
-

Default

The `--target` option is mandatory and has no default. You must always specify a target triple.

Related references

[1.34 -marm](#) on page 1-51.

[1.43 -mthumb](#) on page 1-62.

[1.37 -mcpu](#) on page 1-54.

[1.40 -mfpu](#) on page 1-58.

Related information

Specifying a target architecture, processor, and instruction set.

armasm User Guide.

armlink User Guide.

1.49 -U

Removes any initial definition of the specified macro.

Syntax

-Uname

Where:

name

is the name of the macro to be undefined.

The macro *name* can be either:

- A predefined macro.
- A macro specified using the *-D* option.

Note

Not all compiler predefined macros can be undefined.

Usage

Specifying *-Uname* has the same effect as placing the text `#undef name` at the head of each source file.

Restrictions

The compiler defines and undefines macros in the following order:

1. Compiler predefined macros.
2. Macros defined explicitly, using *-Dname*.
3. Macros explicitly undefined, using *-Uname*.

Related references

[1.3 -D on page 1-18.](#)

[5.1 Predefined macros on page 5-136.](#)

[1.24 -include on page 1-40.](#)

1.50 -u

Prevents the removal of a specified symbol if it is undefined.

Syntax

-u *symbol*

Where *symbol* is the symbol to keep.

armclang translates this option to --undefined and passes it to armlink.

See the *ARM® Compiler toolchain Linker Reference* for information about the --undefined linker option.

Related information

[ARM Compiler toolchain Linker Reference.](#)

1.51 -v

Displays the commands that invoke the compiler and linker, and executes those commands.

Usage

The `-v` compiler option produces diagnostic output showing exactly how the compiler and linker are invoked, displaying the options for each tool. The `-v` compiler option also displays version information.

With the `-v` option, `armclang` displays this diagnostic output and executes the commands.

————— **Note** —————

To display the diagnostic output without executing the commands, use the `-###` option.

Related references

[1.59 -### on page 1-78.](#)

1.52 --version

Displays the same information as `--vsn`.

Related references

[1.54 --vsn on page 1-73](#).

1.53 --version_number

Displays the version of `armclang` you are using.

Usage

The compiler displays the version number in the format `Mmmuuxx`, where:

- *M* is the major version number, 6.
- *mm* is the minor version number.
- *uu* is the update number.
- *xx* is reserved for ARM internal use. You can ignore this for the purposes of checking whether the current release is a specific version or within a range of versions.

Related references

[5.1 Predefined macros on page 5-136.](#)

[1.54 --vsn on page 1-73.](#)

1.54 --vsn

Displays the version information and the license details.

————— **Note** —————

--vsn is intended to report the version information for manual inspection. The Component line indicates the release of ARM Compiler you are using. If you need to access the version in other tools or scripts, for example in build scripts, use the output from --version_number.

Example

Example output:

```
> armclang --vsn
Product: ARM Compiler N.n.p
Component: ARM Compiler N.n.p
Tool: armclang [tool_id]
Target: target_name
```

Related references

[1.52 --version](#) on page 1-71.

[1.53 --version_number](#) on page 1-72.

1.55 -W

Controls diagnostics.

Syntax

-wname

Where common values for *name* include:

-wc11-extensions

Warns about any use of C11-specific features.

-werror

Turn warnings into errors.

-werror=foo

Turn warning *foo* into an error.

-wno-error=foo

Leave warning *foo* as a warning even if *-werror* is specified.

-wfoo

Enable warning *foo*.

-wno-foo

Suppress warning *foo*.

-weverything

Enable all warnings.

-wpedantic

Issue all the warnings demanded by strict ISO C and ISO C++.

See *Controlling Errors and Warnings* in the *Clang Compiler User's Manual* for full details about controlling diagnostics with *armclang*.

Related information

Options for controlling diagnostics with armclang.

1.56 -Wl

Specifies linker command-line options to pass to the linker when a link step is being performed after compilation.

See the *ARM® Compiler armlink User Guide* for information about available linker options.

Syntax

```
-Wl, opt, [opt [, ... ]]
```

Where:

opt

is a linker command-line option to pass to the linker.

You can specify a comma-separated list of options or `option=argument` pairs.

Restrictions

The linker generates an error if `-Wl` passes unsupported options.

Examples

The following examples show the different syntax usages. They are equivalent because `armlink` treats the single option `--list=diag.txt` and the two options `--list diag.txt` equivalently:

```
armclang --target=aarch64-arm-none-eabi hello.c -Wl,--split,--list,diag.txt
armclang --target=aarch64-arm-none-eabi hello.c -Wl,--split,--list=diag.txt
```

Related references

[1.57 -Xlinker on page 1-76.](#)

Related information

[ARM Compiler Linker Command-line Options.](#)

1.57 -Xlinker

Specifies linker command-line options to pass to the linker when a link step is being performed after compilation.

See the *ARM® Compiler armlink User Guide* for information about available linker options.

Syntax

`-Xlinker opt`

Where:

opt

is a linker command-line option to pass to the linker.

If you want to pass multiple options, use multiple `-Xlinker` options.

Restrictions

The linker generates an error if `-Xlinker` passes unsupported options.

Examples

This example passes the option `--split` to the linker:

```
armclang --target=aarch64-arm-none-eabi hello.c -Xlinker --split
```

This example passes the options `--list diag.txt` to the linker:

```
armclang --target=aarch64-arm-none-eabi hello.c -Xlinker --list -Xlinker diag.txt
```

Related references

[1.56 -Wl on page 1-75.](#)

Related information

[ARM Compiler Linker Command-line Options.](#)

1.58 -x

Specifies the language of source files.

Syntax

-x Language

Where:

Language

Specifies the language of subsequent source files, one of the following:

`c`

C code.

`c++`

C++ code.

`assembler-with-cpp`

Assembly code containing C directives that require the C preprocessor.

`assembler`

Assembly code that does not require the C preprocessor.

Usage

`-x` overrides the default language standard for the subsequent input files that follow it on the command-line. For example:

```
armclang inputfile1.s -xc inputfile2.s inputfile3.s
```

In this example, `armclang` treats the input files as follows:

- `inputfile1.s` appears before the `-xc` option, so `armclang` treats it as assembly code because of the `.s` suffix.
- `inputfile2.s` and `inputfile3.s` appear after the `-xc` option, so `armclang` treats them as C code.

Note

Use `-std` to set the default language standard.

Default

By default the compiler determines the source file language from the filename suffix, as follows:

- `.cpp`, `.cxx`, `.c++`, `.cc`, and `.CC` indicate C++, equivalent to `-x c++`.
- `.c` indicates C, equivalent to `-x c`.
- `.s` (lower-case) indicates assembly code that does not require preprocessing, equivalent to `-x assembler`.
- `.S` (upper-case) indicates assembly code that requires preprocessing, equivalent to `-x assembler-with-cpp`.

Related references

[1.47 `-std` on page 1-66.](#)

1.59 -###

Displays the commands that invoke the compiler and sub-tools, such as `armlink`, without executing those commands.

Usage

The `-###` compiler option produces diagnostic output showing exactly how the compiler and linker are invoked, displaying the options for each tool. The `-###` compiler option also displays version information.

With the `-###` option, `armclang` only displays this diagnostic output. `armclang` does not compile source files or invoke `armlink`.

————— **Note** —————

To display the diagnostic output and execute the commands, use the `-v` option.

Related references

[1.51 -v on page 1-70.](#)

Chapter 2

Compiler-specific Keywords and Operators

Summarizes the compiler-specific keywords and operators that are extensions to the C and C++ Standards.

It contains the following sections:

- [2.1 *Compiler-specific keywords and operators* on page 2-80.](#)
- [2.2 `__alignof__` on page 2-81.](#)
- [2.3 `__asm` on page 2-83.](#)
- [2.4 `__declspec attributes` on page 2-84.](#)
- [2.5 `__declspec\(noinline\)` on page 2-85.](#)
- [2.6 `__declspec\(noreturn\)` on page 2-86.](#)
- [2.7 `__declspec\(nothrow\)` on page 2-87.](#)
- [2.8 `__inline` on page 2-88.](#)

2.1 Compiler-specific keywords and operators

The ARM compiler `armclang` provides keywords that are extensions to the C and C++ Standards.

Standard C and Standard C++ keywords that do not have behavior or restrictions specific to the ARM compiler are not documented.

Keyword extensions that the ARM compiler supports:

- `__alignof__`
- `__asm`
- `__declspec`
- `__inline`

Related references

[2.2 `__alignof__` on page 2-81.](#)

[2.3 `__asm` on page 2-83.](#)

[2.4 `__declspec` attributes on page 2-84.](#)

[2.8 `__inline` on page 2-88.](#)

2.2 `__alignof__`

The `__alignof__` keyword enables you to inquire about the alignment of a type or variable.

Note

This keyword is a GNU compiler extension that the ARM compiler supports.

Syntax

```
__alignof__(type)
```

```
__alignof__(expr)
```

Where:

type

is a type

expr

is an lvalue.

Return value

`__alignof__(type)` returns the alignment requirement for the type, or 1 if there is no alignment requirement.

`__alignof__(expr)` returns the alignment requirement for the type of the lvalue *expr*, or 1 if there is no alignment requirement.

Example

The following example displays the alignment requirements for a variety of data types, first directly from the data type, then from an lvalue of the corresponding data type:

```

#include <stdio.h>

int main(void)
{
    int    var_i;
    char   var_c;
    double var_d;
    float  var_f;
    long   var_l;
    long long var_ll;

    printf("Alignment requirement from data type:\n");
    printf(" int      : %d\n", __alignof__(int));
    printf(" char      : %d\n", __alignof__(char));
    printf(" double   : %d\n", __alignof__(double));
    printf(" float    : %d\n", __alignof__(float));
    printf(" long     : %d\n", __alignof__(long));
    printf(" long long : %d\n", __alignof__(long long));
    printf("\n");
    printf("Alignment requirement from data type of lvalue:\n");
    printf(" int      : %d\n", __alignof__(var_i));
    printf(" char      : %d\n", __alignof__(var_c));
    printf(" double   : %d\n", __alignof__(var_d));
    printf(" float    : %d\n", __alignof__(var_f));
    printf(" long     : %d\n", __alignof__(var_l));
    printf(" long long : %d\n", __alignof__(var_ll));
}

```

Compiling with the following command produces the following output:

```
armclang --target=arm-arm-none-eabi -march=armv8-a alignof_test.c -o alignof.axf
```

```

Alignment requirement from data type:
int      : 4
char     : 1
double   : 8
float    : 4

```

```
long      : 4  
long long : 8
```

Alignment requirement from data type of lvalue:

```
int       : 4  
char      : 1  
double    : 8  
float     : 4  
long      : 4  
long long : 8
```

2.3 `__asm`

This keyword passes information to the `armclang` assembler.

The precise action of this keyword depends on its usage.

Usage

Inline assembly

The `__asm` keyword can incorporate inline GCC syntax assembly code into a function. For example:

```
#include <stdio.h>

int add(int i, int j)
{
    int res = 0;
    __asm (
        "ADD %[result], %[input_i], %[input_j]"
        : [result] "=r" (res)
        : [input_i] "r" (i), [input_j] "r" (j)
    );
    return res;
}

int main(void)
{
    int a = 1;
    int b = 2;
    int c = 0;

    c = add(a,b);

    printf("Result of %d + %d = %d\n", a, b, c);
}
```

The general form of an `__asm` inline assembly statement is:

```
__asm(code [: output_operand_list [: input_operand_list [:
clobbered_register_list]]]);
```

code is the assembly code. In our example, this is `"ADD %[result], %[input_i], %[input_j]"`.

output_operand_list is an optional list of output operands, separated by commas. Each operand consists of a symbolic name in square brackets, a constraint string, and a C expression in parentheses. In our example, there is a single output operand: `[result] "=r" (res)`.

input_operand_list is an optional list of input operands, separated by commas. Input operands use the same syntax as output operands. In our example there are two input operands: `[input_i] "r" (i), [input_j] "r" (j)`.

clobbered_register_list is an optional list of clobbered registers. In our example, this is omitted.

Assembly labels

The `__asm` keyword can specify an assembly label for a C symbol. For example:

```
int count __asm__("count_v1"); // export count_v1, not count
```

2.4 `__declspec` attributes

The `__declspec` keyword enables you to specify special attributes of objects and functions.

The `__declspec` keyword must prefix the declaration specification. For example:

```
__declspec(noreturn) void overflow(void);
```

The available `__declspec` attributes are as follows:

- `__declspec(noinline)`
- `__declspec(noreturn)`
- `__declspec(nothrow)`

`__declspec` attributes are storage class modifiers. They do not affect the type of a function or variable.

Related references

[2.5 `__declspec\(noinline\)` on page 2-85.](#)

[2.6 `__declspec\(noreturn\)` on page 2-86.](#)

[2.7 `__declspec\(nothrow\)` on page 2-87.](#)

2.5 `__declspec(noinline)`

The `__declspec(noinline)` attribute suppresses the inlining of a function at the call points of the function.

`__declspec(noinline)` can also be applied to constant data, to prevent the compiler from using the value for optimization purposes, without affecting its placement in the object. This is a feature that can be used for patchable constants, that is, data that is later patched to a different value. It is an error to try to use such constants in a context where a constant value is required. For example, an array dimension.

————— **Note** —————

This `__declspec` attribute has the function attribute equivalent `__attribute__((noinline))`.

Example

```
/* Prevent y being used for optimization */  
__declspec(noinline) const int y = 5;  
/* Suppress inlining of foo() wherever foo() is called */  
__declspec(noinline) int foo(void);
```

2.6 `__declspec(noreturn)`

The `__declspec(noreturn)` attribute asserts that a function never returns.

————— **Note** —————

This `__declspec` attribute has the function attribute equivalent `__attribute__((noreturn))`.

Usage

Use this attribute to reduce the cost of calling a function that never returns, such as `exit()`. If a `noreturn` function returns to its caller, the behavior is undefined.

Restrictions

The return address is not preserved when calling the `noreturn` function. This limits the ability of a debugger to display the call stack.

Example

```
__declspec(noreturn) void overflow(void); // never return on overflow
int negate(int x)
{
    if (x == 0x80000000) overflow();
    return -x;
}
```

2.7 `__declspec(nothrow)`

The `__declspec(nothrow)` attribute asserts that a call to a function never results in a C++ exception being propagated from the callee into the caller.

The ARM library headers automatically add this qualifier to declarations of C functions that, according to the ISO C Standard, can never throw an exception. However, there are some restrictions on the unwinding tables produced for the C library functions that might throw an exception in a C++ context, for example, `bsearch` and `qsort`.

————— **Note** —————

This `__declspec` attribute has the function attribute equivalent `__attribute__((nothrow))`.

Usage

If the compiler knows that a function can never throw an exception, it might be able to generate smaller exception-handling tables for callers of that function.

Restrictions

If a call to a function results in a C++ exception being propagated from the callee into the caller, the behavior is undefined.

This modifier is ignored when not compiling with exceptions enabled.

Example

```
struct S
{
    ~S();
};
__declspec(nothrow) extern void f(void);
void g(void)
{
    S s;
    f();
}
```

Related information

[Standard C++ library implementation definition.](#)

2.8 `__inline`

The `__inline` keyword suggests to the compiler that it compiles a C or C++ function inline, if it is sensible to do so.

`__inline` can be used in C90 code, and serves as an alternative to the C99 `inline` keyword.

Both `__inline` and `__inline__` are supported in `armclang`.

Example

```
static __inline int f(int x){
    return x*5+1;
}

int g(int x, int y){
    return f(x) + f(y);
}
```

Related concepts

[5.2 Inline functions](#) on page 5-141.

Chapter 3

Compiler-specific Function, Variable, and Type Attributes

Summarizes the compiler-specific function, variable, and type attributes that are extensions to the C and C++ Standards.

It contains the following sections:

- [3.1 Function attributes](#) on page 3-91.
- [3.2 `__attribute__\(\(always_inline\)\)` function attribute](#) on page 3-93.
- [3.3 `__attribute__\(\(cmse_nonsecure_call\)\)` function attribute](#) on page 3-94.
- [3.4 `__attribute__\(\(cmse_nonsecure_entry\)\)` function attribute](#) on page 3-95.
- [3.5 `__attribute__\(\(const\)\)` function attribute](#) on page 3-96.
- [3.6 `__attribute__\(\(constructor\[priority\]\)\)` function attribute](#) on page 3-97.
- [3.7 `__attribute__\(\(format_arg\(string-index\)\)\)` function attribute](#) on page 3-98.
- [3.8 `__attribute__\(\(malloc\)\)` function attribute](#) on page 3-99.
- [3.9 `__attribute__\(\(noinline\)\)` function attribute](#) on page 3-100.
- [3.10 `__attribute__\(\(nonnull\)\)` function attribute](#) on page 3-101.
- [3.11 `__attribute__\(\(noreturn\)\)` function attribute](#) on page 3-102.
- [3.12 `__attribute__\(\(nothrow\)\)` function attribute](#) on page 3-103.
- [3.13 `__attribute__\(\(pcs\("calling_convention"\)\)\)` function attribute](#) on page 3-104.
- [3.14 `__attribute__\(\(pure\)\)` function attribute](#) on page 3-105.
- [3.15 `__attribute__\(\(section\("name"\)\)\)` function attribute](#) on page 3-106.
- [3.16 `__attribute__\(\(used\)\)` function attribute](#) on page 3-107.
- [3.17 `__attribute__\(\(unused\)\)` function attribute](#) on page 3-108.
- [3.18 `__attribute__\(\(visibility\("visibility_type"\)\)\)` function attribute](#) on page 3-109.
- [3.19 `__attribute__\(\(weak\)\)` function attribute](#) on page 3-110.
- [3.20 `__attribute__\(\(weakref\("target"\)\)\)` function attribute](#) on page 3-111.

- 3.21 *Type attributes* on page 3-112.
- 3.22 `__attribute__((aligned))` *type attribute* on page 3-113.
- 3.23 `__attribute__((packed))` *type attribute* on page 3-114.
- 3.24 `__attribute__((transparent_union))` *type attribute* on page 3-115.
- 3.25 *Variable attributes* on page 3-116.
- 3.26 `__attribute__((alias))` *variable attribute* on page 3-117.
- 3.27 `__attribute__((aligned))` *variable attribute* on page 3-118.
- 3.28 `__attribute__((deprecated))` *variable attribute* on page 3-119.
- 3.29 `__attribute__((packed))` *variable attribute* on page 3-120.
- 3.30 `__attribute__((section("name")))` *variable attribute* on page 3-121.
- 3.31 `__attribute__((used))` *variable attribute* on page 3-122.
- 3.32 `__attribute__((unused))` *variable attribute* on page 3-123.
- 3.33 `__attribute__((weak))` *variable attribute* on page 3-124.
- 3.34 `__attribute__((weakref("target")))` *variable attribute* on page 3-125.

3.1 Function attributes

The `__attribute__` keyword enables you to specify special attributes of variables, structure fields, functions, and types.

The keyword format is either of the following:

```
__attribute__((attribute1, attribute2, ...))
__attribute__((__attribute1__, __attribute2__, ...))
```

For example:

```
int my_function(int b) __attribute__((const));
static int my_variable __attribute__((__unused__));
```

The following table summarizes the available function attributes.

Table 3-1 Function attributes that the compiler supports, and their equivalents

Function attribute	Non-attribute equivalent
<code>__attribute__((alias))</code>	-
<code>__attribute__((always_inline))</code>	-
<code>__attribute__((const))</code>	-
<code>__attribute__((constructor[<i>priority</i>]))</code>	-
<code>__attribute__((deprecated))</code>	-
<code>__attribute__((destructor[<i>priority</i>]))</code>	-
<code>__attribute__((format_arg(<i>string-index</i>)))</code>	-
<code>__attribute__((malloc))</code>	-
<code>__attribute__((noinline))</code>	<code>__declspec(noinline)</code>
<code>__attribute__((nomerge))</code>	-
<code>__attribute__((nonnull))</code>	-
<code>__attribute__((noreturn))</code>	<code>__declspec(noreturn)</code>
<code>__attribute__((nothrow))</code>	<code>__declspec(nothrow)</code>
<code>__attribute__((notailcall))</code>	-
<code>__attribute__((pcs("calling_convention")))</code>	-
<code>__attribute__((pure))</code>	-
<code>__attribute__((section("name")))</code>	-
<code>__attribute__((unused))</code>	-
<code>__attribute__((used))</code>	-
<code>__attribute__((visibility("visibility_type")))</code>	-
<code>__attribute__((weak))</code>	-
<code>__attribute__((weakref("target")))</code>	-

Usage

You can set these function attributes in the declaration, the definition, or both. For example:

```
void AddGlobals(void) __attribute__((always_inline));
__attribute__((always_inline)) void AddGlobals(void) {...}
```

When function attributes conflict, the compiler uses the safer or stronger one. For example, `__attribute__((used))` is safer than `__attribute__((unused))`, and `__attribute__((noinline))` is safer than `__attribute__((always_inline))`.

Related references

- 3.2 `__attribute__((always_inline))` function attribute on page 3-93.
- 3.5 `__attribute__((const))` function attribute on page 3-96.
- 3.6 `__attribute__((constructor[priority]))` function attribute on page 3-97.
- 3.7 `__attribute__((format_arg(string-index)))` function attribute on page 3-98.
- 3.8 `__attribute__((malloc))` function attribute on page 3-99.
- 3.10 `__attribute__((nonnull))` function attribute on page 3-101.
- 3.9 `__attribute__((noinline))` function attribute on page 3-100.
- 3.13 `__attribute__((pcs("calling_convention")))` function attribute on page 3-104.
- 3.14 `__attribute__((pure))` function attribute on page 3-105.
- 3.11 `__attribute__((noreturn))` function attribute on page 3-102.
- 3.12 `__attribute__((nothrow))` function attribute on page 3-103.
- 3.15 `__attribute__((section("name")))` function attribute on page 3-106.
- 3.17 `__attribute__((unused))` function attribute on page 3-108.
- 3.16 `__attribute__((used))` function attribute on page 3-107.
- 3.18 `__attribute__((visibility("visibility_type")))` function attribute on page 3-109.
- 3.19 `__attribute__((weak))` function attribute on page 3-110.
- 3.20 `__attribute__((weakref("target")))` function attribute on page 3-111.
- 2.2 `__alignof__` on page 2-81.
- 2.3 `__asm` on page 2-83.
- 2.4 `__declspec` attributes on page 2-84.

3.2 `__attribute__((always_inline))` function attribute

This function attribute indicates that a function must be inlined.

The compiler attempts to inline the function, regardless of the characteristics of the function. However, the compiler does not inline a function if doing so causes problems.

Example

```
static int max(int x, int y) __attribute__((always_inline));  
static int max(int x, int y)  
{  
    return x > y ? x : y; // always inline if possible  
}
```

3.3 `__attribute__((cmse_nonsecure_call))` function attribute

Declares a non-secure function type

A call to a function that switches state from Secure to Non-secure is called a non-secure function call. A non-secure function call can only happen through function pointers. This is a consequence of separating secure and non-secure code into separate executable files.

A non-secure function type must only be used as a base type of a pointer.

Example

```
#include <arm_cmse.h>
typedef void __attribute__((cmse_nonsecure_call)) nsfunc(void);
void default_callback(void) { ... }
// fp can point to a secure function or a non-secure function
nsfunc *fp = (nsfunc *) default_callback; // secure function pointer

void __attribute__((cmse_nonsecure_entry)) entry(nsfunc *callback) {
    fp = cmse_nsfptr_create(callback); // non-secure function pointer
}

void call_callback(void) {
    if (cmse_is_nsfptr(fp)) fp(); // non-secure function call
    else ((void (*)(void)) fp)(); // normal function call
}
```

Related references

[3.4 `__attribute__\(\(cmse_nonsecure_entry\)\)` function attribute](#) on page 3-95.

[5.5 Non-secure function pointer intrinsics](#) on page 5-146.

Related information

[Building Secure and Non-secure Images Using ARMv8-M Security Extensions.](#)

3.4 `__attribute__((cmse_nonsecure_entry))` function attribute

Declares an entry function that can be called from Non-secure state or Secure state.

Example

```
#include <arm_cmse.h>
void __attribute__((cmse_nonsecure_entry)) entry_func(int val) {
    int state = cmse_nonsecure_caller();

    if (state)
    { // called from non-secure
      // do non-secure work
      ...
    } else
    { // called from within secure
      // do secure work
      ...
    }
}
```

Related references

[3.3 `__attribute__\(\(cmse_nonsecure_call\)\)` function attribute](#) on page 3-94.

[5.5 Non-secure function pointer intrinsics](#) on page 5-146.

Related information

[Building Secure and Non-secure Images Using ARMv8-M Security Extensions.](#)

3.5 `__attribute__((const))` function attribute

The `const` function attribute specifies that a function examines only its arguments, and has no effect except for the return value. That is, the function does not read or modify any global memory.

If a function is known to operate only on its arguments then it can be subject to common sub-expression elimination and loop optimizations.

This attribute is stricter than `__attribute__((pure))` because functions are not permitted to read global memory.

Example

```
#include <stdio.h>

// __attribute__((const)) functions do not read or modify any global memory
int my_double(int b) __attribute__((const));
int my_double(int b) {
    return b*2;
}

int main(void) {
    int i;
    int result;
    for (i = 0; i < 10; i++)
    {
        result = my_double(i);
        printf (" i = %d ; result = %d \n", i, result);
    }
}
```


3.6 `__attribute__((constructor[priority]))` function attribute

This attribute causes the function it is associated with to be called automatically before `main()` is entered.

Syntax

```
__attribute__((constructor[priority]))
```

Where *priority* is an optional integer value denoting the priority. A constructor with a low integer value runs before a constructor with a high integer value. A constructor with a priority runs before a constructor without a priority.

Priority values up to and including 100 are reserved for internal use. If you use these values, the compiler gives a warning.

Usage

You can use this attribute for start-up or initialization code.

Example

In the following example, the constructor functions are called before execution enters `main()`, in the order specified:

```

#include <stdio.h>
void my_constructor1(void) __attribute__((constructor));
void my_constructor2(void) __attribute__((constructor(102)));
void my_constructor3(void) __attribute__((constructor(103)));
void my_constructor1(void) /* This is the 3rd constructor */
{
    /* function to be called */
    printf("Called my_constructor1()\n");
}
void my_constructor2(void) /* This is the 1st constructor */
{
    /* function to be called */
    printf("Called my_constructor2()\n");
}
void my_constructor3(void) /* This is the 2nd constructor */
{
    /* function to be called */
    printf("Called my_constructor3()\n");
}
int main(void)
{
    printf("Called main()\n");
}

```

This example produces the following output:

```

Called my_constructor2()
Called my_constructor3()
Called my_constructor1()
Called main()

```

3.7 `__attribute__((format_arg(string-index)))` function attribute

This attribute specifies that a function takes a format string as an argument. Format strings can contain typed placeholders that are intended to be passed to printf-style functions such as `printf()`, `scanf()`, `strftime()`, or `strfmon()`.

This attribute causes the compiler to perform placeholder type checking on the specified argument when the output of the function is used in calls to a printf-style function.

Syntax

```
__attribute__((format_arg(string-index)))
```

Where *string-index* specifies the argument that is the format string argument (starting from one).

Example

The following example declares two functions, `myFormatText1()` and `myFormatText2()`, that provide format strings to `printf()`.

The first function, `myFormatText1()`, does not specify the `format_arg` attribute. The compiler does not check the types of the printf arguments for consistency with the format string.

The second function, `myFormatText2()`, specifies the `format_arg` attribute. In the subsequent calls to `printf()`, the compiler checks that the types of the supplied arguments `a` and `b` are consistent with the format string argument to `myFormatText2()`. The compiler produces a warning when a `float` is provided where an `int` is expected.

```
#include <stdio.h>

// Function used by printf. No format type checking.
extern char *myFormatText1 (const char *);

// Function used by printf. Format type checking on argument 1.
extern char *myFormatText2 (const char *) __attribute__((format_arg(1)));

int main(void) {
    int a;
    float b;

    a = 5;
    b = 9.099999;

    printf(myFormatText1("Here is an integer: %d\n"), a); // No type checking. Types match
    anyway.
    printf(myFormatText1("Here is an integer: %d\n"), b); // No type checking. Type mismatch,
    but no warning

    printf(myFormatText2("Here is an integer: %d\n"), a); // Type checking. Types match.
    printf(myFormatText2("Here is an integer: %d\n"), b); // Type checking. Type mismatch
    results in warning
}

$ armclang --target=aarch64-arm-none-eabi -c format_arg_test.c
format_arg_test.c:21:53: warning: format specifies type 'int' but the argument has type
'float' [-Wformat]
    printf(myFormatText2("Here is an integer: %d\n"), b); // Type checking. Type mismatch
    results in warning
                                     ~~      ^
                                     %f

1 warning generated.
```

3.8 `__attribute__((malloc))` function attribute

This function attribute indicates that the function can be treated like `malloc` and the compiler can perform the associated optimizations.

Example

```
void * foo(int b) __attribute__((malloc));
```

3.9 `__attribute__((noinline))` function attribute

This attribute suppresses the inlining of a function at the call points of the function.

`__attribute__((noinline))` can also be applied to constant data, to prevent the compiler from using the value for optimization purposes, without affecting its placement in the object. This is a feature that can be used for patchable constants, that is, data that is later patched to a different value. It is an error to try to use such constants in a context where a constant value is required.

Example

```
/* Prevent y being used for optimization */  
const int y = 5 __attribute__((noinline));  
/* Suppress inlining of foo() wherever foo() is called */  
int foo(void) __attribute__((noinline));
```

3.10 `__attribute__((nonnull))` function attribute

This function attribute specifies function parameters that are not supposed to be null pointers. This enables the compiler to generate a warning on encountering such a parameter.

Syntax

```
__attribute__((nonnull[(arg-index, ...)]))
```

Where [*arg-index*, ...] denotes an optional argument index list.

If no argument index list is specified, all pointer arguments are marked as nonnull.

Note

The argument index list is 1-based, rather than 0-based.

Examples

The following declarations are equivalent:

```
void * my_memcpy (void *dest, const void *src, size_t len) __attribute__((nonnull (1, 2)));
```

```
void * my_memcpy (void *dest, const void *src, size_t len) __attribute__((nonnull));
```

3.11 `__attribute__((noreturn))` function attribute

This attribute asserts that a function never returns.

Usage

Use this attribute to reduce the cost of calling a function that never returns, such as `exit()`. If a `noreturn` function returns to its caller, the behavior is undefined.

Restrictions

The return address is not preserved when calling the `noreturn` function. This limits the ability of a debugger to display the call stack.

3.12 `__attribute__((nothrow))` function attribute

This attribute asserts that a call to a function never results in a C++ exception being sent from the callee to the caller.

The ARM library headers automatically add this qualifier to declarations of C functions that, according to the ISO C Standard, can never throw an exception. However, there are some restrictions on the unwinding tables produced for the C library functions that might throw an exception in a C++ context, for example, `bsearch` and `qsort`.

If the compiler knows that a function can never throw an exception, it might be able to generate smaller exception-handling tables for callers of that function.

3.13 `__attribute__((pcs("calling_convention")))` function attribute

This function attribute specifies the calling convention on targets with hardware floating-point.

Syntax

```
__attribute__((pcs("calling_convention")))
```

Where *calling_convention* is one of the following:

`aapcs`

uses integer registers.

`aapcs-vfp`

uses floating-point registers.

Example

```
double foo (float) __attribute__((pcs("aapcs")));
```


3.14 `__attribute__((pure))` function attribute

Many functions have no effects except to return a value, and their return value depends only on the parameters and global variables. Functions of this kind can be subject to data flow analysis and might be eliminated.

Example

```
int bar(int b) __attribute__((pure));
int bar(int b)
{
    return b++;
}
int foo(int b)
{
    int aLocal=0;
    aLocal += bar(b);
    aLocal += bar(b);
    return 0;
}
```

The call to `bar` in this example might be eliminated because its result is not used.

3.15 `__attribute__((section("name")))` function attribute

The `section` function attribute enables you to place code in different sections of the image.

Example

In the following example, the function `foo` is placed into an RO section named `new_section` rather than `.text`.

```
int foo(void) __attribute__((section ("new_section")));  
int foo(void)  
{  
    return 2;  
}
```

3.16 `__attribute__((used))` function attribute

This function attribute informs the compiler that a static function is to be retained in the object file, even if it is unreferenced.

Functions marked with `__attribute__((used))` are tagged in the object file to avoid removal by linker unused section removal.

————— **Note** —————

Static variables can also be marked as used, by using `__attribute__((used))`.

Example

```
static int lose_this(int);  
static int keep_this(int) __attribute__((used)); // retained in object file  
static int keep_this_too(int) __attribute__((used)); // retained in object file
```

3.17 `__attribute__((unused))` function attribute

The unused function attribute prevents the compiler from generating warnings if the function is not referenced. This does not change the behavior of the unused function removal process.

————— **Note** —————

By default, the compiler does not warn about unused functions. Use `-Wunused-function` to enable this warning specifically, or use an encompassing `-W` value such as `-Wall`.

The `__attribute__((unused))` attribute can be useful if you usually want to warn about unused functions, but want to suppress warnings for a specific set of functions.

Example

```
static int unused_no_warning(int b) __attribute__((unused));
static int unused_no_warning(int b)
{
    return b++;
}

static int unused_with_warning(int b);
static int unused_with_warning(int b)
{
    return b++;
}
```

Compiling this example with `-Wall` results in the following warning:

```
armclang --target=aarch64-arm-none-eabi -c test.c -Wall
test2.cpp:10:12: warning: unused function 'unused_with_warning' [-Wunused-function]
static int
      ^
unused_with_warning(int b)
1 warning generated.
```

Related references

[3.32 `__attribute__\(\(unused\)\)` variable attribute](#) on page 3-123.

3.18 `__attribute__((visibility("visibility_type")))` function attribute

This function attribute affects the visibility of ELF symbols.

Syntax

```
__attribute__((visibility("visibility_type")))
```

Where *visibility_type* is one of the following:

default

The assumed visibility of symbols can be changed by other options. Default visibility overrides such changes. Default visibility corresponds to external linkage.

hidden

The symbol is not placed into the dynamic symbol table, so no other executable or shared library can directly reference it. Indirect references are possible using function pointers.

protected

The symbol is placed into the dynamic symbol table, but references within the defining module bind to the local symbol. That is, the symbol cannot be overridden by another module.

Usage

Except when specifying `default` visibility, this attribute is intended for use with declarations that would otherwise have external linkage.

You can apply this attribute to functions and variables in C and C++. In C++, it can also be applied to class, struct, union, and enum types, and namespace declarations.

In the case of namespace declarations, the visibility attribute applies to all function and variable definitions.

Example

```
void __attribute__((visibility("protected"))) foo()
{
    ...
}
```

3.19 `__attribute__((weak))` function attribute

Functions defined with `__attribute__((weak))` export their symbols weakly.

Functions declared with `__attribute__((weak))` and then defined without `__attribute__((weak))` behave as *weak* functions.

Example

```
extern int Function_Attributes_weak_0 (int b) __attribute__((weak));
```

3.20 `__attribute__((weakref("target")))` function attribute

This function attribute marks a function declaration as an alias that does not by itself require a function definition to be given for the target symbol.

Syntax

```
__attribute__((weakref("target")))
```

Where *target* is the target symbol.

Example

In the following example, `foo()` calls `y()` through a weak reference:

```
extern void y(void);
static void x(void) __attribute__((weakref("y")));
void foo (void)
{
    ...
    x();
    ...
}
```

Restrictions

This attribute can only be used on functions with static linkage.

3.21 Type attributes

The `__attribute__` keyword enables you to specify special attributes of variables or structure fields, functions, and types.

The keyword format is either of the following:

```
__attribute__((attribute1, attribute2, ...))  
__attribute__((__attribute1__, __attribute2__, ...))
```

For example:

```
typedef union { int i; float f; } U __attribute__((transparent_union));
```

The available type attributes are as follows:

- `__attribute__((aligned))`
- `__attribute__((packed))`
- `__attribute__((transparent_union))`

Related references

[3.22 `__attribute__\(\(aligned\)\)` type attribute](#) on page 3-113.

[3.24 `__attribute__\(\(transparent_union\)\)` type attribute](#) on page 3-115.

[3.23 `__attribute__\(\(packed\)\)` type attribute](#) on page 3-114.

3.22 `__attribute__((aligned))` type attribute

The `aligned` type attribute specifies a minimum alignment for the type.

3.23 `__attribute__((packed))` type attribute

The packed type attribute specifies that a type must have the smallest possible alignment. This attribute only applies to struct and union types.

Note

You must access a packed member of a struct or union directly from a variable of the containing type. Taking the address of such a member produces a normal pointer which might be unaligned. The compiler assumes that the pointer is aligned. Dereferencing such a pointer can be unsafe even when unaligned accesses are supported by the target, because certain instructions always require word-aligned addresses.

Example 3-1 Examples

```
struct __attribute__((packed)) foobar
{
    char x;
    short y;
};

short get_y(struct foobar *s)
{
    // Correct usage: the compiler will not use unaligned accesses
    // unless they are allowed.
    return s->y;
}

short get2_y(struct foobar *s)
{
    short *p = &s->y; // Incorrect usage: 'p' might be an unaligned pointer.
    return *p; // This might cause an unaligned access.
}
```

Related references

[1.42 `-munaligned-access`, `-mno-unaligned-access` on page 1-61.](#)

3.24 `__attribute__((transparent_union))` type attribute

The `transparent_union` type attribute enables you to specify a *transparent_union* type.

When a function is defined with a parameter having transparent union type, a call to the function with an argument of any type in the union results in the initialization of a union object whose member has the type of the passed argument and whose value is set to the value of the passed argument.

When a union data type is qualified with `__attribute__((transparent_union))`, the transparent union applies to all function parameters with that type.

Example

```
typedef union { int i; float f; } U __attribute__((transparent_union));
void foo(U u)
{
    static int s;
    s += u.i; /* Use the 'int' field */
}
void caller(void)
{
    foo(1); /* u.i is set to 1 */
    foo(1.0f); /* u.f is set to 1.0f */
}
```

3.25 Variable attributes

The `__attribute__` keyword enables you to specify special attributes of variables or structure fields, functions, and types.

The keyword format is either of the following:

```
__attribute__((attribute1, attribute2, ...))
__attribute__((__attribute1__, __attribute2__, ...))
```

For example:

```
static int b __attribute__((__unused__));
```

The available variable attributes are as follows:

- `__attribute__((alias))`
- `__attribute__((aligned))`
- `__attribute__((deprecated))`
- `__attribute__((packed))`
- `__attribute__((section("name")))`
- `__attribute__((unused))`
- `__attribute__((used))`
- `__attribute__((weak))`
- `__attribute__((weakref("target")))`

Related references

- 3.26 [__attribute__\(\(alias\)\) variable attribute](#) on page 3-117.
- 3.27 [__attribute__\(\(aligned\)\) variable attribute](#) on page 3-118.
- 3.28 [__attribute__\(\(deprecated\)\) variable attribute](#) on page 3-119.
- 3.29 [__attribute__\(\(packed\)\) variable attribute](#) on page 3-120.
- 3.30 [__attribute__\(\(section\("name"\)\)\) variable attribute](#) on page 3-121.
- 3.32 [__attribute__\(\(unused\)\) variable attribute](#) on page 3-123.
- 3.31 [__attribute__\(\(used\)\) variable attribute](#) on page 3-122.
- 3.33 [__attribute__\(\(weak\)\) variable attribute](#) on page 3-124.
- 3.34 [__attribute__\(\(weakref\("target"\)\)\) variable attribute](#) on page 3-125.

3.26 `__attribute__((alias))` variable attribute

This variable attribute enables you to specify multiple aliases for a variable.

Aliases must be declared in the same translation unit as the definition of the original variable.

Note

Aliases cannot be specified in block scope. The compiler ignores aliasing attributes attached to local variable definitions and treats the variable definition as a normal local definition.

In the output object file, the compiler replaces alias references with a reference to the original variable name, and emits the alias alongside the original name. For example:

```
int oldname = 1;
extern int newname __attribute__((alias("oldname")));
```

This code compiles to:

```

.type    oldname,%object      @ @oldname
.data
.globl   oldname
.align   2
oldname:
.long    1                    @ 0x1
.size    oldname, 4
...
.globl   newname
newname = oldname
```

Note

Function names can also be aliased using the corresponding function attribute `__attribute__((alias))`.

Syntax

```
type newname __attribute__((alias("oldname")));
```

Where:

oldname

is the name of the variable to be aliased

newname

is the new name of the aliased variable.

Example

```
#include <stdio.h>
int oldname = 1;
extern int newname __attribute__((alias("oldname"))); // declaration
void foo(void){
    printf("newname = %d\n", newname); // prints 1
}
```

3.27 `__attribute__((aligned))` variable attribute

The `aligned` variable attribute specifies a minimum alignment for the variable or structure field, measured in bytes.

Example

```
/* Aligns on 16-byte boundary */  
int x __attribute__((aligned (16)));  
  
/* In this case, the alignment used is the maximum alignment for a scalar data type. For  
ARM, this is 8 bytes. */  
short my_array[3] __attribute__((aligned));
```

3.28 `__attribute__((deprecated))` variable attribute

The deprecated variable attribute enables the declaration of a deprecated variable without any warnings or errors being issued by the compiler. However, any access to a deprecated variable creates a warning but still compiles.

The warning gives the location where the variable is used and the location where it is defined. This helps you to determine why a particular definition is deprecated.

Example

```
extern int deprecated_var __attribute__((deprecated));
void foo()
{
    deprecated_var=1;
}
```

Compiling this example generates a warning:

```
armclang --target=aarch64-arm-none-eabi -c test_deprecated.c
test_deprecated.c:4:3: warning: 'deprecated_var' is deprecated [-Wdeprecated-declarations]
    deprecated_var=1;
    ^
test_deprecated.c:1:12: note: 'deprecated_var' declared here
extern int deprecated_var __attribute__((deprecated));
    ^
1 warning generated.
```

3.29 `__attribute__((packed))` variable attribute

The packed variable attribute specifies that a structure field has the smallest possible alignment. That is, one bit, unless you specify a larger value with the `aligned` attribute.

Example

```
struct
{
    char a;
    int b __attribute__((packed));
} Variable_Attributes_packed_0;
```

Related references

[3.27 `__attribute__\(\(aligned\)\)` variable attribute](#) on page 3-118.

3.30 `__attribute__((section("name")))` variable attribute

The `section` attribute specifies that a variable must be placed in a particular data section.

Normally, the ARM compiler places the data it generates in sections like `.data` and `.bss`. However, you might require additional data sections or you might want a variable to appear in a special section, for example, to map to special hardware.

If you use the `section` attribute, read-only variables are placed in RO data sections, writable variables are placed in RW data sections.

If the section name starts with `.bss.`, the variable is placed in a ZI section.

Example

```
/* in RO section */
const int descriptor[3] __attribute__((section ("descr"))) = { 1,2,3 };
/* in RW section */
long long rw_initialized[10] __attribute__((section ("INITIALIZED_RW"))) = {5};
/* in RW section */
long long rw[10] __attribute__((section ("RW")));
/* in ZI section */
int my_zi __attribute__((section (".bss.my_zi_section")));
```

3.31 `__attribute__((used))` variable attribute

This variable attribute informs the compiler that a static variable is to be retained in the object file, even if it is unreferenced.

Data marked with `__attribute__((used))` is tagged in the object file to avoid removal by linker unused section removal.

————— **Note** —————

Static functions can also be marked as used, by using `__attribute__((used))`.

Example

```
static int lose_this = 1;
static int keep_this __attribute__((used)) = 2; // retained in object file
static int keep_this_too __attribute__((used)) = 3; // retained in object file
```

3.32 `__attribute__((unused))` variable attribute

The compiler can warn if a variable is declared but is never referenced. The `__attribute__((unused))` attribute informs the compiler to expect an unused variable, and tells it not to issue a warning.

Note

By default, the compiler does not warn about unused variables. Use `-Wunused-variable` to enable this warning specifically, or use an encompassing `-W` value such as `-Weverything`.

The `__attribute__((unused))` attribute can be used to warn about most unused variables, but suppress warnings for a specific set of variables.

Example

```
void foo()
{
    static int aStatic =0;
    int aUnused __attribute__((unused));
    int bUnused;
    aStatic++;
}
```

When compiled with a suitable `-W` setting, the compiler warns that `bUnused` is declared but never referenced, but does not warn about `aUnused`:

```
armclang --target=aarch64-arm-none-eabi -c test_unused.c -Wall
test_unused.c:5:7: warning: unused variable 'bUnused' [-Wunused-variable]
    int bUnused;
        ^
1 warning generated.
```

Related references

[3.17 `__attribute__\(\(unused\)\)` function attribute](#) on page 3-108.

3.33 `__attribute__((weak))` variable attribute

Generates a weak symbol for a variable, rather than the default symbol.

```
extern int foo __attribute__((weak));
```

At link time, strong symbols override weak symbols. This attribute replaces a weak symbol with a strong symbol, by choosing a particular combination of object files to link.

3.34 `__attribute__((weakref("target")))` variable attribute

This variable attribute marks a variable declaration as an alias that does not by itself require a definition to be given for the target symbol.

Syntax

```
__attribute__((weakref("target")))
```

Where *target* is the target symbol.

Example

In the following example, *a* is assigned the value of *y* through a weak reference:

```
extern int y;
static int x __attribute__((weakref("y")));
void foo (void)
{
    int a = x;
    ...
}
```

Restrictions

This attribute can only be used on variables that are declared as `static`.

Chapter 4

Compiler-specific Pragmas

Summarizes the ARM compiler-specific pragmas that are extensions to the C and C++ Standards.

It contains the following sections:

- [4.1 `#pragma clang system_header` on page 4-127.](#)
- [4.2 `#pragma clang diagnostic` on page 4-128.](#)
- [4.3 `#pragma once` on page 4-130.](#)
- [4.4 `#pragma pack\(n\)` on page 4-131.](#)
- [4.5 `#pragma unroll\[\(n\)\]`, `#pragma unroll_completely` on page 4-133.](#)
- [4.6 `#pragma weak symbol`, `#pragma weak symbol1 = symbol2` on page 4-134.](#)

4.1 #pragma clang system_header

Causes subsequent declarations in the current file to be marked as if they occur in a system header file.

This pragma suppresses the warning messages that the file produces, from the point after which it is declared.

4.2 #pragma clang diagnostic

Pragmas let you suppress, enable, or change the severity of specific diagnostic messages from within your code.

For example, you can suppress a particular diagnostic message when compiling one specific function.

————— **Note** —————

Alternatively, you can use the command-line option, `-Wname`, to suppress or change the severity of messages, but the change applies for the entire compilation.

#pragma clang diagnostic ignored

```
#pragma clang diagnostic ignored "-Wname"
```

This pragma disables the diagnostic message specified by *name*.

#pragma clang diagnostic warning

```
#pragma clang diagnostic warning "-Wname"
```

This pragma sets the diagnostic message specified by *name* to warning severity.

#pragma clang diagnostic error

```
#pragma clang diagnostic error "-Wname"
```

This pragma sets the diagnostic message specified by *name* to error severity.

#pragma clang diagnostic fatal

```
#pragma clang diagnostic fatal "-Wname"
```

This pragma sets the diagnostic message specified by *name* to fatal error severity. Fatal error causes compilation to fail without processing the rest of the file.

#pragma clang diagnostic push, #pragma clang diagnostic pop

```
#pragma clang diagnostic push  
#pragma clang diagnostic pop
```

`#pragma clang diagnostic push` saves the current pragma diagnostic state so that it can be restored later.

`#pragma clang diagnostic pop` restores the diagnostic state that was previously saved using `#pragma clang diagnostic push`.

Examples of using pragmas to control diagnostics

The following example shows four identical functions, `foo1()`, `foo2()`, `foo3()`, and `foo4()`. All these functions would normally provoke diagnostic message `warning: multi-character character constant [-Wmultichar]` on the source lines `char c = (char) 'ab';`

Using pragmas, you can suppress or change the severity of these diagnostic messages for individual functions.

For `foo1()`, the current pragma diagnostic state is pushed to the stack and `#pragma clang diagnostic ignored` suppresses the message. The diagnostic message is then re-enabled by `#pragma clang diagnostic pop`.

For `foo2()`, the diagnostic message is not suppressed because the original pragma diagnostic state has been restored.

For `foo3()`, the message is initially suppressed by the preceding `#pragma clang diagnostic ignored "-Wmultichar"`, however, the message is then re-enabled as an error, using `#pragma clang diagnostic error "-Wmultichar"`. The compiler therefore reports an error in `foo3()`.

For `foo4()`, the pragma diagnostic state is restored to the state saved by the preceding `#pragma clang diagnostic push`. This state therefore includes `#pragma clang diagnostic ignored "-Wmultichar"` and therefore the compiler does not report a warning in `foo4()`.

```
#pragma clang diagnostic push
#pragma clang diagnostic ignored "-Wmultichar"
void foo1( void )
{
    /* Here we do not expect a diagnostic message, because it is suppressed by #pragma clang
    diagnostic ignored "-Wmultichar". */
    char c = (char) 'ab';
}
#pragma clang diagnostic pop

void foo2( void )
{
    /* Here we expect a warning, because the suppression was inside push and then the
    diagnostic message was restored by pop. */
    char c = (char) 'ab';
}

#pragma clang diagnostic ignored "-Wmultichar"
#pragma clang diagnostic push
void foo3( void )
{
    #pragma clang diagnostic error "-Wmultichar"
    /* Here, the diagnostic message is elevated to error severity. */
    char c = (char) 'ab';
}
#pragma clang diagnostic pop

void foo4( void )
{
    /* Here, there is no diagnostic message because the restored diagnostic state only
    includes the #pragma clang diagnostic ignored "-Wmultichar".
    It does not include the #pragma clang diagnostic error "-Wmultichar" that is within
    the push and pop pragmas. */
    char c = (char) 'ab';
}
```

Diagnostic messages use the pragma state that is present at the time they are generated. If you use pragmas to control a diagnostic message in your code, you must be aware of when, in the compilation process, that diagnostic message is generated.

If a diagnostic message for a function, `functionA`, is only generated after all the functions have been processed, then the compiler controls this diagnostic message using the pragma diagnostic state that is present after processing all the functions. This diagnostic state might be different from the diagnostic state immediately before or within the definition of `functionA`.

Related references

[1.55 -W on page 1-74.](#)

4.3 #pragma once

Enable the compiler to skip subsequent includes of that header file.

#pragma once is accepted for compatibility with other compilers, and enables you to use other forms of header guard coding. However, ARM recommends to use #ifndef and #define coding because this is more portable.

Example

The following example shows the placement of a #ifndef guard around the body of the file, with a #define of the guard variable after the #ifndef.

```
#ifndef FILE_H
#define FILE_H
#pragma once           // optional
... body of the header file ...
#endif
```

The #pragma once is marked as optional in this example. This is because the compiler recognizes the #ifndef header guard coding and skips subsequent includes even if #pragma once is absent.

4.4 #pragma pack(n)

This pragma aligns members of a structure to the minimum of n and their natural alignment. Packed objects are read and written using unaligned accesses.

————— **Note** —————

This pragma is a GNU compiler extension that the ARM compiler supports.

Syntax

```
#pragma pack(n)
```

Where:

n is the alignment in bytes, valid alignment values being 1, 2, 4 and 8.

Default

The default is #pragma pack(8).

Example

This example demonstrates how pack(2) aligns integer variable b to a 2-byte boundary.

```
typedef struct
{
    char a;
    int b;
} S;

#pragma pack(2)
typedef struct
{
    char a;
    int b;
} SP;

S var = { 0x11, 0x44444444 };
SP pvar = { 0x11, 0x44444444 };
```

The layout of S is:

0	1	2	3
a	padding		
4	5	6	7
b	b	b	b

Figure 4-1 Nonpacked structure S

The layout of SP is:

0	1	2	3
a	x	b	b
4	5		
b	b		

Figure 4-2 Packed structure SP

————— **Note** —————

In this layout, x denotes one byte of padding.

SP is a 6-byte structure. There is no padding after b.

4.5 #pragma unroll[(n)], #pragma unroll_completely

Instructs the compiler to unroll a loop by n iterations.

Syntax

```
#pragma unroll  
#pragma unroll_completely  
#pragma unroll  $n$   
#pragma unroll( $n$ )
```

Where:

n
is an optional value indicating the number of iterations to unroll.

Default

If you do not specify a value for n , the compiler attempts to fully unroll the loop. The compiler can only fully unroll loops where it can determine the number of iterations.

#pragma unroll_completely will not unroll a loop if the number of iterations is not known at compile time.

Usage

This pragma only has an effect with optimization level -O2 and higher.

When compiling with -O3, the compiler automatically unrolls loops where it is beneficial to do so. This pragma can be used to ask the compiler to unroll a loop that has not been unrolled automatically.

#pragma unroll[(n)] can be used immediately before a **for** loop, a **while** loop, or a **do ... while** loop.

Restrictions

This pragma is a *request* to the compiler to unroll a loop that has not been unrolled automatically. It does not guarantee that the loop is unrolled.

4.6 #pragma weak symbol, #pragma weak symbol1 = symbol2

This pragma is a language extension to mark symbols as weak or to define weak aliases of symbols.

Example

In the following example, `weak_fn` is declared as a weak alias of `__weak_fn`:

```
extern void weak_fn(int a);  
#pragma weak weak_fn = __weak_fn  
void __weak_fn(int a)  
{  
    ...  
}
```

Chapter 5

Other Compiler-specific Features

Summarizes compiler-specific features that are extensions to the C and C++ Standards, such as predefined macros.

It contains the following sections:

- *5.1 Predefined macros* on page 5-136.
- *5.2 Inline functions* on page 5-141.
- *5.3 Half-precision floating-point number format* on page 5-142.
- *5.4 TT instruction intrinsics* on page 5-143.
- *5.5 Non-secure function pointer intrinsics* on page 5-146.

5.1 Predefined macros

The ARM compiler predefines a number of macros. These macros provide information about toolchain version numbers and compiler options.

In general, the predefined macros generated by the compiler are compatible with those generated by GCC. See the GCC documentation for more information.

The following table lists ARM-specific macro names predefined by the ARM compiler for C and C++, together with a number of the most commonly used macro names. Where the value field is empty, the symbol is only defined.

————— **Note** —————

Use `armclang --target=triple -E -dm file` to see the values of predefined macros.

Macros beginning with `__ARM_` are defined by the *ARM C Language Extensions 2.0* (ACLE 2.0).

————— **Note** —————

`armclang` does not fully implement ACLE 2.0.

Table 5-1 Predefined macros

Name	Value	When defined
<code>__APCS_FPIC</code>	1	Set when you specify the <code>-fbare-metal-pie</code> option.
<code>__APCS_ROPI</code>	1	Set when you specify the <code>-fropi</code> option.
<code>__APCS_RWPI</code>	1	Set when you specify the <code>-frwpi</code> option.
<code>__ARM_64BIT_STATE</code>	1	Set for 64-bit targets only. Set to 1 if code is for 64-bit state.
<code>__ARM_ALIGN_MAX_STACK_P WR</code>	4	Set for 64-bit targets only. The log of the maximum alignment of the stack object.
<code>__ARM_ARCH</code>	<i>ver</i>	Specifies the version of the target architecture, for example 8.
<code>__ARM_ARCH_EXT_IDIV__</code>	1	Set for 32-bit targets only. Set to 1 if hardware divide instructions are available.
<code>__ARM_ARCH_ISA_A64</code>	1	Set for 64-bit targets only. Set to 1 if the target supports the A64 instruction set.
<code>__ARM_ARCH_PROFILE</code>	<i>ver</i>	Specifies the profile of the target architecture, for example 'A'.
<code>__ARM_BIG_ENDIAN</code>	-	Set if compiling for a big-endian target.
<code>__ARM_FEATURE_CLZ</code>	1	Set to 1 if the CLZ (count leading zeroes) instruction is supported in hardware.

Table 5-1 Predefined macros (continued)

Name	Value	When defined
__ARM_FEATURE_CMSE	<i>num</i>	Indicates the availability of the ARMv8-M Security Extensions related extensions: 0 The ARMv8-M TT instruction is not available. 1 The TT instruction is available. It is not part of ARMv8-M Security Extensions, but is closely related. 3 The ARMv8-M Security Extensions for secure executable files is available. This implies that the TT instruction is available. See 5.4 TT instruction intrinsics on page 5-143 for more information.
__ARM_FEATURE_CRC32	1	Set to 1 if the target has CRC extension.
__ARM_FEATURE_CRYPTO	1	Set to 1 if the target has cryptographic extension.
__ARM_FEATURE_DIRECTED_ROUNDING	1	Set to 1 if the directed rounding and conversion vector instructions are supported. Only available when __ARM_ARCH >= 8.
__ARM_FEATURE_DIV	1	Set for 64-bit targets only. Set to 1 if the target supports fused floating-point multiply-accumulate.
__ARM_FEATURE_DSP	1	Set for 32-bit targets only. Set to 1 if DSP instructions are supported. This feature also implies support for the Q flag. ————— Note ————— This macro is deprecated in ACLE 2.0 for A-profile. It is fully supported for M and R-profiles. —————
__ARM_FEATURE_FMA	1	Set to 1 if the target supports fused floating-point multiply-accumulate.
__ARM_FEATURE_NUMERIC_MAXMIN	1	Set to 1 if the target supports floating-point maximum and minimum instructions. Only available when __ARM_ARCH >= 8.
__ARM_FEATURE_QBIT	1	Set for 32-bit targets only. Set to 1 if the Q (saturation) flag exists. ————— Note ————— This macro is deprecated in ACLE 2.0 for A-profile. —————
__ARM_FEATURE_SAT	1	Set for 32-bit targets only. Set to 1 if the SSAT and USAT instructions are supported. This feature also implies support for the Q flag. ————— Note ————— This macro is deprecated in ACLE 2.0 for A-profile. —————

Table 5-1 Predefined macros (continued)

Name	Value	When defined
<code>__ARM_FEATURE_SIMD32</code>	1	Set for 32-bit targets only. Set to 1 if the target supports 32-bit SIMD instructions. ————— Note ————— This macro is deprecated in ACLE 2.0 for A-profile, use NEON intrinsics instead.
<code>__ARM_FEATURE_UNALIGNED</code>	1	Set to 1 if the target supports unaligned access in hardware.
<code>__ARM_FP</code>	<i>val</i>	Set if hardware floating-point is available. Permitted values include: <ul style="list-style-type: none"> • <code>0x2</code> for half-support • <code>0x4</code> for single-support • <code>0x8</code> for double-support
<code>__ARM_FP_FAST</code>	1	Set for 64-bit targets only. Set if <code>-ffast-math</code> is specified.
<code>__ARM_FP_FENV_ROUNDING</code>	1	Set for 64-bit targets only. Set to 1 if the implementation allows rounding to be configured at runtime using the standard C <code>fesetround()</code> function.
<code>__ARM_NEON</code>	-	Defined when the compiler is targeting an architecture or processor with Advanced SIMD available. Use this macro to conditionally include <code>arm_neon.h</code> , to permit the use of Advanced SIMD intrinsics.
<code>__ARM_NEON_FP</code>	7	Set when Advanced SIMD floating-point vector instructions are available.
<code>__ARM_PCS</code>	1	Set for 32-bit targets only. Set to 1 if the default procedure calling standard for the translation unit conforms to the base PCS.
<code>__ARM_PCS_VFP</code>	1	Set for 32-bit targets only. Set to 1 if <code>-mfloat-abi=hard</code> .
<code>__ARM_SIZEOF_MINIMAL_ENUM</code>	<i>value</i>	Specifies the size of the minimal enumeration type. Set to either 1 or 4 depending on whether <code>-fshort-enums</code> is specified or not.
<code>__ARM_SIZEOF_WCHAR_T</code>	<i>value</i>	Specifies the size of <code>wchar</code> in bytes. Set to 2 if <code>-fshort-wchar</code> is specified, or 4 if <code>-fno-short-wchar</code> is specified. ————— Note ————— The default size is 4, because <code>-fno-short-wchar</code> is set by default.

Table 5-1 Predefined macros (continued)

Name	Value	When defined
<code>__ARMCOMPILER_VERSION</code>	<i>Mmmuuxx</i>	Always set. Specifies the version number of the compiler, <code>armclang</code> . The format is <i>Mmmuuxx</i> , where: <ul style="list-style-type: none"> • <i>M</i> is the major version number, 6. • <i>mm</i> is the minor version number. • <i>uu</i> is the update number. • <i>xx</i> is reserved for ARM internal use. You can ignore this for the purposes of checking whether the current release is a specific version or within a range of versions. <p>For example, version 6.2 update 1 is displayed as <code>6020154</code>, where 54 is a number for ARM internal use.</p>
<code>__ARMCC_VERSION</code>	<i>Mmmuuxx</i>	A synonym for <code>__ARMCOMPILER_VERSION</code> .
<code>__arm__</code>	1	Defined when targeting the A32 or T32 instruction sets with AArch32 targets, for example <code>--target=arm-arm-none-eabi</code> . See also <code>__aarch64__</code> .
<code>__aarch64__</code>	1	Defined when targeting the A64 instruction set with <code>--target=aarch64-arm-none-eabi</code> . See also <code>__arm__</code> .
<code>__cplusplus</code>	<i>ver</i>	Defined when compiling C++ code, and set to a value that identifies the targeted C++ standard. For example, when compiling with <code>-xc++ -std=gnu++98</code> , the compiler sets this macro to <code>199711L</code> . You can use the <code>__cplusplus</code> macro to test whether a file was compiled by a C compiler or a C++ compiler.
<code>__CHAR_UNSIGNED__</code>	1	Defined if and only if <code>char</code> is an unsigned type.
<code>__EXCEPTIONS</code>	1	Defined when compiling a C++ source file with exceptions enabled.
<code>__GNUC__</code>	<i>ver</i>	Always set. It is an integer that shows the current major version of the compatible GCC version.
<code>__GNUC_MINOR__</code>	<i>ver</i>	Always set. It is an integer that shows the current minor version of the compatible GCC version.
<code>__INTMAX_TYPE__</code>	<i>type</i>	Always set. Defines the correct underlying type for the <code>intmax_t</code> typedef.
<code>__NO_INLINE__</code>	1	Defined if no functions have been inlined. The macro is always defined with optimization level <code>-O0</code> or if the <code>-fno-inline</code> option is specified.
<code>__OPTIMIZE__</code>	1	Defined when <code>-O1</code> , <code>-O2</code> , <code>-O3</code> , <code>-Ofast</code> , <code>-Oz</code> , or <code>-Os</code> is specified.
<code>__OPTIMIZE_SIZE__</code>	1	Defined when <code>-Os</code> or <code>-Oz</code> is specified.
<code>__PTRDIFF_TYPE__</code>	<i>type</i>	Always set. Defines the correct underlying type for the <code>ptrdiff_t</code> typedef.
<code>__SIZE_TYPE__</code>	<i>type</i>	Always set. Defines the correct underlying type for the <code>size_t</code> typedef.
<code>__SOFTFP__</code>	1	Set for 32-bit targets only. Set to 0 otherwise.
<code>__STDC__</code>	1	Always set. Signifies that the compiler conforms to ISO Standard C.

Table 5-1 Predefined macros (continued)

Name	Value	When defined
<code>__STRICT_ANSI__</code>	1	Defined if you specify the <code>--ansi</code> option or specify one of the <code>--std=c*</code> options .
<code>__thumb__</code>	1	Defined if you specify the <code>-mthumb</code> option.
<code>__UINTMAX_TYPE__</code>	<i>type</i>	Always set. Defines the correct underlying type for the <code>uintmax_t</code> typedef.
<code>__VERSION__</code>	<i>ver</i>	Always set. A string that shows the underlying Clang version.
<code>__WCHAR_TYPE__</code>	<i>type</i>	Always set. Defines the correct underlying type for the <code>wchar_t</code> typedef.
<code>__WINT_TYPE__</code>	<i>type</i>	Always set. Defines the correct underlying type for the <code>wint_t</code> typedef.

Related references

- [1.53 `--version_number` on page 1-72.](#)
- [1.47 `-std` on page 1-66.](#)
- [1.45 `-O` on page 1-64.](#)
- [1.48 `--target` on page 1-67.](#)
- [1.34 `-marm` on page 1-51.](#)
- [1.43 `-mthumb` on page 1-62.](#)

5.2 Inline functions

Inline functions offer a trade-off between code size and performance. By default, the compiler decides for itself whether to inline functions.

With regards to optimization, by default the compiler optimizes for performance with respect to time. If the compiler decides to inline a function, it makes sure to avoid large code growth. When compiling with respect to restraining code size, through use of `-Oz` or `-Os`, the compiler makes sensible decisions about inlining, aiming to keep code size to a minimum.

In most circumstances, the decision to inline a particular function is best left to the compiler. Qualifying a function with the `__inline__` or `inline` keywords suggests to the compiler that it inlines that function, but the final decision rests with the compiler. Qualifying a function with `__attribute__((always_inline))` forces the compiler to inline the function.

The linker is able to apply some degree of function inlining to functions that are very short.

Note

The default semantic rules for C-source code follow C99 rules. For inlining, it means that when you suggest a function is inlined, the compiler expects to find another, non-qualified, version of the function elsewhere in the code, to use when it decides not to inline. If the compiler cannot find the non-qualified version, it fails with the following error:

```
"Error: L6218E: Undefined symbol <symbol> (referred from <file>)".
```

To avoid this problem, there are several options:

- Provide an equivalent, non-qualified version of the function.
- Change the qualifier to **static inline**.
- Remove the **inline** keyword, since it is only acting as a suggestion.
- Compile your program using the GNU C90 dialect, using the `-std=gnu90` option.

Related references

[2.8 `__inline` on page 2-88.](#)

[1.47 `-std` on page 1-66.](#)

[3.2 `__attribute__\(\(always_inline\)\)` function attribute on page 3-93.](#)

5.3 Half-precision floating-point number format

ARM Compiler supports the half-precision floating-point `__fp16` type.

Half-precision is a floating-point format that occupies 16 bits. Architectures that support half-precision floating-point numbers include:

- The ARMv8 architecture.
- The ARMv7 Fpv5 architecture.
- The ARMv7 VFPv4 architecture.
- The ARMv7 VFPv3 architecture (as an optional extension).

If the target hardware does not support half-precision floating-point numbers, the compiler uses the floating-point library `fp16lib` to provide software support for half-precision.

————— **Note** —————

The `__fp16` type is a storage format only. For purposes of arithmetic and other operations, `__fp16` values in C or C++ expressions are automatically promoted to `float`.

Half-precision floating-point format

ARM Compiler uses the half-precision binary floating-point format defined by IEEE 754r, a revision to the IEEE 754 standard:

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
S	E					T									

Figure 5-1 IEEE half-precision floating-point format

Where:

```
S (bit[15]):      Sign bit
E (bits[14:10]): Biased exponent
T (bits[9:0]):   Mantissa.
```

The meanings of these fields are as follows:

```
IF E==31:
  IF T==0: Value = Signed infinity
  IF T!=0: Value = Nan
           T[9] determines Quiet or Signalling:
           0: Quiet NaN
           1: Signalling NaN
IF 0<E<31:
  Value = (-1)^S x 2^(E-15) x (1 + (2^(-10) x T))
IF E==0:
  IF T==0: Value = Signed zero
  IF T!=0: Value = (-1)^S x 2^(-14) x (0 + (2^(-10) x T))
```

————— **Note** —————

See the *ARM C Language Extensions* for more information.

Related information

[ARM C Language Extensions.](#)

5.4 TT instruction intrinsics

Intrinsics are available to support TT instructions depending on the value of the predefined macro `__ARM_FEATURE_CMSE`.

TT intrinsics

The following table describes the TT intrinsics that are available when `__ARM_FEATURE_CMSE` is set to either 1 or 3:

Intrinsic	Description
<code>cmse_address_info_t cmse_TT(void *p)</code>	Generates a TT instruction.
<code>cmse_address_info_t cmse_TT_fptr(p)</code>	Generates a TT instruction. The argument <code>p</code> can be any function pointer type.
<code>cmse_address_info_t cmse_TTT(void *p)</code>	Generates a TT instruction with the T flag.
<code>cmse_address_info_t cmse_TTT_fptr(p)</code>	Generates a TT instruction with the T flag. The argument <code>p</code> can be any function pointer type.

When `__ARM_BIG_ENDIAN` is not set, the result of the intrinsics is returned in the following C type:

```
typedef union {
    struct cmse_address_info {
        unsigned mpu_region:8;
        unsigned :8;
        unsigned mpu_region_valid:1;
        unsigned :1;
        unsigned read_ok:1;
        unsigned readwrite_ok:1;
        unsigned :12;
    } flags;
    unsigned value;
} cmse_address_info_t;
```

When `__ARM_BIG_ENDIAN` is set, the bit-fields in the type are reversed such that they have the same bit-offset as little-endian systems following the rules specified by *Procedure Call Standard for the ARM® Architecture*.

TT intrinsics for ARMv8-M Security Extensions

The following table describes the TT intrinsics for ARMv8-M Security Extensions that are available when `__ARM_FEATURE_CMSE` is set to 3:

Intrinsic	Description
<code>cmse_address_info_t cmse_TTA(void *p)</code>	Generates a TT instruction with the A flag.
<code>cmse_address_info_t cmse_TTA_fptr(p)</code>	Generates a TT instruction with the A flag. The argument <code>p</code> can be any function pointer type.
<code>cmse_address_info_t cmse_TTAT(void *p)</code>	Generates a TT instruction with the T and A flag.
<code>cmse_address_info_t cmse_TTAT_fptr(p)</code>	Generates a TT instruction with the T and A flag. The argument <code>p</code> can be any function pointer type.

When `__ARM_BIG_ENDIAN` is not set, the result of the intrinsics is returned in the following C type:

```
typedef union {
    struct cmse_address_info {
```

```

    unsigned mpu_region:8;
    unsigned sau_region:8;
    unsigned mpu_region_valid:1;
    unsigned sau_region_valid:1;
    unsigned read_ok:1;
    unsigned readwrite_ok:1;
    unsigned nonsecure_read_ok:1;
    unsigned nonsecure_readwrite_ok:1;
    unsigned secure:1;
    unsigned idau_region_valid:1;
    unsigned idau_region:8;
} flags;
    unsigned value;
} cmse_address_info_t;

```

When `__ARM_BIG_ENDIAN` is set, the bit-fields in the type are reversed such that they have the same bit-offset as little-endian systems following the rules specified by *Procedure Call Standard for the ARM® Architecture*.

In the Secure state, the TT instruction returns the *Security Attribute Unit (SAU)* and *Implementation Defined Attribute Unit (IDAU)* configuration and recognizes the A flag.

Address range check intrinsic

Checking the result of the TT instruction on an address range is essential for programming in C. It is needed to check permissions on objects larger than a byte. You can use the address range check intrinsic to perform permission checks on C objects.

The syntax of this intrinsic is:

```
void *cmse_check_address_range(void *p, size_t size, int flags)
```

The intrinsic checks the address range from `p` to `p + size - 1`.

The address range check fails if `p + size - 1 < p`.

Some SAU, IDAU and MPU configurations block the efficient implementation of an address range check. This intrinsic operates under the assumption that the configuration of the SAU, IDAU, and MPU is constrained as follows:

- An object is allocated in a single region.
- A stack is allocated in a single region.

These points imply that a region does not overlap other regions.

The TT instruction returns an SAU, IDAU and MPU region number. When the region numbers of the start and end of the address range match, the complete range is contained in one SAU, IDAU, and MPU region. In this case two TT instructions are executed to check the address range.

Regions are aligned at 32-byte boundaries. If the address range fits in one 32-byte address line, a single TT instruction suffices. This is the case when the following constraint holds:

$$(p \text{ mod } 32) + \text{size} \leq 32$$

The address range check intrinsic fails if the range crosses any MPU region boundary.

The `flags` parameter of the address range check consists of a set of values defined by the macros shown in the following table:

Macro	Value	Description
(No macro)	0	The TT instruction without any flag is used to retrieve the permissions of an address, returned in a <code>cmse_address_info_t</code> structure.
CMSE_MPU_UNPRIV	4	Sets the T flag on the TT instruction used to retrieve the permissions of an address. Retrieves the unprivileged mode access permissions.
CMSE_MPU_READWRITE	1	Checks if the permissions have the <code>readwrite_ok</code> field set.
CMSE_MPU_READ	8	Checks if the permissions have the <code>read_ok</code> field set.

The address range check intrinsic returns `p` on a successful check, and `NULL` on a failed check. The check fails if any other value is returned that is not one of those listed in the table, or is not a combination of those listed.

ARM recommends that you use the returned pointer to access the checked memory range. This generates a data dependency between the checked memory and all its subsequent accesses and prevents these accesses from being scheduled before the check.

The following intrinsic is defined when the `__ARM_FEATURE_CMSE` macro is set to 1:

Intrinsic	Description
<code>cmse_check_pointed_object(p, f)</code>	Returns the same value as <code>cmse_check_address_range(p, sizeof(*p), f)</code>

ARM recommends that the return type of this intrinsic is identical to the type of parameter `p`.

Address range check intrinsic for ARMv8-M Security Extensions

The semantics of the intrinsic `cmse_check_address_range()` are extended to handle the extra flag and fields introduced by the ARMv8-M Security Extensions.

The address range check fails if the range crosses any SAU or IDAU region boundary.

If the macro `__ARM_FEATURE_CMSE` is set to 3, the values accepted by the `flags` parameter are extended with the values defined in the following table:

Macro	Value	Description
CMSE_AU_NONSECURE	2	Checks if the permissions have the <code>secure</code> field unset.
CMSE_MPU_NONSECURE	16	Sets the A flag on the TT instruction used to retrieve the permissions of an address.
CMSE_NONSECURE	18	Combination of <code>CMSE_AU_NONSECURE</code> and <code>CMSE_MPU_NONSECURE</code> .

Related references

[5.1 Predefined macros on page 5-136.](#)

5.5 Non-secure function pointer intrinsics

A non-secure function pointer is a function pointer that has its LSB unset.

The following table describes the non-secure function pointer intrinsics that are available when `__ARM_FEATURE_CMSE` is set to 3:

Intrinsic	Description
<code>cmse_nsfptr_create(p)</code>	Returns the value of <code>p</code> with its LSB cleared. The argument <code>p</code> can be any function pointer type. ARM recommends that the return type of this intrinsic is identical to the type of its argument.
<code>cmse_is_nsfptr(p)</code>	Returns non-zero if <code>p</code> has LSB unset, zero otherwise. The argument <code>p</code> can be any function pointer type.

Example

The following example shows how to use these intrinsics:

```
#include <arm_cmse.h>
typedef void __attribute__((cmse_nonsecure_call)) nsfunc(void);
void default_callback(void) { ... }

// fp can point to a secure function or a non-secure function
nsfunc *fp = (nsfunc *) default_callback;           // secure function pointer

void __attribute__((cmse_nonsecure_entry)) entry(nsfunc *callback) {
    fp = cmse_nsfptr_create(callback); // non-secure function pointer
}

void call_callback(void) {
    if (cmse_is_nsfptr(fp)) fp();           // non-secure function call
    else ((void (*)(void)) fp)();         // normal function call
}
```

Related references

[3.3 `__attribute__\(\(cmse_nonsecure_call\)\)` function attribute](#) on page 3-94.

[3.4 `__attribute__\(\(cmse_nonsecure_entry\)\)` function attribute](#) on page 3-95.

Related information

Building Secure and Non-secure Images Using ARMv8-M Security Extensions.